

Operating Manual



Designa CONNECT PAY 500 COINLESS

Automatic Pay Station for Coinless Payments

Internal technical name (UL): PAY COINLESS

Series: CONNECT

Version: 1.30 US

Identity no.: DOCUS03060

Original Operating Manual

DESIGNA US Headquarters

5050 Westway Park Blvd #175
Houston, Texas 77041

(713) 776-8324
sales.usa@designa.com

Designa Verkehrsleittechnik GmbH

Faluner Weg 3
24109 Kiel
Germany

+49 (0)431 5336 0
info@designa.com
designa.com

COPYRIGHT

© 2026 Designa Verkehrsleittechnik GmbH
All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Designa Verkehrsleittechnik GmbH.

COPYRIGHT

© 2026 Designa Verkehrsleittechnik GmbH
Urheberrechtlich geschützt. Jede Verwertung außerhalb der engen Grenzen des Urheberrechtsgesetzes ist ohne Zustimmung der Designa Verkehrsleittechnik GmbH unzulässig. Dies gilt insbesondere für Vervielfältigungen, Übersetzungen, Mikroverfilmungen und die Einspeicherung und Verarbeitung in elektronischen Systemen.

1	GENERAL	7
1.1	Information regarding the operating instructions	7
1.2	Explanation of signal words and symbols	9
1.3	Consumables, spare parts and accessories	10
1.4	Customer service & service	10
2	SAFETY	11
2.1	Intended use	11
2.2	Non-intended use	12
2.3	Safety on site	13
2.4	Specialists and operating personnel	15
2.5	Personal protective equipment	16
2.6	Occupational safety and special dangers	16
2.6.1	Product safety labels on the device	17
2.6.2	Safety messages and operation safety	19
2.7	Safety standard of device	21
3	IDENTIFICATION	22
3.1	Type plate	22
4	TECHNICAL DATA	23
5	DEVICE DESCRIPTION	25
5.1	General design	25
5.2	Components on the door and their functions	26
5.2.1	Camera (optional)	27
5.2.2	Banknote recycler insertion slot	27
5.2.3	Credit card reader/PINPad/NFC (optional)	27
5.2.4	Locking system	27
5.2.5	Receipt printer	28
5.2.6	Illuminated frame (optional)	28
5.2.7	2D Barcode scanner (optional)	28
5.2.8	RFID (optional)	28
5.2.9	Reading device insertion slot	28
5.2.10	Full-touch display	28
5.2.11	Intercom device	30
5.2.12	Door switch	30
5.2.13	Door fixture	31
5.2.14	Hearing induction loop (optional)	31
5.3	Components inside the device and their functions	32
5.3.1	TCC (Type LCC)	33
5.3.2	Terminal block -X2: Intercom system and Ethernet connection	33
5.3.3	Terminal block -X3: 3A automatic circuit breakers (secondary side)	34
5.3.4	Power supply unit	35
5.3.5	Power distribution box	36
5.3.6	Terminal block -X0: Voltage connection	38
5.3.7	Fan and thermostat (optional)	38
5.3.8	Banknote recycler (optional)	39
5.3.9	Multicon	39

5.3.10	Heater and thermostat (optional).....	39
5.3.11	Ticket storage receptacle lost ticket (optional)	40
5.3.12	I/O interface (optional)	40
5.3.13	Collecting box value checks (optional).....	40
5.3.14	Alarm siren (optional)	41
5.3.15	Network components (optional).....	41
6	TRANSPORT AND STORAGE	42
6.1	Safety.....	42
6.2	Transport inspection	43
6.3	Transport	43
6.4	Storage	43
7	INSTALLATION	44
7.1	Safety.....	44
7.2	Installation preparation	45
7.3	Different mounting possibilities	47
7.3.1	Preparation with the mounting kit	47
7.4	Unpacking the device	48
7.5	Installing the device.....	49
8	CONNECTION	50
8.1	Safety.....	50
8.2	Power supply connection (terminal block -X0).....	52
8.3	Ethernet Connection (terminal block -X2 or additional mounting rail)	54
8.4	Connection intercom device (terminal block -X2 or VoIP).....	56
9	TESTING IN ACCORDANCE WITH ACCIDENT PREVENTION REGULATIONS	58
9.1	Initial device testing	58
9.2	Measuring points for the protective grounding conductor test.....	59
9.3	Measuring points for the fault loop impedance measurement	60
10	COMMISSIONING	61
11	FUNCTION CHECK	62
11.1	Safety.....	62
11.2	Check condition of device.....	62
11.3	Induce general function and check.....	62
11.4	Checking the payment and sorting functions.....	63
11.5	Prepare optional lost ticket.....	64
11.6	Check other device components.....	64
12	OPERATION	65
12.1	Payment of transient tickets	66
12.2	Evaluation of validations.....	68
12.3	Renewal of monthly cards.....	69
12.4	Charging value cards.....	70

12.5	Residual value disbursement of value cards.....	71
12.6	Additional payment of monthly or value cards	72
12.7	Additional payment of a prebooking (optional).....	73
12.8	PAY BY PLATE (optional)	73
12.9	PARK SHOP (optional)	74
12.10	Issue receipt	74
12.11	Issue of lost tickets (optional)	75
12.12	Issue individual parking permissions at the device (optional).....	76
12.13	Requesting card parameters	76
12.14	Trigger functions with function cards	77
12.15	Recognize error status	77
13	FILLING AND EMPTYING	78
13.1	Safety	78
13.2	Filling and emptying using function cards	78
13.2.1	Fill change unit (function card 05: Fill hoppers)	78
13.2.2	Empty change unit (function card 06 Empty hoppers).....	81
13.2.3	Remove banknote cassette (function card 12 APS alarm ON/ OFF)	82
13.3	Tickets and rolls.....	83
13.3.1	Filling Supply of tickets Lost Ticket (optional)	83
13.3.2	Value and time checks (optional).....	83
13.3.3	Replacing the receipt roll.....	83
14	MAINTENANCE.....	84
14.1	Safety	84
14.2	Cleaning items	86
14.3	Maintenance Schedule	86
14.3.1	General maintenance	87
14.3.2	Maintenance of modules	90
14.4	Checking safety labels	95
14.5	Cleaning the housing	95
14.5.1	Cleaning the housing exterior	95
14.5.2	Cleaning the Plexiglas® front panel.....	95
14.5.3	Clean inside the device	96
14.5.4	Checking the door switch	96
14.6	Cleaning display	96
14.7	Checking speech contact	96
14.8	Checking and adjusting the heater with thermostat	96
14.9	Checking and adjusting the fan with thermostat	97
14.10	Cleaning the barcode scanner	97
14.11	Cleaning PIN pad	97
14.11.1	Cleaning chip contacts using cleaning ticket and slider.....	97
14.11.2	Cleaning chip and magnetic track reader using a cleaning ticket.....	97
15	MODULE TCC (TYPE LCC).....	98
15.1	Functioning	98

15.2	Design and operation	98
15.3	Carrying out maintenance work at LCC.....	102
15.3.1	Safety	102
15.3.2	Replacing the battery	103
16	MODULE I/O INTERFACE MIDI-P-USI (12 I/O) (OPTIONAL)	104
16.1	Functioning.....	104
16.2	Design and operation	104
16.3	Assignment of contacts	106
17	MODULE MULTICON MC 120.....	108
17.1	Functioning.....	108
17.2	Design and operation	108
17.3	Filling and emptying services for the Multicon MC 120.....	112
17.3.1	Safety	112
17.3.2	Insert new ticket belt.....	112
17.4	Maintenance services for the Multicon MC 120	113
17.4.1	Safety	113
17.4.2	Cleaning the ticket transport routes and (write-/) read unit with DESIGNA cleaning card.....	115
17.4.3	Cleaning the ticket transport routes, write (/read) unit, cutter and ticket printer .	115
17.4.4	Check ticket imprint	116
17.4.5	Checking and adjusting the ticket cutting position	117
17.4.6	Checking all connecting cables are inserted correctly	118
17.4.7	Checking the correct position of the Multicon insertion slot	118
17.5	Error analysis	119
17.6	Troubleshooting.....	120
18	MULTICON MC BARCODE MODULE.....	122
18.1	Functioning.....	122
18.2	Design and operation	122
18.3	Filling and emptying services for the Multicon MC Barcode	124
18.3.1	Safety	124
18.3.2	Insert new ticket belt.....	125
18.4	Maintenance services for the Multicon MC Barcode.....	125
18.4.1	Safety	125
18.4.2	Cleaning Ticket Transport Routes, Barcode Card Reader, Ticket Printer incl. Cutter	128
18.4.3	Checking all connecting cables are inserted correctly	128
18.4.4	Checking the correct position of the Multicon insertion slot	128
18.5	Error analysis	129
19	MODULE RECEIPT PRINTER.....	130
19.1	Functioning.....	130
19.2	Design and operation	130
19.3	Optional receipt printer	132
19.4	Filling and emptying services for the receipt printer	132
19.4.1	Safety	132

	19.4.2	Insert new paper roll.....	133
	19.4.3	Issue test printout.....	133
19.5		Maintenance services for the receipt printer	134
	19.5.1	Safety	134
	19.5.2	Cleaning the receipt printer with compressed air.....	136
	19.5.3	Cleaning the receipt printer using cleaning strips	136
20		MODULE BANKNOTE RECYCLER BNR CASHCODE (OPTIONAL).....	137
20.1		Functioning	137
20.2		Design and operation	138
20.3		Filling and emptying the banknote recycler BNR CASHCODE.....	141
	20.3.1	Safety	141
	20.3.2	Removing and opening the banknote cassette	141
20.4		Carrying out maintenance work at the banknote recycler BNR CASHCODE.....	142
	20.4.1	Safety	142
	20.4.2	Cleaning off outer soiling.....	143
	20.4.3	Cleaning the banknote reader.....	144
	20.4.4	Checking and cleaning the chassis.....	145
	20.4.5	Cleaning the banknote cassette.....	150
	20.4.6	Checking all connecting cables are inserted correctly	150
20.5		Troubleshooting.....	151
	20.5.1	Safety	151
	20.5.2	Eliminating a jam	151
21		MODULE BANKNOTE RECYCLER BNR MEI (OPTIONAL).....	153
21.1		Functioning	153
21.2		Design and operation	153
21.3		Filling and emptying the banknote recycler BNR MEI	156
	21.3.1	Safety	156
	21.3.2	Unlocking and locking the locking mechanism	156
	21.3.3	Removing and opening the banknote cassette	157
	21.3.4	Removing and opening the loader cassette.....	158
	21.3.5	Loader cassette: Filling with banknotes	160
21.4		Carrying out maintenance work at the banknote recycler BNR MEI	162
	21.4.1	Safety	162
	21.4.2	Cleaning off outer soiling.....	164
	21.4.3	Cleaning the main module	164
	21.4.4	Cleaning the banknote cassette.....	167
	21.4.5	Cleaning the loader cassette.....	167
	21.4.6	Checking all connecting cables are inserted correctly	167
21.5		Troubleshooting.....	168
	21.5.1	Safety	168
	21.5.2	Eliminating a jam	169
	21.5.3	Preparing the recycling cassettes for transportation.....	172
22		RFID (HANDS-FREE IDENTIFICATION) (OPTIONAL)	173
22.1		EasyMove	174
	22.1.1	EasyMove antenna (EMA)	174
	22.1.2	EasyMove cards.....	174

22.2	Short range RFID systems: Legic/ Mifare/ ISO 15693 Proximity Systems	176
22.2.1	RFID cards	176
22.2.2	System-specific antennas	176
22.2.3	System-specific card reading devices	177
22.3	Instructions for RFID cards.....	177
23	DECOMMISSIONING, DISASSEMBLY AND DISPOSAL.....	178
23.1	Safety.....	178
23.2	Decommissioning and disassembly	179
23.3	Disposal	179
24	GLOSSARY	180
25	INDEX	193
26	VERSION OVERVIEW	196

1 General

1.1 Information regarding the operating instructions

In this operating manual, instead of the product name PAY 500 COINLESS, the internal technical designation PAY COINLESS is used.

The device PAY COINLESS has been developed for the Designa PARKING MANAGEMENT SOLUTIONS and left our factory after passing stringent safety and reliability criteria. Nevertheless, correct installation and operation are required for safe operation without risk to people and for a long service life.

These operating instructions must therefore be read in its entirety and all safety information and instructions contained therein must be complied with.

These operating instructions are submitted to the Facility Operator and address operator and electrical technicians (skilled and Designa trained electrical technicians) of the system.

- ⇒ Read the operating instructions carefully before starting any work.
- ⇒ Pay careful attention to the safety instructions.
- ⇒ Use the table of contents to find the sections which are important for your daily operating tasks.
- ⇒ Keep the operating instructions for later use, well accessible to the personnel at all times.
- ⇒ When passing the device on to third parties, the operating instructions must also be handed over.

Note on gender equality in language

All personal designations used in this operating manual apply equally to all genders. To improve readability, gender-specific language has been avoided. All references to persons are intended to be understood as gender-neutral.

Digital operating instructions

The original operating instructions are available in digital form. It contains the necessary information for the installation, commissioning, operation, maintenance, servicing and disposal of the device described in these instructions.

The operating instructions can be downloaded via a QR code located inside the device. The operating instructions are also available in the Designa eCademy at <https://designa-ecademy.openolat.com/>.

All relevant information from the operating instructions must be available to the relevant personnel for each life cycle. The operator is responsible for providing this information.



- Save the instructions separately and print them out to ensure that they are available in case of data loss.

DESIGNA eCademy



Discover information about courses, further documents, and all the latest news in the DESIGNA eCademy.

After registering you can download the operating instructions and further documents in the electronic read-only media format.

Printed operating instructions

Please contact Designa for the printed operating instructions.

For the address, see invoice, delivery note or imprint.

1.2 Explanation of signal words and symbols

Safety messages

Following signal words are used to identify the safety messages and property damage messages:

Pay careful attention to the safety messages in order to prevent accidents as well as bodily injuries and property damage.

DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a potentially harmful situation which, if not avoided, could lead to property damage.

Hints and recommendations



... highlights useful hints and recommendations as well as information for an efficient and trouble-free operation.



... highlights valid information for the barcode technology.

Functional symbols and designations

The following symbols and designations are used in the instructions:

–	Instructions specified in warnings
■	List
1.	Step-by-step instructions
⇒	Instructions without fixed sequence
➤	Result of the action
bold	Terms in bold are explained in the glossary
<i>italic</i>	Italic text refers to a component in a figure or a different chapter of these instructions or related instructions.

1.3 Consumables, spare parts and accessories

Designa offers comprehensive consumables, spare parts and accessories for the device PAY COINLESS.

i These operating instructions mention some consumables. Please refer to your spare parts catalogue and consumables catalogue for further consumables, accessories and spare parts.

1.4 Customer service & service

Your Designa Service is available to you for technical information

For the address, see invoice, delivery note or imprint.

i In order to enable fast handling note the data of the type plate such as device type, order number, identity number, serial number, etc. before calling.

2 Safety

2.1 Intended use

The device PAY COINLESS is part of the ABACUS series.

The ABACUS system is an integrated system that controls the entrance/exit, time and cost of parking in protected areas such as parking lots, airports or similar places. The ABACUS automated parking system is designed to give a service (parking) in exchange for money.

All devices of ABACUS are intended for access control in Class II (general commercial), Class III (limited industrial) and Class IV (restricted) vehicular access areas.

The ABACUS devices can be used in conjunction with a computer system (operating computer) UL listed or other series of the ABACUS system that are UL listed or ABACUS low voltage units.

As part of the ABACUS system the PAY COINLESS serves as an automatic pay station system: It is possible to pay the incurred parking fee, e.g. for a **transient ticket**, in cash with banknotes or cash-free (debit cards or credit cards or other payment medium valid for the system, e.g. **value checks**).

After paying the parking fee (e.g. for a transient ticket) the customer's ticket is coded with an **exit authorization** and the customer can then leave the parking facility, e.g. at an exit control terminal where the exit authorization is checked.

The device is qualified for either indoor, protected or outdoor locations.

Only original DESIGNA spare parts and consumables should be used.

The DESIGNA system can be equipped with magnetic stripe or barcode technology.



Some functions have limited application for barcode technology (e.g. **types of item**) or are not always capable of functioning **offline**. These limitations are described in more detail in the respective sections.

Barrier-free design

The device has been designed to meet disabled access requirements in publicly accessible buildings (2010 ADA Standards for Accessible Design).

The positioning of controls ensures excellent access and simple operation for wheelchair users and other persons with disabilities and physical limitations.

Please pay attention to country-specific regulations.

The device PAY COINLESS can be equipped with a hearing induction loop, which enables hearing aid users to hear more clearly in areas of high ambient noise.

2.2 Non-intended use

Non-intended use



WARNING

Risk of injury from non-intended use!

Every non-intended use can cause severe or lethal injuries.

- Only use the device PAY COINLESS as intended.
- Read the operating manual carefully and pay careful attention to the safety instructions.

The ABACUS system and thus the PAY COINLESS are **not** intended for Class I (residential area) use and pedestrian access.

The device PAY COINLESS must not be used in explosive environments.

Use of non-approved spare parts and accessories is prohibited.

Modifications or changes to the device are prohibited.

Use as a storage area is not permitted.

Use of unsuitable media (consumer goods, cleaning agents) is not permitted.

Deployment of non-trained personnel is prohibited.

All uses not described as intended use are prohibited and are non-intended use.

The manufacturer shall refuse to accept liability and withdraw warranty if the instructions are not followed and if the device is used incorrectly or for a purpose for which it was not intended.

2.3 Safety on site



Fig. 1: Safety marking on the road

The operator has to pay attention to the following measures in order to guarantee safety in the parking facility area:

- ⇒ Always keep children away from system devices.
- ⇒ Select easily recognizable warning colors and signs used in the parking facility area.
- ⇒ Provide separate footpaths next to entrances and exits and mark pedestrian areas (see figures below) to ensure that pedestrians do not have to walk near entrances and exits and on the roads.
- ⇒ Make sure that there are sufficient fully visible signs around the parking facility site. Keep signs clean and position them so that they can be read easily.
- ⇒ Use additional safety barriers (e.g. safety cones) to close off entrances and exits when carrying out work there and wear safety clothing in easily recognizable warning colors.
- ⇒ Make sure that the danger area of the devices cannot be accessed by any unauthorized persons, and in particular not by children, under any circumstances.

If gates are installed in your ABACUS system the operator should pay attention to the following measures:

- ⇒ Provide all footpaths with a sufficient distance to the lanes and the gates. Observe national regulations.
- ⇒ Observe the safety instructions in the gate's operating manual.
- ⇒ Ensure that you dispose of detailed and recent operating manuals for your gates.
- ⇒ Forward any instruction supplied by the listed gate arm manufacturer to the parking operator.
- ⇒ Ensure that the gate's danger zone is clearly marked:
 - using colored markings on the road surface (e.g. pictogram "No pedestrians") and
 - using respective signs (*see figures below*), in order to stop people entering the danger zone during automatic or manual operation; thus reducing the risk of injuries.
- ⇒ Ensure that permanently mounted controls intended for activation are located at least 6 ft (1.83 m) away from any moving part of the gate.
- ⇒ Ensure that gate and gate arm are installed at least 19.7 in (approx. 500 mm) away from any rigid objects or pedestrian walkway.
- ⇒ Place a sign in visible locations so as to warn pedestrians walking near the gates of the possible risk of entrapment and risk of injury due to gate motion.
- ⇒ Pay particular attention to the safety measures.
- ⇒ Place two signs minimum 8.66 in (approx. 220 mm) by 11 in (approx. 280 mm) with the illustrated safety information in visible location close to the gate.



The signal word **WARNING** and the safety alert symbol (orange ! in solid black equilateral triangle) shall be centered on an orange background.

Fig. 2: Gate's danger zone sign I

- ⇒ Place two signs min. 3 in (approx. 77 mm) by 11 in (approx. 280 mm) with the illustrated safety information in visible location close to the gate.



Fig. 3: Gate's danger zone sign II

2.4 Specialists and operating personnel

WARNING

Risk of injury in case of inadequate qualification!

Improper handling can lead to considerable bodily injuries and property damage.

- The operator takes the responsibility that only Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners carry out installation, connection, commissioning, assembly, adjustments and servicing.
- The operator is allowed to conduct certain maintenance and filling work with an instructed and basic training skilled shift manager. The maintenance work is indicated and described in the chapter *14 Maintenance on page 84* as well as in the maintenance sections of the individual modules.
- All other maintenance work must be conducted by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.

The operating instructions specifies the following qualification requirements for the different fields of activity:

Shift manager

Shift managers (also called route man) conducting certain maintenance and filling work **inside** the device need to be specially instructed and trained on power supply disconnecting features and on the working steps to be carried out in the device interior.

Specialized staff

Specialized staff is due to its technical training, knowledge and experience as well as due to its knowledge of the pertinent regulations able to carry out the work assigned to it and to independently recognize potential hazards.

Electrical technicians

Qualified electricians authorized to carry out work at electrical installations according to national and local regulations and standards.

They are able, due to their technical training, knowledge and experiences as well as knowledge of the relevant standards and regulations, to execute tasks on electrical systems and to independently recognize possible hazards.

Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners

Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners comply with the requirements of the electrical technicians named here. Additionally, these electrical technicians are trained and authorized by Designa to perform installation, connection and servicing at the device PAY COINLESS.

2.5 Personal protective equipment

It is necessary to wear personal protective equipment when dealing with the device so as to minimize health hazards.

Before carrying out any work, properly dress in the necessary protective equipment such as work clothes, protective gloves, safety shoes, helmet, etc. and wear them during work.

2.6 Occupational safety and special dangers

The remaining risks resulting from the risk analysis are specified in the following section.

Observe the safety notes listed here and the warning notes mentioned in the other chapters of these instructions to reduce health hazards and to avoid dangerous situations.

2.6.1 Product safety labels on the device

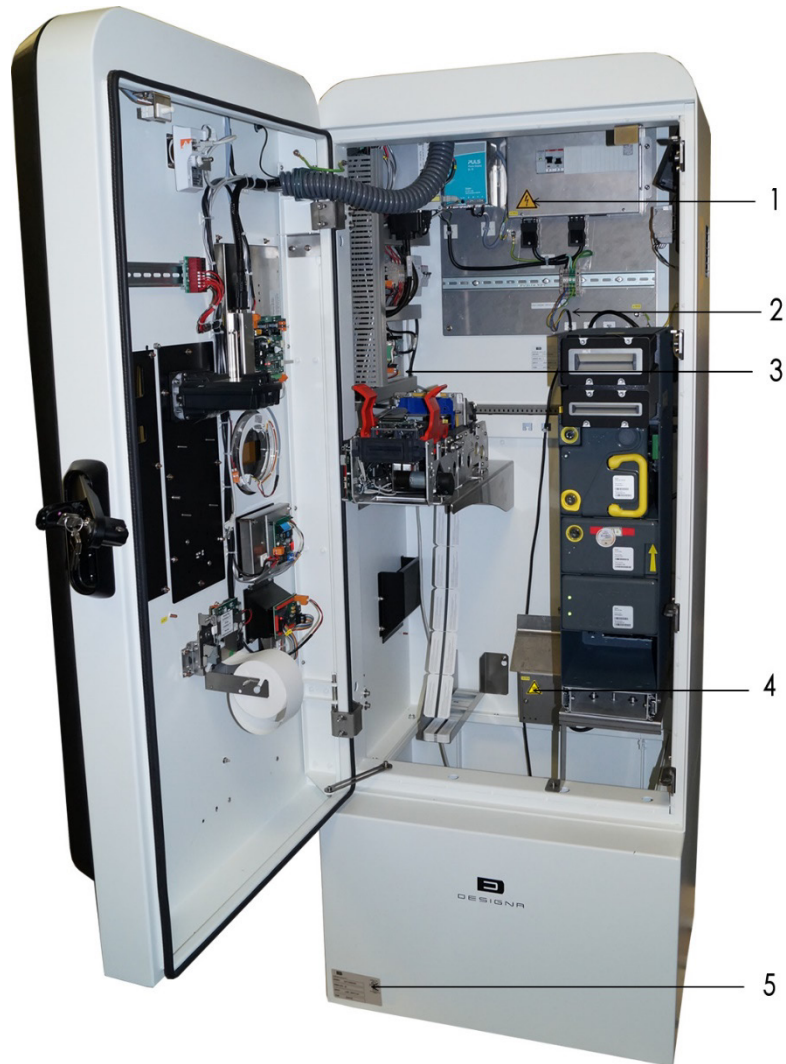


Fig. 4: Product safety labels

- 1 Safety sign Electric voltage at the power distribution box
- 2 Labels at the terminal block -X0 (connection and grounding information)
- 3 Low voltage information at low voltage terminals (e.g. terminal block -X2)
- 4 Safety sign Hot surface at the optional heater (on the cover)
- 5 Type plate

Not shown:

- 6 Safety sign Laser radiation on the Multicon (only barcode technology)
- 7 Product safety label at the optional banknote recycler BNR MEI
- 8 Product safety label at the optional banknote recycler BNR CASHCODE

- ⇒ Check that all product safety labels are in place and display the information specified below.
- ⇒ Contact your Designa Service if any labels are missing or damaged.

Low voltage information at low voltage terminals

The following low voltage information must be provided in close proximity to the low voltage terminals (for connections to external devices):

- "Class 2 supply, 24V" ¹

Labels at the terminal block -X0

Connection information at the terminal block -X0

The following connection information must be provided in close proximity to the fused terminal (see *chapter 5.3.6 Terminal block -X0: Voltage connection on page 38*):

- "Use copper wires only" ²

Grounding information at the terminal block -X0

The grounding information must be provided in close proximity to the main grounding terminal :



Safety sign Electric voltage at the power distribution box

The following safety sign denotes life threatening situations caused by electric voltage. Non-observance of the safety sign causes severe injuries or death (see *chapter 5.3.5 Power distribution box on page 36*).



Safety sign Hot surface at the optional heater

The following safety sign denotes the presence of a hot surface. Non-observance of the safety sign can lead to minor injuries (see *chapter 5.3.10 Heater and thermostat (optional) on page 39*).



Type plate

See *chapter 3 Identification on page 22*.

Safety sign Laser radiation on the Multicon (only barcode technology)

Barcode scanner: class 2 laser product. Non-observance of the warning sign may result in eye damage (see *chapter 17 Module Multicon MC 120 on page 108*).



Product safety label at the optional banknote recycler BNR CASHCODE

Safety-related information at the chassis (see *chapter 20 Module Banknote Recycler BNR CASHCODE (optional) on page 137*).



Product safety label at the optional banknote recycler BNR MEI

Safety-related information (lateral) (see *chapter 21 Module Banknote Recycler BNR MEI (optional) on page 153*).



¹ Additionally for Canada: « Alimentation 24V Class II »

² Additionally for Canada: « Utiliser uniquement des câbles en cuivre »

2.6.2 Safety messages and operation safety

Observe the safety messages listed here to reduce health hazards and to avoid dangerous situations.

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Installation, connection, commissioning, assembly, adjustments and servicing have to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Optional accessories mounted on site must be installed by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Filling, emptying and some maintenance work inside the device may be carried out by DESIGNA trained operating personnel who are familiar with the operating instructions and safety information, called **shift manager** in these instructions. All other maintenance work has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Cross-section of field wires used for mains line shall comply with requirements of Nation Electric Code (NFPA 70) and any applicable Local Codes as well as with the specifications under 4 *Technical Data on page 23*.
- Use permanent wiring per Local Codes for permanently connected devices.
- National and local codes for accident prevention at electrical installations and equipment must always be followed.
Please consider in particular:
 - Provide an UL listed, suitably rated GFCI (ground fault circuit interrupter) in the branch circuit installation supplying the device.
 - Also provide - e.g. at the fuse box - an UL listed all-pole disconnection main switch for the device PAY COINLESS which can be locked in the OFF position (prevents accidental reconnection, e.g. when carrying out installation work).
- All branch circuits for hard wired units must be suitable for the unit ratings.
- Replacement of fuses or other components must be done with identical or at least equivalent type and ratings.
- Ensure that the device is always locked correctly in order to avoid endangering third parties.
- It is imperative to observe information about Maintenance Services in order to guarantee safe operation.

Thunderstorm, lightning, electric voltage

DANGER

Danger of death from lightning and electrical voltage!

If lightning strikes the device, contact to the device components and direct proximity to the device includes mortal danger.

- Never install the device during thunderstorms.
- Protect yourself in buildings or vehicles.

Improper operation

WARNING

Danger from improper operation of the device!

Improper operation of the device can cause severe or lethal injuries

- Only additions to the device that are permitted by the manufacturer may be installed.

Improper transport

WARNING

Danger from improper transport of the device!

The weight of the device can severely injure a person.

- Have them transported by specialized staff only.
- Check fasteners (packaging straps) for damage or tears.
- Use lifting gear or forklift with a suitable pallet.
- Use suitable lifting gear (loops, etc.) for lifting the device. The lifting gear must be designed for the respective weights.
- Never attempt to lift the device on your own.
- Always wear safety shoes.

Heavy weight

WARNING

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person.

- Never attempt to lift the device on your own.
- Always wear safety shoes.

Falling components

WARNING

Risk of injury from falling components!

Falling components can cause severe injury.

- Secure the device PAY COINLESS against tilting before assembly.
- Install the device correctly.

Insufficient fixing **WARNING****Risk of injury at insufficient fixing!**

Insufficient fixing of individual components such and additions permitted by the manufacturer can cause severe injury.

- Only Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners are allowed to assemble the device and the appropriate components.
- Check the foundation anchors fit tightly before starting the commissioning.
- Check the firm fixing of all screws according to maintenance schedule.

Illegible signage **WARNING****Risk of injury by illegible symbols!**

Labels and signs can become dirty or unrecognizable in the course of time.

- Always keep safety, warning and operating notes in a well readable condition.
- Immediately renew damaged or unrecognizable signs or labels.

2.7 Safty standard of device


The standards used to evaluate the system were

- for United States Listing (USL) UL 751 and UL 325
- for Canadian certification (CNL) CAN/CSA 22.2 #128 and CAN/CSA-C22.2 No. 247-92

3 Identification

3.1 Type plate

The device type plate is located on the housing.

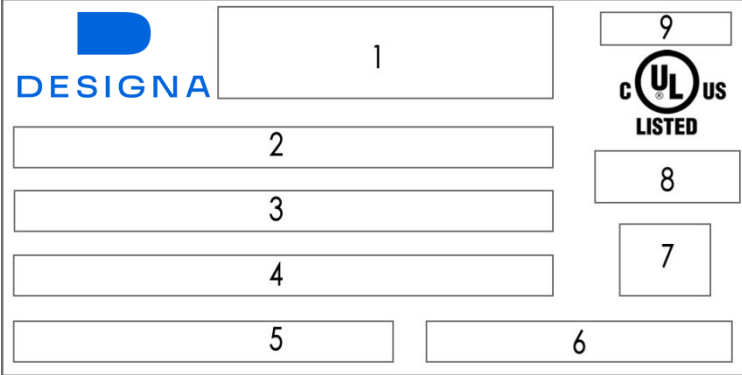

The diagram shows a rectangular type plate with the following layout:

- Field 1:** A large rectangular box at the top left, containing the number '1'.
- Field 2:** A rectangular box below field 1, containing the number '2'.
- Field 3:** A rectangular box below field 2, containing the number '3'.
- Field 4:** A rectangular box below field 3, containing the number '4'.
- Field 5:** A rectangular box at the bottom left, containing the number '5'.
- Field 6:** A rectangular box at the bottom right, containing the number '6'.
- Field 7:** A small square box on the right side, containing the number '7'.
- Field 8:** A rectangular box on the right side, containing the number '8'.
- Field 9:** A small square box at the top right, containing the number '9'.

Additional features on the plate include the DESIGNA logo (a blue 'D' shape) and the text 'DESIGNA' to the left of field 1, and a UL LISTED certification mark (a circle with 'UL' and 'LISTED' text) to the right of field 1.

Fig. 5: Type plate

- 1 Manufacturer's name and address
- 2 Model
- 3 Serial no.
- 4 Input: Power supply and current consumption
- 5 YOM: Year and month of manufacture
- 6 Manufacturing country
- 7 QR Code
- 8 Description and file number
- 9 Indoor/ outdoor use

Some modules are also equipped with a type plate. The type plate is then located directly on the module.

4 Technical Data

Dimensions and weight

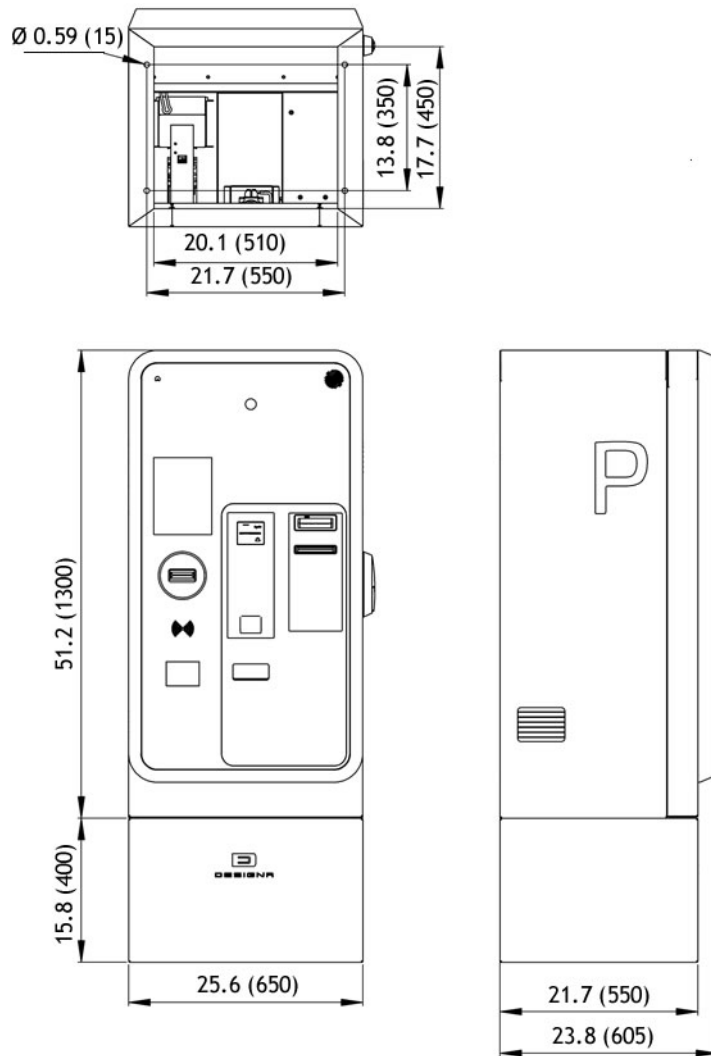


Fig. 6: PAY COINLESS: approx. dimensions in inch and (mm)

Description	
Weight	approx. 385 lbs (175 kg) (depending on equipment)

Electrical connection

Description	
Power supply	120 V AC, 60 Hz
Current consumption device	operation 0.63 A max. 2 A
Current consumption heater (optional)	3.4 A
Power consumption device	operation 75 W max. 240 W
Power consumption heater (optional)	400 W
Network system	TN-S System
Pre-fuse	max. 13 A
Max. wire size	AWG 14
Connection type	tension spring connection
Protection class	I
Control voltage	24 V DC

Operating conditions

Description	
Operating temperature	without optional heater: +50 °F to +122 °F (+10 °C to +50 °C) with optional heater: -4 °F to +122 °F (-20 °C to +50 °C) (fan optional)
Storage temperature	-13 °F to +158 °F (-25 °C to +70 °C)
Relative humidity	max. 95 %, non-condensing
Noise development	< 70 dB(A)
Ingress protection rating:	IP 54
Laser class barcode scanner (Multicon)	Class 2

5 Device Description

Below there is an overview of the design and functions of a standard device. Some components which can be perceived as units are described as independent modules at the end of these operating instructions.

5.1 General design

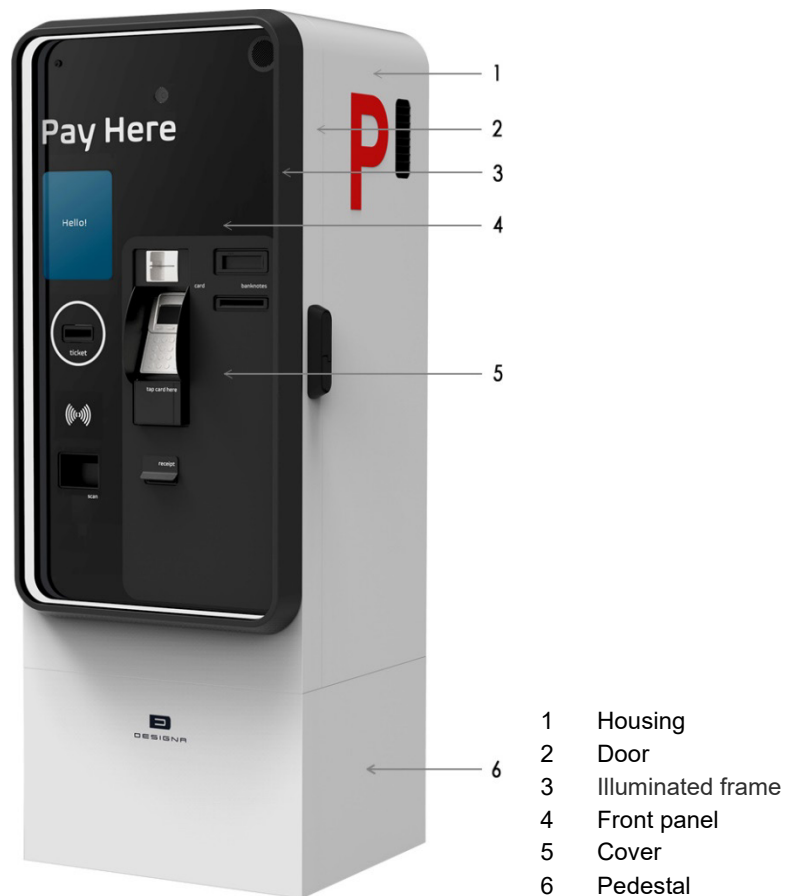


Fig. 7: General design (figure with options)

Design

- Housing, door and pedestal are made of stainless steel 1.4301 (V2A), outer and inner surface with durable, weather resistant powder coating
- Illuminated frame is made of aluminum, weather resistant powder coated
- Front panel is made of Plexiglas® PMMA
- Cover is made of aluminum, weather resistant powder coated

Color

- Housing, door and pedestal: RAL 7012 (basalt gray)
- Illuminated frame and cover: RAL 9017 (traffic black)

5.2 Components on the door and their functions

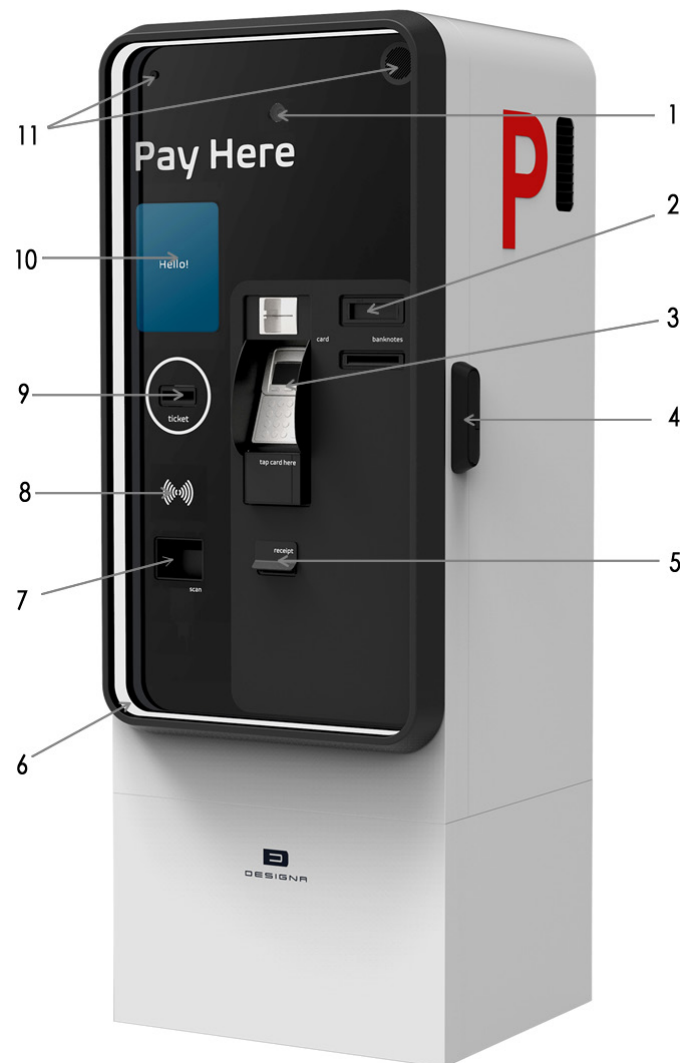


Fig. 8: Components on the door (figure with options)

- 1 Camera (optional)
- 2 Insertion slot banknote recycler (optional)
- 3 CC reader/ PINPad terminal/NFC (optional)
- 4 Locking system
- 5 Receipt printer
- 6 Illuminated frame (optional)
- 7 2D barcode scanner (optional)
- 8 RFID (hands-free identification) (optional)
- 9 Insertion slot reading device
- 10 Full touch display
- 11 Intercom device

Not shown:

- 12 Door switch
- 13 Door fixture
- 14 Hearing induction loop (optional)

5.2.1 Camera (optional)

A camera can be installed at the device PAY COINLESS to ensure network-based video surveillance.

Please contact your DESIGNA Service for further details.

5.2.2 Banknote recycler insertion slot

An insertion slot and a dispensing slot for the banknote recycler are provided at the housing.

5.2.3 Credit card reader/PINPad/NFC (optional)

The PAY COINLESS can be equipped with country-specific credit card reader, PINPad terminal and NFC for credit card and debit card processing. Some countries require certified card reading devices and PIN systems for standardized credit card processing.

Function and processing depend on the model in use. Please ask your DESIGNA service for availability and more details.

5.2.4 Locking system

The door is locked and secured in place using a four-point locking rod. This locking rod is secured with a turning lever. And a further cylinder lock secures the turning lever.



Fig. 9: Opening the locking mechanism

- 1 Cover
- 2 Cylinder lock
- 3 Spring loaded handle

Opening the locking mechanism

1. Lift up the cover.
2. Turn the key in the *cylinder lock* **clockwise** (to the right).
- The *spring loaded handle* springs open.
3. Twist the *spring loaded handle* **anti-clockwise** (to the left).

Closing the locking mechanism

1. Twist the *spring loaded handle* **clockwise** (to the right).
2. Push the *spring loaded handle* back to the original closed position.
3. Turn the key in the *cylinder lock* **anti-clockwise** (to the left).

5.2.5 Receipt printer

In order to provide customers with a receipt of the payment process a receipt printer is inserted in the PAY COINLESS.

For further details see chapter 19 Module Receipt Printer on page 130.

5.2.6 Illuminated frame (optional)

The illuminated frame is illuminated by LEDs. The intensity and color of the illumination can be set by DESIGNA service.

5.2.7 2D Barcode scanner (optional)

A *2D Barcode Scanner* can be installed at the device PAY COINLESS in order to process barcode ID media for optional prebookings, for the optional discount processing or for the optional processing of the barcode printed on a receipt.

For further details see chapter 12 Operation on page 65.

5.2.8 RFID (optional)

Procedures using hands-free **RFID** cards can only be carried out if a respective antenna has been fitted to the device.

Various hands-free systems/antennas are available in the ABACUS system.

For further details see chapter 22 RFID (Hands-free Identification) (optional) on page 173.

5.2.9 Reading device insertion slot

The *reading device insertion slot* is accessible via the opening in the front panel:

Customers' **transient tickets** or other **types of item (monthly cards, value cards)** or optional debit cards and credit cards³ are inserted here for processing. (The option of paying with a credit card is related to the corresponding hard and software equipment).

5.2.10 Full-touch display

The DESIGNA full-touch display offers all standard functions for ticket processing at the entry, pay station and exit as well as the corresponding functionalities for ticketless payment via license plate recognition. The processes are guided by graphical operating instructions.

According to the licenses and requirements for the parking system, the touch display is configured for the respective parking solution and device type.

The full-touch display (10.1") at the device PAY COINLESS offers the following functionalities:

³ Only for barcode technology when the **Multicon** is equipped with respective hybrid technology and has additional magnetic reading heads (see chapter Module Multicon).

Language

- ⇒ Tap the symbol with the globe to switch the display texts to another language.
- Each tap switches to the next language set up in the system.

Help

- ⇒ Tap the icon with the telephone to speak directly to the operating personnel via the intercom.

Lost Ticket

- ⇒ Tap the icon with the ticket in case of ticket loss.
- The price in the amount of the daily rate is displayed. After payment, the ticket can be used for exit.

Receipt

- ⇒ Tap the receipt icon to print a receipt as a payment confirmation after payment has been made.

Cancel

- ⇒ Tap the symbol with the cross to cancel the execution of a function.

Keyboard

The keyboard layout is QWERTY/QWERTZ.

- ⇒ Tap the globe symbol on the keyboard to switch between the German and English (USA) keyboard layouts (QWERTZ/QWERTY).
- ⇒ Tap the umlaut function to select language-dependent special characters.

For further information on the functionality and operation of the touch display, please refer to section 12 Operation on page 65 and the separate operating instructions for the touch display.

5.2.11 Intercom device

By pressing the *info button* it is possible to contact the central switchboard for intercommunication and establish speech contact. The customer can receive the necessary assistance via the *intercom device*.

Depending on the type of connection, a differentiation is made between the integrated VoIP intercom device *DESIGNA VoIP*, which does not require a separate connection during installation, and the intercom devices of other manufacturers, which are connected to *terminal block -X2* or an additional Ethernet connection:

DESIGNA VoIP (Voice over IP)

The intercom device *DESIGNA VoIP* is connected to the central switchboard for intercommunication via **TCC** and **Ethernet**.

A duplex speech connection is enabled.

Intercom devices of other manufacturers

The intercom devices of other manufacturers require a connection via a 2 or 4-wire intercom circuit or via an additional Ethernet connection. Depending on the equipment, a simplex or duplex speech connection is enabled.⁴ Optionally, a function can be triggered at the device from the central switchboard for intercommunication (default: Barrier gate open).



Various intercom devices are available:
Please refer to the spare parts catalogue (CD-ROM) to identify the intercom device installed in your device.

Equipment examples

Type	Speech connection	Connection	Function triggering
Bouyer ⁵	Simplex	2-wire at terminal block -X2	-
Rocom	Duplex	2-wire at terminal block -X2 + potential-free contact (function triggering)	+
Schneider ET 570	Duplex	4-wire at terminal block -X2	-
Schneider ET 870	Duplex	2-wire at terminal block -X2 + potential-free contact (function triggering)	+
Schneider ET 808	Duplex	2-wire at terminal block -X2 + potential-free contact (function triggering)	+
Schneider ET 908	Duplex	Additional Ethernet connection + potential-free contact (function triggering)	+

5.2.12 Door switch

The *door switch* checks the position of the door. If the door is opened, the door switch sends a signal to the **TCC/SBC** which subsequently sends a corresponding **alarm message** to the **System server**.

The door switch is extracted in order to carry out service and maintenance work and to put the device into "normal mode" even if the door is open: This simulates a closed door and the device functions can be tested.

⁴ Simplex speech connection: The installed *loudspeaker is equipped with and integrated microphone*. This provides an alternate one-way system, i.e. if the central switchboard for intercommunication is speaking the customer can only listen and vice-versa.
Duplex speech connection: In addition to the *loudspeaker* a separate microphone and a controller are installed: A two-way intercom connection (simultaneous listening and speaking) is possible

⁵ Not available at BlueEdition devices.

5.2.13 Door fixture

The *door fixture* is used to hold the door open securely.

5.2.14 Hearing induction loop (optional)



Fig. 10: Example of pictogram for hearing induction loops

A hearing induction loop can be connected to the intercom system of the device. The hearing induction loop enables hearing aid users to hear more clearly in areas of high ambient noise.

- ⇒ Affix a hearing induction loop pictogram to the device to indicate this hearing assistance system to hearing aid wearers.

5.3 Components inside the device and their functions

Electric voltage

DANGER

Danger of death due to electric shock!

After switching off the automatic circuit breaker **only** the respective connected component is de-energized.

Contact with live components may result in death.

- Flick **all** of the automatic circuit breaker switches downwards when working on the inside of the device.
- Pay particular attention to instructions about the automatic circuit breakers, which interrupt the power supply.

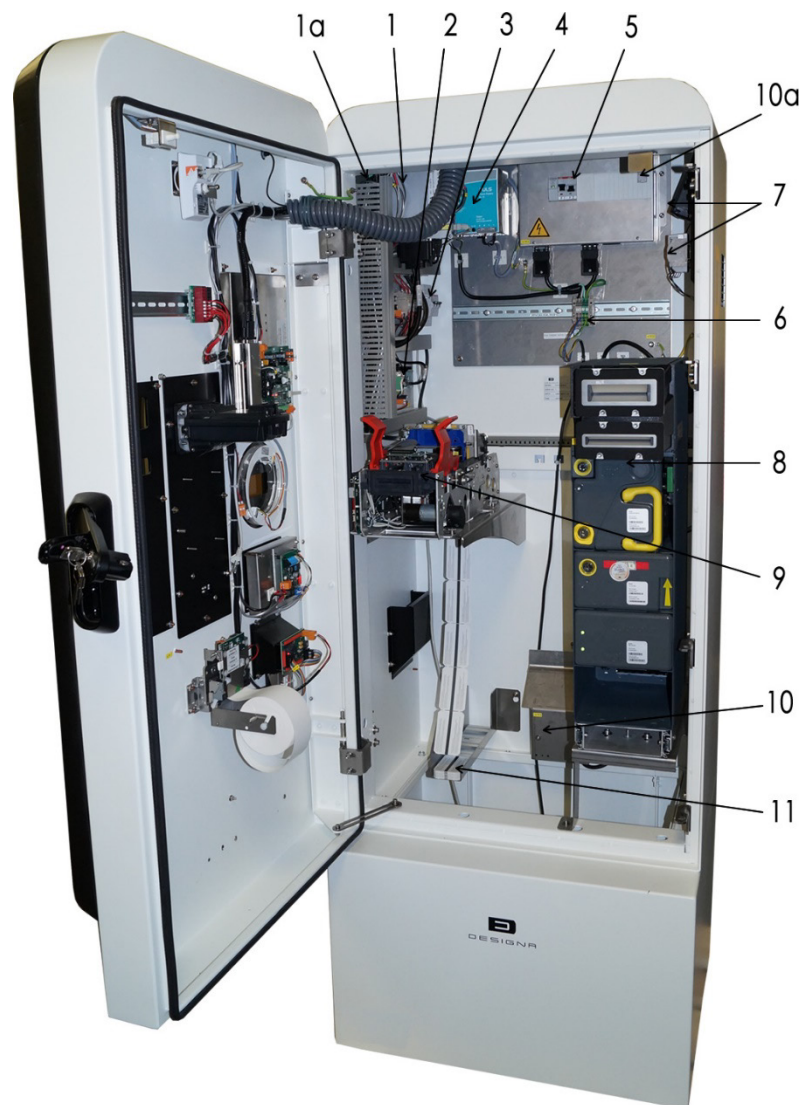


Fig. 11: Components inside the device (figure with options)

- 1 TCC (here type LCC)
- 1a) Interface extension USB-4-COM

- 2 Terminal block -X2: Intercom system and Ethernet connection
 - 3 Terminal block -X3: 3A automatic circuit breakers (secondary side)
 - 4 Power supply unit
 - 5 Power distribution box
 - 6 Terminal block -X0: Voltage connection
 - 7 Fan and thermostat (optional)
 - 8 Banknote recycler (optional)
 - 9 Multicon
 - 10 Heater (optional)
 - 10a) thermostat (optional)
 - 11 Ticket storage receptacle lost ticket (optional)
- Not shown:
- 12 I/O Interface (optional)
 - 13 Collecting box value checks (optional)
 - 14 Alarm siren (optional)
 - 15 Network components (optional, e.g. DSL modem, Switch and/or other)

5.3.1 TCC (Type LCC)

The **TCC** (Terminal Control Computer) is the central control unit for devices in the ABACUS system and controls all of the actions.

The TCC of type LCC is used.


For further details see chapter 15 Module TCC (Type LCC) on page 98.

5.3.2 Terminal block -X2: Intercom system and Ethernet connection



Connection has to be carried out by Designa electrical technicians or by electrical technicians of by Designa trained and authorized dealers and partners.

Please refer to the chapter 8.4 Connection intercom device (terminal block -X2 or VoIP) on page 56 and 8.3 Ethernet Connection (terminal block -X2 or additional mounting rail) on page 54.

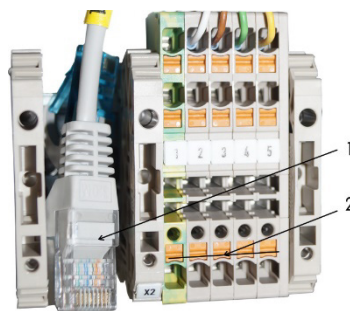

- 1 Internal connector for Ethernet connection (scope of delivery)
- 2 Connection intercom system

Fig. 12: Terminal block -X2 (similar to figure)

Connection intercom device (optional)

If the intercom device requires a 2 or 4-wire connection, the cable of the intercom circuit is connected to terminal block -X2.

Internal connector for Ethernet connection



Fig. 13: Ethernet connection

The *internal connector for Ethernet connection* is connected to the additionally delivered *Ethernet connection*, after this has been wired on-site with the existent **Ethernet (LAN)** and mounted to the mounting rail of the terminal block -X2 or to an additional mounting rail.

More than one *Ethernet connection* can be necessary depending on the device equipment.

Ethernet surge arrester (optional)



Fig. 14: Option surge arrester for the Ethernet

A *surge arrester for the Ethernet* can optionally be used at the internal wiring between the *Ethernet connection* and the *Ethernet interface* of the **TCC/SBC**. This protects the module TCC/SBC against overvoltage.

5.3.3 Terminal block -X3: 3A automatic circuit breakers (secondary side)

Electric voltage

⚠ DANGER

Danger of death due to electric shock!

The 3A automatic circuit breakers F10, F11 and F12 on the secondary side only protect the 24V components downstream. Therefore, they are **not** suitable for switching off the device when carrying out work inside the device.

Contact with live components may result in death.

- Always use the automatic circuit breakers (6A) for main power voltage F1, F2, F3 in the Power distribution box to switch off the device when carrying out work inside the device (*see chapter 5.3.5 Power distribution box on page 36*).

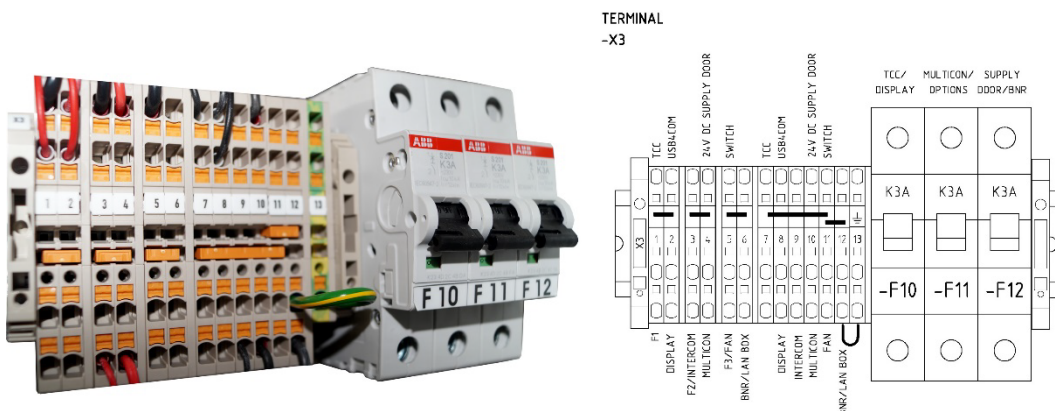


Fig. 15: Terminal block -X3: 3A automatic circuit breakers (secondary side)

Additional fuse protection of the control voltage (24V) takes place via three **3A automatic circuit breakers** (F10, F11 and F12) on the secondary side.

These split up the control voltage for the components downstream. The three 3A automatic circuit breakers are installed at the *terminal block -X3*.

5.3.4 Power supply unit

Electric voltage



Fig. 16: Power supply unit (similar to figure)

DANGER

Danger of death due to electric shock!

The power supply unit is supplied with main power voltage (120 V). Contact with live components may result in death.

- Any servicing on the power supply unit has to be made by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Before carrying out work on the power supply unit make sure it is switched off (see *chapter 5.3.5 Power distribution box on page 36*).
- Test for absence of voltage.

The *power supply unit* supplies electric power to the device components. The alternating input voltage is converted to 24V direct voltage. Correct operation of the power supply unit is displayed via a LED **i**, which emits a green light during normal operation.

The power supply unit requires to be fused on the secondary side with three additional 3A automatic circuit breakers (see *chapter 5.3.3 Terminal block -X3: 3A automatic circuit breakers (secondary side) on page 34*).

5.3.5 Power distribution box

Electric voltage

DANGER

Danger of death due to electric shock!

The power distribution box and the terminal block -X0 are supplied with main power voltage (120 V).

Contact with live components may result in death.

- Only specially instructed **shift managers** are permitted to operate the automatic circuit breaker switches and the optional ON/OFF switch in the power distribution box.
- All other tasks at the power distribution box and the terminal block -X0 have to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- After switching off the automatic circuit breaker (position OFF) **only** the respective connected component is de-energized. Flick **all** of the automatic circuit breaker switches downwards (position OFF) when working on the inside of the device.
- Be aware that the power distribution box and the terminal block -X0 remain energized even when the automatic circuit breakers are switched off. Prior to carrying out work on the power distribution box or the terminal block -X0, switch off the device **externally** and secure against reconnection.

Power distribution box

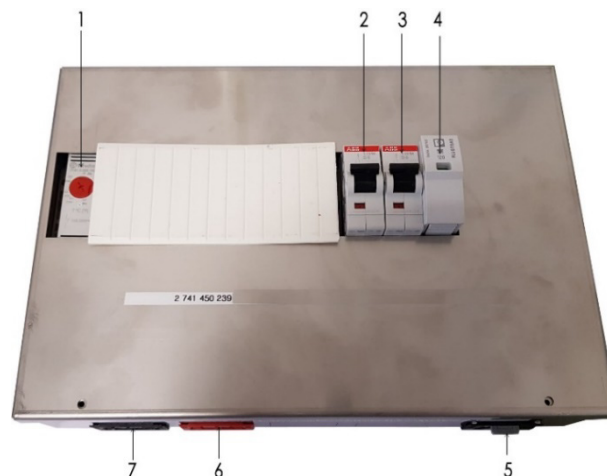


Fig. 17: Power distribution box ((figure with options))

- 1 Thermostat (optional)
- 2 Automatic circuit breaker power supply unit (F1)
- 3 Automatic circuit breaker heater (F2)
- 4 Surge arrester
- 5 Power supply panel connector (X1)
- 6 Socket heater (X11)
- 7 Socket power supply unit (X10)

Not shown:

- 8 Power filter

Surge arrester



Fig. 18: Surge arrester

A *surge arrester* is used at the device PAY COINLESS to protect the device against voltage spikes.

Automatic circuit breaker

Fuse protection of the applied device voltage takes place via 6A automatic circuit breakers. These protect individual components separately allowing the components to be switched on or off individually or, e.g., preventing that a short circuiting of the heater interrupts the electronics.

If a short circuit occurs the automatic circuit breakers interrupt the power supply to the components downstream.

Automatic circuit breaker
power supply unit (**F1**)

- Power supply unit

The control voltage (24V) converted by the power supply unit is additionally fused by three 3A automatic circuit breakers on the secondary side (see *chapter 5.3.3 Terminal block -X3: 3A automatic circuit breakers (secondary side) on page 34*).

Automatic circuit breaker
heater (**F2**)

- Heater and thermostat (optional)

Position OFF/ON

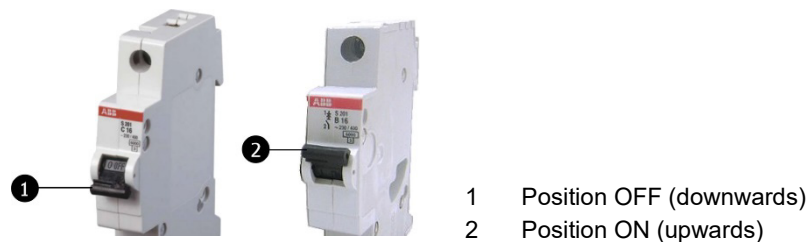


Fig. 19: Automatic circuit breaker, position OFF and ON

Switch off automatic circuit
breaker

- ⇒ Flick the switch of the automatic circuit breaker down (position OFF, **1**) to switch **off** the respective component.

Switch on automatic circuit
breaker

- ⇒ Flick the switch of the automatic circuit breaker up (position ON, **2**) to switch **on** the respective component.

Power supply panel connector

The mains wiring is pre-wired from the terminal block -X0 to the *power supply panel connector (X1)* via a 3-pole jack.

Sockets for power supply unit and heater

The *power supply unit* and optional *heater* are connected via 3-pin sockets at the power distribution box. The sockets for the *power supply unit (X10)* and the *heater (X11)* are available at the power distribution box.

Mains filter

The *mains filter* is filtering out interfering frequencies of the mains current.

5.3.6 Terminal block -X0: Voltage connection


Electric voltage

DANGER

Danger of death due to electric shock!

The terminal block -X0 is supplied with main power voltage (120 V).
Contact with live components may result in death.

- Electrical connection has to be made by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Switch off the device **externally** and make sure that it cannot be switched on again before carrying out work on the terminal block -X0.
- *Please refer to the chapter 8.2 Power supply connection (terminal block -X0) on page 52.*

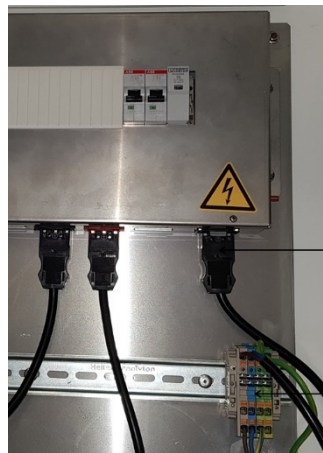

- 1 Power supply panel connector (X1)
at the power distribution box
- 2 Power supply terminal (-X0)

Fig. 20: Terminal block -X0

The mains wiring at the place of installation is connected to the *power supply terminal* at terminal block -X0.

5.3.7 Fan and thermostat (optional)

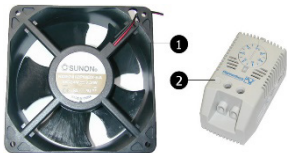


Fig. 21: Fan and thermostat
(similar to figure)

The device can be equipped with an optional efficient *fan* ①.

The switching threshold, which causes the fan to be switched on, is infinitely set via a regulator (blue control scale) on the *thermostat* ②.

5.3.8 Banknote recycler (optional)

The *banknote recycler* is a combination of a banknote reader and self-filling banknote return.

One of two *banknote recycler* types can be used in the device PAY COINLESS: The BNR CASHCODE or the BNR MEI.

For further details see chapter 20 Module Banknote Recycler BNR CASHCODE (optional) on page 137 and 21 Module Banknote Recycler BNR MEI (optional) on page 153.

LAN box (optional BNR MEI)



Fig. 22: LAN box (similar to figure)

A LAN box is installed for the optional banknote recycler BNR MEI. This box is connected to the **TCC** via **Ethernet** and assumes communication with the banknote recycler via the USB interface.

5.3.9 Multicon

The (read-)write device is called the *Multicon*.

For further details see chapter 17 Module Multicon MC 120 on page 108 and 18 Multicon MC Barcode Module on page 122.

5.3.10 Heater and thermostat (optional)

Electric voltage

DANGER

Danger of death due to electric shock!

The heater and thermostat are supplied with main power voltage (120 V).

Contact with live components may result in death.

- Only specially instructed **shift managers** are permitted to adjust the temperature at the thermostat.
- All other tasks at the heater and thermostat have to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Before carrying out work on the heater and thermostat make sure they are switched off (*see chapter 5.3.5 Power distribution box on page 36*).
- Test for absence of voltage.

Hot surface



Fig. 23: Heater (1) and thermostat (2) (similar to figure)

⚠ CAUTION

Danger of burns!

The surface of the heater may become hot during operation.

Contact with the heater may result in burns.

- Do not touch the surface of the heater.
- Always ensure that the heater has cooled down sufficiently before carrying out tasks in the vicinity of the heater.

The heater protects the device against low temperatures, prevents the formation of condensation water and allows operation at ambient temperatures of -4°F (-20°C).

The temperature inside the device is kept at the temperature set on the *thermostat*. The switching threshold, which causes the *heater* to be switched on, is infinitely set via a regulator (red control scale).



The thermostat is not pre-set on delivery. The desired temperature has to be set before commissioning.
Recommended temp.: 68°F (20°C)

5.3.11 Ticket storage receptacle lost ticket (optional)

A **lost ticket** can be issued to customers who claim to have lost their ticket. For this, the PAY COINLESS has to be equipped with a respective **Multicon** and a *ticket storage receptacle*.

For further details see chapter 12.11 Issue of lost tickets (optional) on page 75 and also the separate operator manual WinOperate.

5.3.12 I/O interface (optional)

Optionally, the module *I/O interface "Midi-P-USI"* (12 I/O = 12 Inputs/ 12 Outputs) is used at the PAY COINLESS.

For further details see chapter 16 Module I/O Interface Midi-P-USI (12 I/O) (optional) on page 104.

5.3.13 Collecting box value checks (optional)



Fig. 24: Collecting box value checks

It is optionally possible to use **value** or **time checks** as payment medium. These are tickets from the ABACUS system to which a specified money or time value is assigned. They are used as a payment medium at the PAY COINLESS and are withdrawn after processing.

For this, there is a *collecting box value checks* available underneath the **Multicon**.

For detailed function specification: *See Paying with value/time checks (optional) on page 67 and also the separate operator manual WinOperate.*

5.3.14 Alarm siren (optional)

Loud noises

CAUTION

Risk of injury due to loud noises!

An alarm signal (approx. 110 dB) is activated if the housing door is opened without previously using an authorizing function card.

- Always use the authorizing function card before opening the housing door.



Fig. 25: Alarm siren

If the optional *alarm siren* is installed, an alarm signal sounds if the PAY COINLESS door is opened without using the appropriate function card (depends on **device configuration**).

5.3.15 Network components (optional)

Customer specific network components, such as e.g. DSL modem, switch etc., can be installed. For example, an optional DSL modem can be used in the PAY COINLESS, if the **LAN** is a two-core cable network. Please refer to the manual which is delivered separately with the DSL modem or ask your DESIGNA service for more details.

6 Transport and Storage

6.1 Safety

Improper transport



WARNING

Danger from improper transport of the device!

The weight of the device can severely injure a person.

- Have them transported by specialized staff only.
- Check fasteners (packaging straps) for damage or tears.
- Use lifting gear or forklift with a suitable pallet.
- Use suitable lifting gear (loops, etc.) for lifting the device. The lifting gear must be designed for the respective weights.
- Never attempt to lift the device on your own.
- Always wear safety shoes.

Improper transport

NOTICE

The device can be damaged by improper transport.

Substantial material damages can result from improper transport.

- Have them transported by specialists only.
- When unloading the packages and during in-plant transportation always proceed with greatest care and caution.
- Observe the symbols on the packaging.
- Observe the dimensions of the device.
- Loading, unloading as well as moving the device must take place with greatest care.
- Only remove packaging directly before assembly.

Personal protective equipment

The following must be worn during all work:

- Work clothes
- Protective gloves
- Safety shoes

6.2 Transport inspection

1. Check the delivery immediately after receipt for completeness and transport damage.
2. If there is any externally visible transport damage, proceed as follows:
 - ⇒ Do not accept the delivery or accept it only under reserve.
 - ⇒ Note the extent of damage on the transport documents or on the delivery note of the forwarder.
 - ⇒ Lodge complaint.



Lodge a complaint for each defect, as soon as it is recognized. Compensation claims can only be submitted within the valid complaint periods.

6.3 Transport

The lifting gear must be designed for the weight of the device.

For transport the device refer to the safety notes.

For future transports

1. Secure loose cables.
2. Secure the device against vibrations.
3. Securely fasten the device prior to transport (e.g. screw it onto a pallet).
4. Transport and put down the device with a forklift and lift with suitable lifting gear.

6.4 Storage

Store the device or packages under the following conditions:

- Do not store outdoors.
- Store dry and protected from dust.
- Do not expose to aggressive media.
- Protect against sun damage.
- Avoid mechanical vibrations.
- Storage temperature: -13 °F to +158 °F (-25 to +70 °C)
- Relative humidity: max. 95 %, non-condensing
- Check the general condition of all components and packaging regularly, if they are stored for periods longer than 3 months.

7 Installation

7.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Installation has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Make sure that the power supply is **externally** disconnected and that it cannot be switched on.
- Test for absence of voltage.

Inappropriate installation

WARNING

Risk due to inappropriate installation!

Inappropriate installation may cause serious injuries.

- Installation has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Prior to work, ensure that there is sufficient assembly space.
- Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.
- Comply with specifications for foundations and reinforcement.
- Ensure correct arrangement and fit on all assemblies and components.
- Install the indicated fastening elements correctly.

Heavy weight

WARNING

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person.

- Never attempt to lift the device on your own.
- Always wear safety shoes.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

NOTICE

Dirt, dust and construction implements can endanger the sensitive electronics and mechanism of the device and impair safe operation.

- The shell of the parking lot building should be completed before installing devices.

Personal protective equipment

The following must be worn during all work:

- Work clothes
- Protective gloves
- Safety shoes

7.2 Installation preparation

Location requirements

The device is qualified for either indoor, protected or outdoor locations.

- ⇒ Please see the chapter 4 *Technical Data on page 23* for the area required for installation.
- ⇒ Choose a location which offers enough additional operating space (for opening the door etc.).
- ⇒ Make sure that there are sufficient, fully visible signs around the parking facility site. Keep signs clean and position them so that they can be read easily.
- ⇒ Use signs to clearly display areas (e.g. entrance and exit).
- ⇒ Provide separate footpaths next to entrances and exits and mark pedestrian areas, to ensure that pedestrians do not have to walk near entrances and exits or on the roads.
- ⇒ It is essential to observe the safety information in the barrier gate's operating instructions and the following notes if barrier gates are installed in your system.
 - Install gate and gate arm at least 2 ft (610 mm) away from any rigid objects or pedestrian walkway.

- Place a placard in visible locations so as to warn pedestrians walking near the gates of the possible risk of entrapment and risk of injury due to barrier gate motion.
- Pay particular attention to the safety information in the gate's operating instructions and in the main Safety chapter of these instructions if gates are installed in your ABACUS system.

Foundation requirements

The device has to be installed on a concrete foundation.

i The concrete foundation must be sufficiently rigid as to withstand the weight of the unit fully loaded: it needs to have a strength of 3600 psi (25 N/mm²).
The foundation needs to have a frost-depth of approx. 2.6 feet (approx. 800 mm) and must be non-flammable!
The foundation has to have a smooth concrete finish.

1. Pour the foundation according to manufacturer specifications.
2. Lead the ductworks into the middle of the foundation from the foundation cast. Ensure that the cables are led through the middle of the pedestal opening.
3. Leave at least approx. 8 ft (approx. 2.50 m) of the supply cables for a simple connection.
4. Embed (if available) the DESIGNA foundation frame into the concrete during the building stage and level the foundation frame with a spirit level.
5. Provide the foundation with a smooth concrete finishing.
If a foundation frame is embedded, make sure its surface is flush with the smooth concrete finishing after embedding.
6. Ensure that the surface is a non-flammable surface and sufficiently rigid as to withstand the weight of the unit fully loaded (3600 psi (25 N/mm²)) and that in outdoor locations a frost-depth of approx. 2.6 ft (approx. 800 mm) is ensured.

i For further information regarding the required condition of the device foundation at the installation location refer as well to the documentation of the supplied anchoring and fastening material.

7. Ensure that the poured foundation material has completely hardened before installing the device onto the *foundation frame* or before preparing the mounting with the *DESIGNA mounting kit*.

7.3 Different mounting possibilities

Mounting possibilities

The following device mounting possibilities are available:

- with the DESIGNA mounting kit

7.3.1 Preparation with the mounting kit

The devices are fastened with the Designa mounting kit, if no Designa foundation frame is provided (e.g. not embedded into the concrete during construction or not available for the device).

The following is required for mounting:

Designa mounting kit

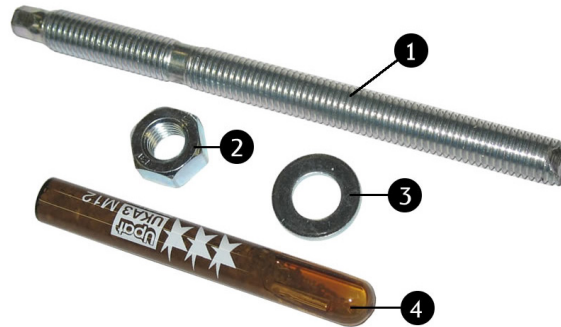


Fig. 26: Designa mounting kit

- 1 Galvanized threaded rod (M12x160) (4x)
- 2 Stainless steel hexagon nuts (M12; ISO 4032, DIN 934) (4x)
- 3 Stainless steel washers (A13; DIN 125) (4x)
- 4 Mortar cartridge (M12) (4x)

Not shown:

- 5 If included in the scope of delivery: 2x mounting bars)

Skin and eye irritation

CAUTION

Skin and eye irritation from improper application of the mortar cartridges!

Improper application of the mortar cartridges may cause skin and eye irritations.

- Use the mortar cartridges only if undamaged.
- Avoid eye and skin contact.
- See also the manufacturers' instructions for the mortar cartridges.

Setting the anchor bolts

Prerequisite: The concrete foundation must be fully cured.

1. Check completeness and quality of the fastenings.
2. Use the drilling pattern of the foundation frame to mark the bore holes or position the device and mark the holes using the bore holes in the housing base.
3. Drill holes in the concrete foundation with a diameter of 0.55 in (14 mm) and a depth of 4.33 in (110 mm).
4. Clean the holes with compressed air.
5. Fully insert the mortar cartridges into the clean holes.

6. Use a hammer drill or percussion drill to insert the threaded rods into the bore hole and mortar cartridges. Please pay careful attention to the mortar cartridges instructions.
7. Observe the hardening times mentioned below:

Typical hardening times

Hole temperature		Waiting time valid for dry material	Waiting time valid for wet material
°C	°F		
> 20 °C	> 68 °F	20 min	40 min
10 - 20 °C	50...68 °F	30 min	1 h
0 - 10 °C	32...50 °F	1 h	2 h
-5 - 0 °C	23...32 °F	5 h	10 h

8. Have the mounting accessories ready for final mounting.

7.4 Unpacking the device

The individual packages have been packed according to the expected transport conditions.

The packaging must protect the individual components against transport damage, corrosion, etc. prior to assembly. Therefore, do not damage the packaging and only remove it immediately before assembly work.

1. Transport the device to its place of installation and then unpack it.
2. Loosen the screwed connections with which the device is mounted to its transport aid (e.g. wooden pallet).
3. Have the mounting profiles ready for final mounting.
4. Separate the packaging according to type and size, and either reuse it or recycle it.

7.5 Installing the device

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Installation has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Make sure that the power supply is **externally** disconnected and that it cannot be switched on.
- Test for absence of voltage.

DESIGNA mounting kit

1. Lift the device with the bore holes in the housing base onto the anchor bolts.
2. Hold the device in a position that the cable can be fed through the opening in the base and into the housing.
3. Use mounting profiles, hexagon screws/ nuts and washers to attach the device to the anchor bolts. At first, only hand-tighten the hexagon nuts/ screws.
4. Align the device with a spirit level (clearance is guaranteed due to the clamp fixture). Ensure that the housing is not buckled due to unevenness of the floor.
5. Now tighten the hexagon nuts (33 ft lb (45 N m)).
6. Check that the device is fixed and standing securely.
7. Remove the transport safety devices of the device components, if available.
8. Seal the gap between the device and foundation with silicone.
9. Check the alignment of the assemblies with respect to the input and output slots of the door and, if necessary, adjust (*see chapter 17.4.7 Checking the correct position of the Multicon insertion slot on page 118*). The slots must be flush with or slightly protrude from the front plate (approx. 0.04 in (1 mm)).

8 Connection

8.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Connection has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Cross-section of field wires used for mains line shall comply with requirements of Nation Electric Code (NFPA 70) and any applicable Local Codes as well as with the specifications under Technical data.
- Use permanent wiring per Local Codes for permanently connected devices.
- National and local codes for accident prevention at electrical installations and equipment must always be followed. Please consider in particular:
 - Provide an UL listed, suitably rated GFCI (ground fault circuit interrupter) in the branch circuit installation supplying the device.
 - Also provide - e.g. at the fuse box - an UL listed all-pole disconnection main switch for the device which can be locked in the OFF position (prevents accidental reconnection, e.g. when carrying out installation work).
- Always ensure proper grounding: An appropriate grounding is essential to avoid shock hazards and to ensure a proper and safe operation of the device.
- Always ensure that the line voltage field wiring is sufficiently routed away from the low voltage secondary circuit (min. 3.94 in (100 mm)): Line voltage field wiring shall be reliably routed away from low voltage field wiring unless the low voltage wires are rated for line voltage.
- Do not damage the insulation of the individual wires when stripping the mains wiring.
- Cables supplied with the device for connection of a Class 2 circuit to an external device and cables supplied with an external device intended for connection to a Class 2 circuit of the device shall comply with the Standard for Power-Limited Circuit Cables. Use cable type CL2, CL2P, CL2R or CL2X or other cable with equivalent or better electrical, mechanical, and flammability rating.

Inappropriate connection
 WARNING
Danger by inappropriate connection!

Inappropriate connection can cause severe or lethal injuries.

- Connection has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Pay attention to tidiness and cleanness at the assembly site. Loosely stacked or lying around components and tools are accident sources.
- Tighten all screws correctly.

Hot surface
 CAUTION
Danger of burns!

The surface of the heater may become hot during operation.

Contact with the heater may result in burns.

- Do not touch the surface of the heater.
- Always ensure that the heater has cooled down sufficiently before carrying out tasks in the vicinity of the heater.

Personal protective equipment

The following must be worn during all work:

- Work clothes
- Protective gloves
- Safety shoes

8.2 Power supply connection (terminal block -X0)

Electric voltage

DANGER

Danger of death due to electric shock!

If the mains wiring is not connected to the terminal clamps correctly, loosens from the connection clamps and touches the housing or door, there is a direct danger to life from electric shock.

- Connection has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Check that the cross-section of field wires used for mains line and electrical safety measures comply with requirements of Nation Electric Code (NFPA 70) and any applicable Local Codes and make sure they correspond with the specifications under 4 *Technical Data on page 23*.
- Make sure that the power supply is **externally** disconnected and that it cannot be switched on. Test for absence of voltage.
- Connect the mains wiring according to the following description.
- Please observe the connection diagrams supplied with the device for options and special versions.

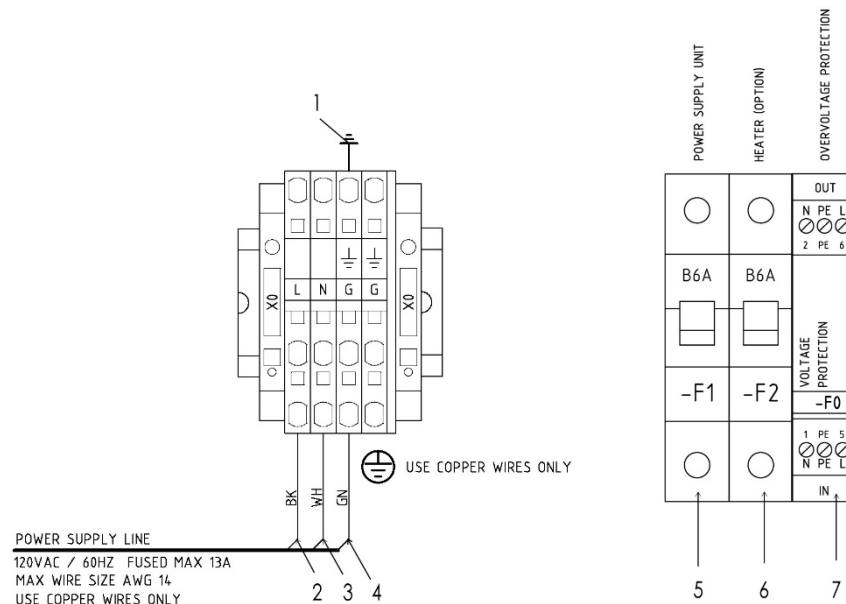


Fig. 27: Terminal block -X0, power distribution box

- 1 Ground wire, internal/ factory wired
- 2 Conducting lead, black cable (L)
- 3 Neutral lead, white cable (N)
- 4 Ground lead, external, green or green/yellow cable (G)
- 5 Automatic circuit breaker power supply unit (F1)
- 6 Automatic circuit breaker heater (F2)
- 7 Surge arrester (optional)

Mains wiring

The mains wiring at the place of installation has to be laid separately from the sub-distribution to the terminal block -X0.

Removing the insulation

1. Make sure that the power supply is externally disconnected and that it cannot be reconnected. Ensure no voltage is applied.
2. If necessary, shorten the mains wiring to the required connection length.
3. Insulate the feeder and the individual wires according to the following illustration. Do not damage the insulation of the individual wires when stripping the wires.

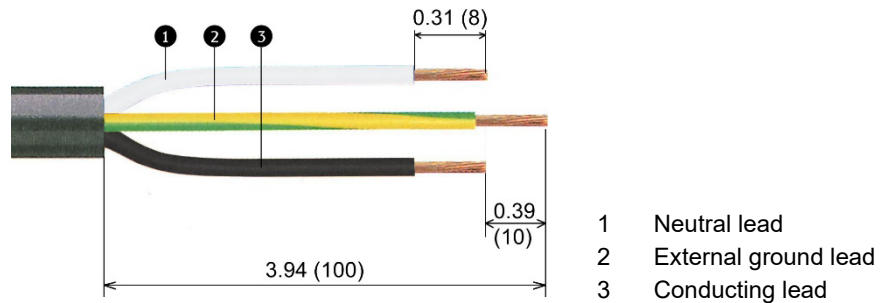


Fig. 28: Removing the insulation: Dimensions in inch and (mm)

Connecting the mains wiring

4. Connect the *external ground lead* (green/yellow) to position G of the terminal block.
5. Connect the *neutral lead* (white) to position N of the terminal block.
6. Connect the *conducting lead* (black) to position L of the terminal block.

Checking the mains wiring

7. Check whether all connections are fitted correctly and securely.
8. Check whether the *external ground lead* is correctly connected to position G of the terminal block.
9. Check whether the factory-wired *internal ground wire* is correctly connected to the device housing.

Automatic circuit breakers

The fuse protection of the connected device voltage is carried out by the automatic circuit breakers (see *chapter 5.3.5 Power distribution box on page 36*).

The automatic circuit breakers can, after switching on the power supply at the place of installation, be switched on for testing purposes (position ON, upwards), but they should stay switched off (position OFF, downwards) until final connection.

8.3 Ethernet Connection (terminal block -X2 or additional mounting rail)

Defective data transmission

NOTICE

Inappropriate connection can cause defective data transmission.

- Connection has to be carried out by DESIGNA electrical technicians or electrical technicians of DESIGNA trained and authorized partners.
- Check the already used assignments of the **Ethernet** connections in your system. These can be conducted according the standards *EIA/TIA-T568A* or *EIA/TIA-T568B*.
- Observe the chosen assignment for all Ethernet connections in your system.
- Clamp the Ethernet connection **tightly** (top and bottom) onto the mounting rail. This creates the required grounding and ensures trouble-free operation of the data line.
- Please pay attention to the enclosed instructions for preparation, wiring and mounting of the *Ethernet connection* as well as to the following description.
- Do not damage the insulation of the individual wires when stripping off the sheath.

The **Ethernet (LAN)** line is connected to the *Ethernet connection*.

The component *Ethernet connection* is part of the scope of delivery and is wired and mounted on site to a free location of the mounting rail

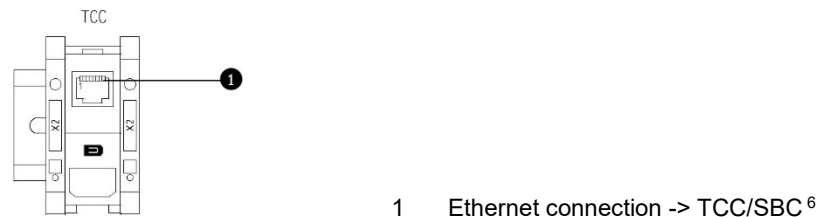


Fig. 29: Terminal block -X2; Ethernet connection

More than one *Ethernet connection* can be necessary depending on the device equipment (e.g. VoIP intercom device).

Connecting Ethernet

1. If necessary, shorten the wires of the Ethernet data line to the required length.
2. Strip off the sheath of the Ethernet data line in order to wire up the wires individually.
3. Carry out wiring and installation as described in the instructions supplied with the *Ethernet connection*.
4. Attach tightly the present connection cable of *terminal block -X2* to the *Ethernet connection*-> TCC/SBC.

⁶ or another controller board (e.g. at the DCT 120)

Assignment according to EIA/TIA-T568A

If **no** assignment has already been used or if the standard *EIA/TIA-T568A* is already assigned, conduct the wiring according to *EIA/TIA-T568A*:

i The wiring according to standard *EIA/TIA-T568A* is described in the instructions enclosed to the *Ethernet connection*.

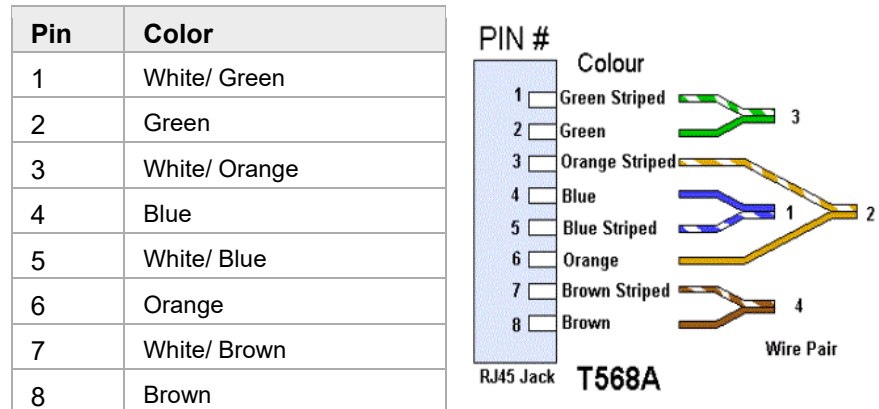


Fig. 30: Assignment of the Ethernet connection, EIA/TIA-T568A

Assignment according to EIA/TIA-T568B

Observe the assignment if it has already been used according to the standard *EIA/TIA-T568B*.

i The wiring in this case is conducted **against** the instructions enclosed to the *Ethernet connection*.

⇒ Connect the conductors *green* and *white/green* to the positions 3 and 6 of the conductors *orange* and *white/orange* of the instructions and vice versa:

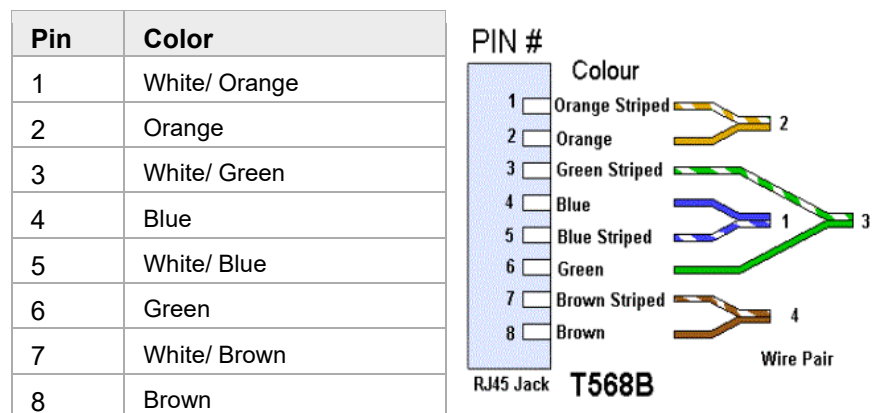


Fig. 31: Assignment of the Ethernet connection, EIA/TIA-T568B

8.4 Connection intercom device (terminal block -X2 or VoIP)

Defective data transmission

NOTICE

Inappropriate stripping can cause defective data transmission.

- Connection has to be established out by DESIGNA technicians and/ or DESIGNA's authorized partners.
- Be careful not to damage the insulation of the individual wires when stripping off the sheath.

Connection intercom device (terminal block -X2)

If the intercom device requires a 2 or 4-wire (see *chapter 5.2.11 Intercom device on page 30*), the cable of the intercom circuit is connected to terminal block -X2.

The wiring of the intercom system is carried out star-shaped, i.e. a line is laid from each device PAY COINLESS to the central switchboard for intercommunication.

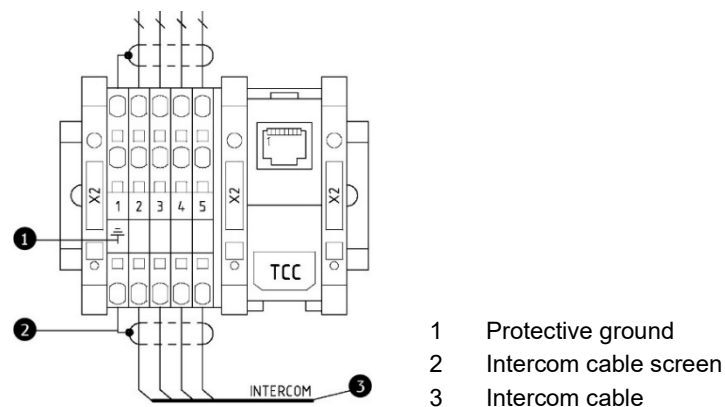


Fig. 32: Terminal block -X2, connection intercom system, with 4-wire connection

1. If necessary, shorten the wires of the *intercom cable* ③ to the required length.
2. Strip off the sheath of the *intercom cable* ③ in order to wire up the wires individually.
Use the wire-braiding as *intercom cable screen* ②.
3. Remove approx. 0.31 in (approx. 8 mm) of the insulation at the ends of the wires.
4. Clamp the wires to the terminal block.
2 wires (standard intercom device): terminal positions 2+3
4 wires (optional two-way intercom device): terminal positions 2-5
5. Connect the *intercom cable screen* ② to the terminal *protective ground* ①, terminal position 1.

Connection intercom system (VoIP)

DESIGNA VoIP

The integrated VoIP intercom device *DESIGNA VoIP* does not require a separate connection during installation.

Other VoIP intercom devices

An (additional) *Ethernet connection* is used if other optional VoIP intercom devices are installed.

Connection: See *chapter 8.3 Ethernet Connection (terminal block -X2 or additional mounting rail)* on page 54.

9 Testing in accordance with accident prevention regulations

Electric voltage

DANGER

Danger of death due to electric shock!

Direct contact with live electrical equipment is potentially lethal.

- According to the accident prevent regulations testing should only be carried out by fully trained and qualified electricians.

The efficient working order of electrical systems and equipment must always be checked prior to initial start-up, after any changes or repairs and at regular intervals.

In Germany, testing must satisfy the requirements specified by the accident prevention regulations (DGUV-V3). Appropriate regulations apply in other countries. Always comply with the relevant regulations.

9.1 Initial device testing

The device PAY COINLESS has been tested ex-works in accordance with the accident prevention regulations (DGUV-V3). Testing was carried out in line with recognized standards of good engineering practice⁷.

The following tests were executed.

Visual inspection

A visual inspection of the insulation, grounding, strain relief, etc.

Protective grounding conductor test: Measuring the continuity of the protective grounding conductor

This test involved measuring the continuity of the protective grounding conductor. Relevant measurements are carried out between the protective grounding conductor/main device connection and specified measuring points (*see chapter 9.2 Measuring points for the protective grounding conductor test on page 59*).

Measuring the fault loop impedance

This test involved measuring the resistances of the entire outward and return path of an electric circuit. The measurements were carried out between the line conductor and protective grounding conductor and the line conductor and neutral conductor using an installation tester (*see chapter 9.3 Measuring points for the fault loop impedance measurement on page 60*).

Measuring the insulation resistance

Initial testing of the insulation resistance has been carried out using a leakage current meter and the differential method.

Dielectric withstanding voltage test

The dielectric withstanding voltage test serves for testing the electric insulation capability and electric strength of the device.

Documenting the tests

All the tests have been documented in a report on initial device testing.

⁷ In Germany, e.g., DIN VDE 100 Part 600

9.2 Measuring points for the protective grounding conductor test

The following measuring points have been specified for measuring the continuity of the protective grounding conductor. The measuring points are indicated by yellow labels. If a grounding rod is specified as a measuring point, the measurement is carried out at the top of the grounding rod (not at the protective grounding conductor).

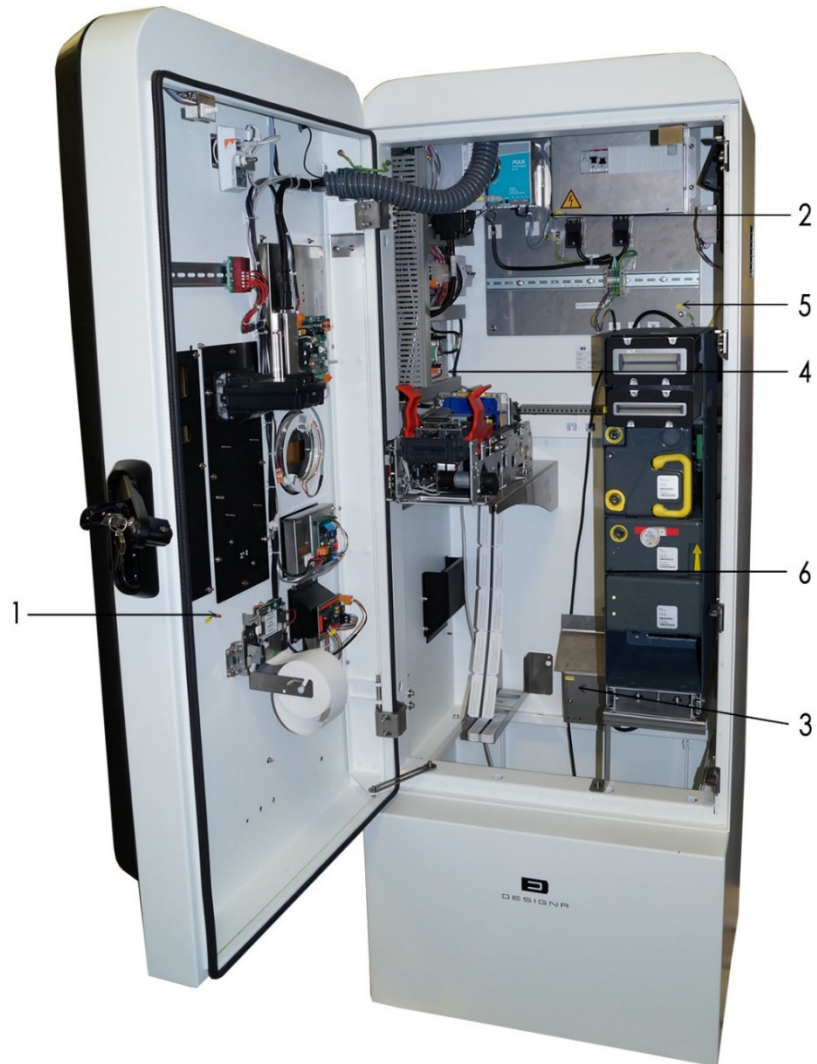


Fig. 33: Measuring points

- 1 Measuring point TP2: Pin at the door
 - 2 Measuring point TP3: Grounding rod at the power distribution box
 - 3 Measuring point TP4: Metal housing of the heater (optional)
 - 4 Measuring point TP8: Grounding rod at the mounting plate with 24 V components
 - 5 Measuring point TP10: Grounding rod at the mounting plate with power distribution box
 - 6 Measuring point TP9: Banknote recycler (housing) (optional)
- Not shown:
- 7 Measuring point TP1: Grounding rod in the pedestal (left-hand)

9.3 Measuring points for the fault loop impedance measurement

The following measuring points have been specified for measuring the fault loop impedance.



Fig. 34: Measuring point for measuring the fault loop impedance

1 Socket power supply unit (X10) at the power distribution box

10 Commissioning

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Commissioning has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized partners.

Commissioning is carried out on-site according to the respective requirements of your system and is therefore not described in these operating instructions.

11 Function Check

11.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

11.2 Check condition of device

1. Check completeness of the safety labels (see *chapter 2.6.1 Product safety labels on the device on page 17*). Consult your Designa service if any are missing or the quality is below standard.
2. Check the quality of the device components.
Consult your Designa service if any damages are visible.
3. Make sure the device components are fitted correctly.
Tighten any loose screw connections.
4. Check that the plug and clamping connections are connected correctly.

11.3 Induce general function and check

1. Switch on the PAY COINLESS: (see *chapter 5.3.5 Power distribution box on page 36*).
 - The PAY COINLESS “boots (starts and sets the device components ready for functional operation) and is subsequently ready for operation.⁸ A connection to the **System server** is achieved via the **Ethernet**: If no **device configuration** is yet assigned to the **TCC/SBC**, the TCC/SBC is registered with a request in the system. The assignment is then carried out with the function *Search new TCC/SBC* at the **WinOperate** (see *separate manual Main Menu Settings*). The device is now **online**. The device specific program and further necessary data (e.g. rate information) for operation are transferred to the **TCC/SBC** (if problems

⁸ The first booting can take up to 7 minutes.

occur, "Reset 8" can be sent from WinOperate to the device (please note duration))

The PAY COINLESS carries out a self-test: The standby of the device components is checked.

2. Check at the WinOperate whether **alarm messages** occur for the newly installed device and its device components.
3. Insert the **function card** No. 2 (*TCC/SBC in operation*).
- The device is now in its normal operating mode. Please contact your DESIGNA service if problems arise during the function check.

11.4 Checking the payment and sorting functions

Device switched on.

1. Open the door of the device.
2. Remove the banknote cassette of the banknote recycler (*see chapter 13.2.3 Remove banknote cassette (function card 12 APS alarm ON/OFF) on page 82*).
Empty and reinsert the banknote cassette of the banknote recycler.
3. Extract the door switch (*see chapter 5.2.12 Door switch on page 30*).
4. Insert the function card 05 *Fill hopper* and insert a certain number of banknotes which serve as change at the PAY COINLESS (*see chapter 13.2.1 Fill change unit (function card 05: Fill hoppers) on page 78*).
Make sure that the inserted banknotes are sorted into the respective recycling cassettes.
5. Carry out several payment processes:
Insert unpaid tickets (e.g. pre-coded **replacement tickets**) and pay for them.
Check
 - the correct function of the displayed elements (display)
 - the correct change return
 - the cancellation function
 - the issuing of receipts
6. Insert the function card 06 *Empty hopper* (*see chapter 13.2.2 Empty change unit (function card 06 Empty hoppers) on page 81*).
 - The contents of the recycling cassettes are emptied into the banknote cassette of the banknote recycler.
7. Remove the banknote cassette of the banknote recycler.
 - A printout of the sum of money occurs at the receipt printer.
8. Compare the statement with the contents of the banknote cassette of the banknote recycler.

11.5 Prepare optional lost ticket

1. Remove enough tickets from a ticket magazine (accessories, e.g. entrance control terminal).
2. Place these in the *ticket storage Lost ticket* and insert the first ticket into the reading device.
Insertion of tickets: See chapter 17.3.2 *Insert new ticket belt on page 112* and 18.3.2 *Insert new ticket belt on page 125*.

11.6 Check other device components

Test intercom device

1. With the operator or another Technicians help, test the intercoms sound and speech quality to verify the duplex connection is fully functioning.

Check heater (optional)

CAUTION

Hot surface!

The surface of the heater may become hot during operation.
Contact with the heater may result in burns.
– Do not touch the surface of the heater.



The thermostat is not pre-set on delivery. The desired temperature has to be set before commissioning.
Recommended temp.: 68°F (20°C)

1. For this, adjust the control knob of the thermostat to a higher temperature setting and make sure that this activates the heater.
2. Afterwards, turn the control knob of the thermostat back to the starting position.

Check fan (optional)

1. Adjust the blue control knob of the (fan) thermostat to a lower temperature setting and make sure that this activates the fan.
2. Afterwards, turn the control knob of the thermostat back to the starting position.

12 Operation

As part of the ABACUS system the PAY COINLESS serves as an automatic pay station at which incurred parking fees can be paid. After paying the parking fee (e.g. for a **transient ticket**) the customer's ticket is coded with an **exit authorization** and the customer can then leave the parking facility, e.g. at an exit control device, where the exit authorization is checked.

Various processes can be carried out at the PAY COINLESS:

- Payment of transient tickets
- Evaluation of validations
- Renewal of monthly cards
- Charging of value cards
- Residual value disbursement of value cards
- Additional payment of monthly or value cards
- Additional payment of a prebooking (optional)
- Pay-by-Plate (optional)
- Smart Ticket Shop (optional)
- Receipt printout
- Issue of lost tickets (optional)
- Issue individual parking permissions at the device (optional)
- Requesting card parameters
- Trigger functions with function cards

These processes as well as possible error status recognition at the PAY COINLESS are described below:

- Recognize error status



All the information for processing is contained on magnetic stripe tickets: Thus, processes with magnetic stripe tickets are **offline compatible**.

However, the information for processing is only partially available on barcode tickets: Therefore, some processes are only partially **offline compatible** with barcode tickets. These restrictions are, if applicable, described below or in the operator manual *WinOperate*.

For credit card (or similar) and **RFID** processes the information about processing is in the **System server**. Actions with these media are therefore based on an **online** connection.

12.1 Payment of transient tickets

Transients are customers who request a **transient ticket** at an entrance and subsequently enter the parking facility with this ticket. After paying the parking fee the customers are free to exit the parking facility. The fee depends on the parking duration.

In order to pay for the transient ticket it has to be inserted into the **Multicon**.

The parking fee is calculated and displayed on the basis of the ticket's entrance information and the system's rate information. The PAY COINLESS is now ready to accept payments.

Depending on the optional equipment of the PAY COINLESS, the customer now has the possibility to use various mediums to pay the incurred parking fee:

- Banknotes
- Credit cards, debit cards or similar cards (optional)
- Value/Time checks (optional)

Paying with banknotes

Up to 16 different banknotes can be accepted with a banknote recycler. Certain banknotes can only be accepted for payments upwards of certain fees (**device configuration**), e.g. a \$20 banknote can only be used to pay fees of \$15 and upwards (only BNR Cashode).

Example:

The customers insert the banknote(s) into the banknote recycler, the value of the inserted banknote(s) is deducted from the parking fee and the current remaining amount is displayed. If the parking fee is less than the inserted amount, change must be returned (e.g. parking fee = \$9/ inserted amount = \$10).

The banknotes stay in the escrow until the payment process has been completed. The very same banknotes are returned if the Cancel button is pressed.

If the parking fee has been paid, an exit authorization for the ticket is assigned taking the current system settings into consideration (e.g. parking facility no., **system times**).

The ticket is returned from the reading device. The customer can request a receipt for the payment by pressing the Receipt button.

Paying with credit or debit cards (optional)

Optionally, credit or debit cards can be used as payment medium.



For credit card (or similar) processes the information about processing is in the **System server**. Actions with credit cards are therefore based on an **online** connection⁹ between the device and the System server: Information about each action is requested.

⁹ Credit card payments (up to 7) can also be accepted if the device is **offline** (actions are saved in the **TCC**). This is set in the **device configuration**. Recommended: Only accept credit card actions if the device is **online** (standard).

Paying with value/time checks (optional)

Customers use their credit cards or debit cards at the credit card reader, PIN pad terminal or NFC. The magnetic stripe, chip or NFC chip is read, a hash value¹⁰ of the card is determined and sent to the **system server**. There the data is saved together with the respective payment information in a separate file until credit card settlement takes place (*see the separate operator manual WinOperate for more information on how to carry out credit card settlement*).

During payments with credit cards the *Cancel* button can only be used to cancel the process after the parking fee has been displayed.

If the parking fee has been paid an **exit authorization** for the ticket is assigned taking the current system settings into consideration (e.g. parking facility no., **system times**).

A receipt of the payment process is **always** issued after payment with a credit card (or similar card) in the standard setting. If credit card users should be required to request a receipt, this option can be set in the **device configuration**.

If an additional fee is required when using a credit card to pay for a parking facility ticket, it will be shown separately on the receipt.

Optionally, **value checks** or **time checks** can also be used as payment medium.

These are ABACUS tickets with a certain money or time value. They are used at the PAY COINLESS to pay the incurred parking fee: When used at Automatic Pay Stations or Exit Control Terminal (**drive&pay**) the parking fee or the parking duration is reduced by the money or time value respectively.

A setting in the **device configuration** determines whether customers can use only **one** value/ time check as payment medium at the PAY COINLESS or an unlimited amount.

Customers have to insert their tickets and subsequently the value/ time checks into the Multicon. The coded money / time value is deducted from the parking fee and the current remaining amount is displayed. This can then be paid, if necessary, using other payment mediums (see above) or further value checks (configuration).

Overpayment using value/time checks occurs if the parking fee or parking duration is less than the money or time value (e.g. parking fee = \$1.50 / coded value = \$2.00). Overpayment via value/time checks **cannot** be refunded as change¹¹.

If further payment occurs with coins or banknotes, the return of change is possible.

If a customer presses the *Cancel* button during payment with a value/time check, the process is cancelled and the already inserted amount is credited to the ticket¹².

¹⁰ Bank debit card numbers are stored in the system as hash values and are therefore encrypted.

¹¹ The place which gives the checks to customers (e.g. a participating shop) can only be charged for the amount of money/time actually used (here: \$1.50) (*see Glossary/ Value checks as well as the separate operator manual WinOperate*).

¹² Only possible **online** for barcode tickets: The advance payment is credited to the ticket at the **system server**.

If the parking fee has been paid an **exit authorization** for the ticket is assigned taking the current system settings into consideration (e.g. parking facility no., **system times**). The value/ time checks are withdrawn. For this there is a *collecting box value checks* underneath the **Multicon**.

The ticket is returned from the reading device.

The customer can request a receipt for the payment by pressing the *Receipt* button.

12.2 Evaluation of validations

Various types of discounts can be issued in the ABACUS system and evaluated at the PAY COINLESS:

- Hole punch validation (magnetic stripe and barcode technology)
- Coded validation (only magnetic stripe technology)
- Rate switch card for switching to discounted rate (only magnetic stripe technology)

Hole punch validation (magnetic stripe and barcode)

The PAY COINLESS reading device recognizes a validation mark which has been punched into a transient ticket with an ABACUS hole-punch or a ABACUS ticket-punch. Up to three validations can be punched into a transient ticket. The validation is accounted for during the rate calculation: The parking fee for this ticket is based on an additionally set validation rate (*customer hole*).

Coded validation mark (only magnetic stripe)

Validation marks in magnetic stripe systems can be coded via special validation devices (e.g. TCU 120 or similar).

If a validation mark has been coded onto a transient ticket it is read by the Multicon at the PAY COINLESS. The validation mark is accounted for during the rate calculation: The parking fee for this ticket is based on an additionally set validation rate (*customer hole*, *GID* or *another parking facility number*) or subtracted a defined amount.

i

For some coded validation marks in the ABACUS system, magnetic stripe tickets with a wide central stripe (12 mm) and a Multicon with corresponding read heads are required. Please read the separate instructions of the validation devices for more information about this and the validation processes.

Rate switch card for switching to discount rate

If magnetic stripe technology is available at the Multicon (e.g. also in addition to the barcode reader), customer, membership or credit cards can be defined as *rate switch cards*. This allows a parking facility customer with this type of card to be offered a less expensive rate.

The customers use their cards to *switch to* a less expensive rate during payment at the PAY COINLESS. After inserting the transient ticket the customer has to subsequently insert the rate switch card, which is recognized by the system, the parking fee is then based on an additionally set discount rate.

12.3 Renewal of monthly cards



Some item details can only be checked **online** in barcode systems (e.g. validity). Therefore, barcode monthly cards are refused **offline**, unless the barcode system configuration allows monthly cards to enter and exit the parking facility offline.

This means certain item details are not checked offline (e.g. **validity, group time**). However, renewing always requires an **online** connection.

Monthly parkers are customers who wish to use the parking facility over a longer period of time and usually pay the incurred rate as a lump-sum in advance. In this case, the monthly parkers receive a **monthly card** as entry medium, e.g. a plastic card with magnetic stripe or pre-printed barcode, an **RFID** card, or their credit card is listed in the system as a monthly card.

Monthly cards are allocated certain validities. If monthly card self-renewal is permitted, customers can renew the cards themselves at the PAY COINLESS during specified times before and after expiry of the cards' validity.

In order to renew the monthly card it has to be inserted into the Multicon or brought close to the **RFID** antenna.

The fee for a card renewal is calculated and displayed due to the card's group and item information (coded onto magnetic stripe cards; defined in the **System server** for barcode cards, **RFID** cards or credit cards).

The PAY COINLESS is now ready to receive payments.

The customers can now use various mediums to pay the incurred parking fee depending on the PAY COINLESS equipment.

If the renewal fee has been paid, new data is allocated to the card taking the current system settings (e.g. **monthly parker group**) into consideration (coded onto magnetic stripe cards; defined in the **System server** for barcode cards, **RFID** cards or credit cards).

If necessary, the card is returned from the reading device.

The customer can request a receipt for the payment via the Receipt button. ¹³

¹³ A receipt of the payment process is **always** issued after payment with a credit card (or similar card) in the standard setting.

12.4 Charging value cards



Some item details can only be checked **online** in barcode systems (e.g. *validity*). Therefore, barcode value cards are refused **offline**.

Value cards are assigned with a certain value (sum of money): This is coded onto the magnetic stripe or assigned to the card at the **System server** (Barcode + **RFID**). The incurred parking fee is deducted from the value card when exiting the parking facility. Value cards can be, e.g., plastic cards with magnetic stripe or pre-printed barcode or **RFID** cards.

If value card **charging** is possible (value card **item** details: *see separate operator manual WinOperate*), the customer can charge a new (fixed) sum of money onto the value card at the PAY COINLESS when the original value has been spent.



The value card **item** activated for this purpose is always the item activated as *Use at TCC*, irrespective of the previously allocated item for this card, when charging cards at the PAY COINLESS. (Setting *Use at TCC* in the item details: *Please also read the separate operator manual WinOperate.*)

To renew a value card it has to be inserted into the Multicon twice or brought closer to the **RFID** antenna.

The fee for charging is displayed based on the item details.

The PAY COINLESS is now ready to receive payments.

The customers can now use various mediums to pay the incurred parking fee depending on the PAY COINLESS equipment.

If the charging fee has been paid, new data is allocated to the card taking the current system settings (e.g. item details, parking facility no.) into consideration (coded onto magnetic stripe cards; defined in the **System server** for barcode cards or **RFID** cards).

The card is returned from the reading device.

The customer can request a receipt for the payment via the *Receipt* button.¹⁴

¹⁴ A receipt of the payment process is **always** issued after payment with a credit card (or similar card) in the standard setting.

12.5 Residual value disbursement of value cards

Disbursement through the parking facility customer

The current credit balance on a **value card** can be disbursed directly at an automatic pay station.¹⁵ This allows parking facility customers to receive the residual value of their value cards without having to request the help of parking facility staff.

The residual value must be a cash value (not a time value).



The residual value disbursement of value cards at automatic pay stations is not available for barcode value cards and **RFID** cards.

Disbursement is only possible when the vehicle is actually inside the parking facility, i.e. the parking facility customer must have entered the parking facility with the value card at an entrance control terminal.

It is not currently possible to disburse more than \$20 at any of the systems. This value will not be exceeded during disbursement.



Always use the respective activated **item** value card for the residual value disbursement of cards at the device PAY COINLESS, irrespective of the item issued to the card during its production. (*Settings Use at TCC, Residual value disbursement* in the item details. *Please refer to the separate operator manual WinOperate.*)

To initiate disbursement, the value card must be inserted twice in quick succession into the Multicon.

The current credit balance of the value card is displayed due to the item details.

Disbursement is not possible if there is insufficient change in the pay station or the residual value is greater than the currently configured max. residual value of \$20.

After disbursement, the card is returned from the reading device and the receipt printed.

The card subsequently entitles the parking facility customer to exit the parking facility during the lag time¹⁶ and can only be used for additional payment. It is not possible to recharge the value card.

The residual value disbursement of value cards can also be carried out by parking facility staff using the WinOperate software. The functions and operation are described in the operating manual *WinOperate*.

Disbursement through parking facility staff

¹⁵ The residual value disbursement of a value card at an automatic pay station is possible from ABACUS version x16 and higher.

¹⁶ The maximum length of stay in the parking facility after the payment process.

12.6 Additional payment of monthly or value cards



The additional payment of barcode monthly or value cards is only possible **online**.

Additional payment can be necessary for monthly cards or for value cards.

A **monthly card** is charged an additional fee if the monthly parker is still in the parking facility when the validity of the card expires. In this case, the rate is calculated from the end of the validity period to the time of payment. Otherwise, the monthly card is withdrawn and marked as deleted at the exit. A monthly card has to be additionally paid for if parking occurs outside the **group time**. On which rate this additional payment is based depends, in both cases, on the configuration of the monthly parker group. A transient rate is used if no special rate has been defined for additional payment.

A **value card** is charged an additional payment if the parking fee exceeds the residual value of the value card (if permitted by the *item details* of the value card: see *separate operator manual WinOperate*). The customer has to pay the difference at the PAY COINLESS.

To carry out additional payment the monthly or value card has to be inserted into the Multicon or brought closer to the **RFID** antenna.

The fee for additional payment is calculated and displayed due to the card data (coded onto magnetic stripe cards; defined in the **System server** for barcode cards, **RFID** cards or credit cards).

The PAY COINLESS is now ready to receive payments.

The customers can now use various mediums to pay the incurred parking fee depending on the PAY COINLESS equipment.

If the fee for additional payment has been paid, new data is allocated to the card taking the current system settings (e.g. **system times**, parking facility no.) into consideration (coded onto plastic magnetic stripe cards; defined at the **System server** for **RFID** cards or barcode cards).

If necessary, the card is returned from the reading device.

The customer can request a receipt for the payment via the *Receipt* button.¹⁷

¹⁷ A receipt of the payment process is **always** issued after payment with a credit card (or similar card) in the standard setting.

12.7 Additional payment of a prebooking (optional)

If the prebooking option is available in the ABACUS system, parking facility customers can carry out **prebookings**: a planned stay in a parking facility can be booked and paid for in advance via a web application, e.g. at the parking facility operator's website, or via a smartphone park app.

Various **ID media** can be used at the device, printed barcode, print@home ticket with QR Code (Quick Response Code), smartphone with QR Code, credit card; customer cards or number code¹⁸, etc.

Additional payment will be required for a prebooking if the parking facility customer remains in the parking facility after the validity of the prebooking has expired. In this case, a rate is calculated for the period from the end of validity to the time of payment.

The **ID medium** is used for additional payment at the PAY COINLESS device. The information is read and requested from the **system server**. The data is then used to calculate and display the additional payment fee.

The PAY COINLESS is now ready to receive payments.

The customers can now use various mediums to pay the incurred parking fee depending on the PAY COINLESS equipment.

Once the additional payment fee has been paid, the new data is allocated to the ID medium whilst taking the valid system settings (e.g. **system times**, parking facility no.) into account.

The customer can request a receipt for the payment via the *Receipt* button.¹⁹

12.8 PAY BY PLATE (optional)

The PAY BY PLATE function is part of the DESIGNA Ticketless concept. The license plate number recognized by LPR cameras serves as an identification medium in the parking system for entry, payment and exit.

At the entrance, the system automatically registers the license plate as an access medium along with the corresponding entry data.

When entering the license plate number at the automatic pay station, this entry data is compared with the data stored in the system. The registered license plate with the corresponding entry data is used as the basis for payment at the pay station.

At the exit, the license plate is read automatically and the data is checked in the system.

For more information, see separate instructions Full-Touch Display.

¹⁸ Not available at BlueEdition devices.

¹⁹ A receipt of the payment process is **always** issued after payment with a credit card (or similar card) in the standard setting.

12.9 PARK SHOP (optional)

In the ABACUS system, a PARK SHOP can be set up at the automatic pay stations. With the corresponding license, the PARK SHOP function can be called up on the touch display at the pay station. At the PARK SHOP the parking lot customer can buy parking permissions at a fixed price for a predefined time period (e.g. a day ticket)

Parking permissions issued in the PARK SHOP are set up in the system as Vending machine items.

Two function variants can be configured in the system:

Vending machine



The parking lot customer taps the Buy Ticket button on the pay station display and selects the ticket with the required validity at a fixed price. After paying the displayed amount, the parking lot customer uses the issued ticket to enter the parking lot. The ticket can now be used according to its validity for the corresponding time period. An additional payment will be required if the valid time period is exceeded.

Recode²⁰



The parking customer takes a transient parker ticket at the entrance or drives in via license plate recognition. For payment, the customer inserts the ticket into the pay station or enters the license plate number. The amount due is displayed. The parking customer taps on the *Recode* button and can then select the vending ticket with the desired validity period at a fixed price. After payment, the car park customer receives a recoded monthly parker ticket or, in a ticketless system, can use their license plate number in accordance with the recoding information.

For more information, please refer to the separate Smart PARK SHOP user manual.

12.10 Issue receipt

Receipt printout upon request

After the payment process, tapping the *Receipt* button triggers a receipt printout. The receipt can be printed until the button disappears (approx. 30 seconds).

Subsequent receipt printout

The last ten unrequested receipts are stored in the ring buffer of the **SBC/TCC**.

If the parking lot customer did not request a receipt during the payment process, this function provides the customer with the opportunity to print out the receipt at a later date. If the ticket is re-inserted into the device after payment, the receipt is printed out automatically. This process can only be executed once. It is only possible if the requested receipt is one of the last ten unrequested receipts stored in the ring buffer.

Automatic receipt printout

In the configuration, you can specify whether a receipt is issued by default in your system when paying with girocards and credit cards. It is also possible to suppress automatic receipt printout for individual debit and credit cards in the credit card configuration.

²⁰ From system version X24.3

Digital receipt

The digital receipt can be set as default in the configuration for the entire parking system.²¹ After payment, a QR code is automatically displayed on the full-touch display, which can be scanned with the camera app to read the receipt. The receipt is downloaded as a PDF file via a link.



Fig. 35: Full touch display Digital Receipt

1. Scan the QR code with the camera app.
2. Open the link.
 - The receipt is displayed as a PDF file and can be saved separately and printed out.
 - ⇒ Tap *Wait* to extend the display period for the QR code.
 - ⇒ Tap *Close* if you do not want to digitally call up the receipt.

See also the chapter 'Display receipt details and print copy' in the separate WinOperate user manual.

12.11 Issue of lost tickets (optional)

A **lost ticket** can be issued to customers who claim to have lost their ticket. To avoid abuse of this function a price is usually charged which corresponds to the per diem rate.

Lost tickets can be optionally request via the *Lost ticket* button. For this function the PAY COINLESS has to be equipped with a respective Multicon and a ticket storage receptacle. Furthermore, the issuing of lost tickets must be allowed in the **device configuration**:

²¹ from ABACUS system version X25.4

The customer presses the *Lost ticket* button, the fee is displayed and can be paid using the usual payment mediums. The device produces a lost ticket with the current system settings for this **type of item** and subsequently issues it.

Lost tickets can be optionally issued at the PAY COINLESS via the function *Produce lost ticket* of the **WinOperate**.

See the separate operator manual WinOperate for further information about possible lost ticket settings and the function Produce lost ticket.

12.12 Issue individual parking permissions at the device (optional)

Functional Description

At the customer's request, the operator can issue a personalized **parking permission** at the automatic pay station. This function is available for both ticket-based and ticketless parking systems.

The parking lot customer enters by taking a transient parker ticket at the entrance or via license plate recognition. At the automatic pay station, the parking lot customer then wants to purchase, for example, a day ticket or a multi-day ticket.

To do this, the parking lot customer contacts the operator via the device's intercom. The operator uses the WinOperate software to generate a parking permission (e.g. a congress ticket) and sends the ticket information to the desired device using the *Produce cards* function. The fee is displayed and can be paid using the usual payment methods.

After payment, depending on the device's specifications, the ticket is printed via the Multicon or the receipt printer, or, in ticketless systems, is assigned to the license plate.

Please refer to the separate WinOperate user manual for further information on the available settings for creating tickets and the produce cards function.

12.13 Requesting card parameters

Blacklist check

In the ABACUS system the **blacklist** serves to register undesired tickets and cards at the devices. Tickets can either be put on the blacklist automatically by the system (**card not entered**) or manually (*see the separate operator manual WinOperate*).

The **blacklist check** can be switched on or off for each device at the operating interface of the **WinOperate**. If the blacklist check for the device is switched on, the entered ticket is checked to see whether it is on the blacklist or not. Listed tickets are either rejected or withdrawn.

If the blacklist check is switched off, the device also accepts cards on the blacklist.

I/O-check

The **I/O-check** (Inside/Outside-check) checks the **I/O-identification** of the ticket: For the I/O-identification of a ticket, the last used device (**TCC/SBC number**) is coded as magnetic information onto the ticket or (barcode, credit cards, **RFID** etc.) defined as information in the **System server**. Tickets with incorrect I/O-identification are rejected and marked as deleted or withdrawn.

If the ticket was last used at an Entrance or Pay Station, it is "inside" and next use, if the I/O-check is switched on, has to occur at an Exit (or Pay Station). If the ticket was last used at an Exit next use has to occur at an Entrance or Pay Station.

The I/O-check can thus stop several vehicles being taken out of the parking facility with one card (e.g. if two exits, one after the other, are attempted with the same card without an entrance having been used in the meantime) because, after using the card *once* at an exit, next use has to be at an entrance.



For **credited monthly parkers** the I/O-check always has to be switched on otherwise no rate calculation occurs (see *separate operator manual WinOperate*).



If the barcode system configuration allows monthly cards to enter and exit the parking facility **offline**, there is no offline I/O-check.

12.14 Trigger functions with function cards

Besides normal operation it is possible to trigger certain functions at the PAY COINLESS with **function cards**. For this, the loop V has to be unoccupied

If the PAY COINLESS has to be temporarily taken out of service due to an error status, it can be done using the function card 01 *TCC/SBC out of service*: No further functions are carried out and the display shows the message *Out of service*.

The reading device remains active, so that the device can be put back into operation using the function card 02 *TCC/SBC in service*. This function can also occur via the command *Device in service* at the **WinOperate**.

See the separate operator manual Function cards for further functions and the handling of the function cards.

12.15 Recognize error status

If errors or shortages occur with any of the device components, they are registered as a signal at the TCC/SBC. The TCC/SBC generates corresponding alarm messages and these are sent to the System server.

The WinOperate displays an occurred device alarm message, detailed information can be requested via the *alarm message overview* of the device (see the separate operator manual WinOperate).

13 Filling and Emptying

13.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

Filling and emptying the device

- Filling the change unit
- Emptying the change unit
- Removing the banknote cassettes

13.2 Filling and emptying using function cards



The routines, which are described below, are a selection of the most important operations initiated via function cards. For further functions: see *separate operating manual Function Cards*.

The following operational routines, to fill or empty the device and to check the sums of money, are carried out on the device PAY COINLESS with the help of function cards:

- Fill change unit (function card 05 *Fill hoppers*)
- Empty change unit (function card 06 *Empty hoppers/ Revision card*)
- Remove coin/ banknote cassette (function card 12 *APS alarm ON/ OFF*)

13.2.1 Fill change unit (function card 05: Fill hoppers)

The function card 05 *Fill hoppers* is used for following actions:

- Fill recycling cassettes of the banknote recycler BNR CASHCODE
- Optional: Fill recycling cassettes of the banknote recycler BNR MEI

Fill recycling cassettes of the banknote recycler BNR CASHCODE

The *recycling cassettes* of the *banknote recycler BNR CASHCODE* (see *chapter 20 Module Banknote Recycler BNR CASHCODE (optional)* on *page 137*) are filled via an additional function card 05. When **preparing**, this additional function card 05 must be configured accordingly (hopper no. ≠ 0). Please refer to the *separate operator manual WinOperate*.

1. Insert the additional function card 05 (configured for the banknote recycler) into the reading device.
2. Enter the desired number of banknotes for the *recycling cassettes* via the banknote reader.

Each banknote is inserted separately. The banknotes are recognized by the banknote reader, sorted into the corresponding *recycling cassette* and counted. Banknotes which are not recognized by the banknote reader are rejected.

- During filling, the display of the PAY COINLESS indicates the level of the cassette counters: The number of banknotes is displayed which still have to be inserted until the maximum filling level is reached. The maximum filling level is specified in the **device configuration**.



If the configuration of the maximum filling level is less or equal to 50 banknotes, any excess banknotes which may be in the recycling cassette are automatically emptied into the banknote cassette until the configured maximum filling level is achieved. Automatic filling will, if necessary, then commence.

3. Finish the filling process by pressing the *Cancel* button and remove the function card from the reading device.
- A filling report is printed out at the receipt printer. On this report all inserted banknotes and their allocation to the respective recycling cassettes are listed.

Filling the recycling cassettes of the banknote recycler BNR MEI

If the *module banknote recycler BNR MEI* (see chapter 21 *Module Banknote Recycler BNR MEI (optional)* on page 153) is available at the device, it is filled with additional function cards 05. These cards must be configured accordingly during **preparation** for each *recycling cassette*.

See *Prepare cards in the separate operator manuals WinOperate and Function Cards*.

The numbers 05-13 to 05-16 correspond to the holder channels in the system configuration *Coin holder/ Change return*.

The *recycling cassettes* are filled via a *loader cassette*. A loader cassette must be preset accordingly for each banknote denomination.



When filling the *recycling cassettes*, banknotes from the *loader cassette* are checked at the *main module* and sorted into the respective *recycling cassette*. Unrecognized or non-permitted banknotes are sorted into the *banknote cassette*, but are not counted.

Recommendation: Use an empty *banknote cassette* for filling.

1. Unlock the locking mechanism.
2. Remove the *banknote cassette* and insert an empty *banknote cassette* into the banknote recycler.
3. Fill the *loader cassette* with the new banknotes.
4. Insert the *loader cassette* into the banknote recycler
5. Lock the locking mechanism and wait for the device reset.

6. Insert the additional function card 05, configured for the *banknote holder* of the banknote value of the *loader cassette*, into the reading device.
 - The *banknote recycler* is reset automatically and the *loader cassette* is activated.

The respective *recycling cassette* is filled to the minimum filling level. The minimum filling level is specified for each *recycling cassette*. If *recycling cassettes/ holders* exist with the same banknote denomination, they are filled simultaneously. You will then be requested to remove the function card.
 - A filling protocol is printed out at the receipt printer. This protocol lists all the entered banknotes and their allocation to the *recycling cassettes*.
7. Remove the function card from the reading device.
 - The *loader cassette* is deactivated.
8. Remove the *loader cassette*.
9. Wait for the device reset.
10. If necessary, fill other *recycling cassettes* by unlocking the *locking mechanism*, inserting a new *loader cassette* with the respective banknote denomination, locking the *locking mechanism* and inserting the additional function card 05 for the respective *recycling cassette*.
11. Once all the *recycling cassettes* have been filled, check the printout to see whether the *banknote cassette* must be replaced.
12. If unrecognized or unauthorized banknotes have been sorted into the *banknote cassette* during filling, remove the *banknote cassette* used for filling the *recycling cassettes*, insert a new empty *banknote cassette* and lock the *locking mechanism*.

Alarm message at WinOperate

Use of the function card appears in the **WinOperate** as an **alarm message** with the following information:

Card: "Fill hoppers", parking facility and card no.

Hoppers filled, card no.

13.2.2 Empty change unit (function card 06 Empty hoppers)

The function card 06 *Empty hoppers* is used for following actions:

- Empty recycling cassettes of the banknote recycler BNR CASHCODE (06-13, 06-14 and 06-15)
- Optional: Empty recycling cassettes of the banknote recycler BNR MEI (06-13, 06-14, 06-15 and 06-16)

Empty recycling cassettes of the banknote recycler BNR CASHCODE

Use the function card 06-13, 06-14 and 06-15 to empty the *recycling cassettes* or the *escrow cassette* (allocation according to the **device configuration**) of the banknote recycler into the *banknote cassette* (see chapter 20 Module Banknote Recycler BNR CASHCODE (optional) on page 137).

- ⇒ Insert the function card 06-13, 06-14 or 06-15 into the reading device.
- The corresponding *recycling cassette* is emptied into the *banknote cassette* of the banknote recycler according to the respective counter readings.

Empty recycling cassettes of the banknote recycler BNR MEI

Use the function card 06-13, 06-14, 06-15 and 06-16 to empty the *recycling cassettes* of the banknote recycler into the *banknote cassette* (see chapter 21 Module Banknote Recycler BNR MEI (optional) on page 153).

- ⇒ Insert the function card 06-13, 06-14, 06-15 or 06-16 into the reading device.
- The corresponding *recycling cassette* is emptied into the *banknote cassette* of the banknote recycler according to the respective counter readings.

Alarm message at WinOperate

Use of the function card appears in the **WinOperate** as an **alarm message** and contains the following information:

Card: Empty hoppers, parking facility and card no.

Hoppers emptied into coin/ banknote cassette, card no.

13.2.3 Remove banknote cassette (function card 12 APS alarm ON/ OFF)

NOTICE

Removal of the banknote cassette at devices that are out of service may result in cash book inconsistencies!

If the banknote cassette is removed when the device is out of service, the sums of this removal are added to those of the subsequent removal. This may result in cash book inconsistencies.

- Only remove the banknote cassette when the device is in service.

With alarm siren

If an optional alarm siren has been installed in the automatic payment station, the function card 12 *APS alarm ON/ OFF* is used to authorize the access to the device and to switch off the alarm.

1. Insert the function card 12 into the reading device.
 2. Open the door of the device.
- No alarm is triggered.

Without alarm siren

At devices without alarm siren the function card 12 *APS alarm ON/ OFF* is used to make obvious that activities at the device are carried out by operating personnel (e.g. opening the pay station door).



If the **alarm messages** *Pay station door has been opened* or *Banknote cassette has been removed* appear without the preceding card message *APS alarm ON/ OFF*, it indicates unauthorized access.

Remove banknote cassette

In general the function card 12 is used e.g. before the removal of the banknote cassette:



At devices with an alarm system, always use the function card before opening the door to avoid an alarm being triggered.

1. Insert the function card 12 into the reading device.
- If an alarm siren has been installed, the alarm siren is switched off and no alarm is triggered.
- At devices without an alarm siren, use the card message *APS alarm ON/ OFF* to register as member of staff.
2. Remove the banknote cassette.
- Removal of the banknote cassette is followed by the respective alarm message *Banknote cassette has been removed*.
- A corresponding receipt showing removal of the amount of money is printed out at the receipt printer.



Please read the separate operator manual *Function Cards* for an explanation of the printout and for further information.

Alarm message at WinOperate

Use of the function card appears in the **WinOperate** as an **alarm message** and contains the following information:

- After using the function card as identification:
Card: "APS alarm ON/ OFF", parking facility and card no.
- After removing the cash cassettes:
Banknote cassette has been removed, card no.

13.3 Tickets and rolls

13.3.1 Filling Supply of tickets Lost Ticket (optional)

1. Check the supply of tickets in the lost ticket.
2. If necessary, replace the loaded ticket belt or have a ticket belt ready, if an imminent exchange is expected.
Please pay attention to the insertion direction of the tickets into the reading device when replacing the belt (*see chapter 17.3.2 Insert new ticket belt on page 112*).

13.3.2 Value and time checks (optional)

1. Empty the *value checks collecting box*.

13.3.3 Replacing the receipt roll

1. Check the supply of paper on the receipt roll.
2. If necessary, replace the receipt roll or have a paper roll ready, if an imminent exchange is expected (*see chapter 19.4.2 Insert new paper roll on page 133*).

14 Maintenance

14.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Certain maintenance work may be carried out by Designa trained **shift manager** familiar with the operating instructions and safety instructions. All other maintenance work has to be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners and is marked accordingly.
- Switch off the device unless the work step requires a voltage supply.
- Keep moisture and dust away from live parts. Moisture or dust can cause a short circuit. If maintenance is carried out during precipitation, e.g. rain or snow, prevent the penetration of moisture using suitable measures such as a protective cover.

Inappropriate cleaning

WARNING

Risk of injury from inappropriate cleaning!

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage to the device.

There are sensitive electronic components inside the device. Dust and moisture can have a negative effect on the accuracy and the service life of the individual components.

Aggressive cleaning agents and auxiliary materials can damage or destroy the components or surface coating of the housing.

- Always keep the inside of the device clean and ensure that no moisture enters into it.
- If necessary, completely wipe off any water from the housing or door before opening the device.
- Do not use aggressive cleaning agents, such as thinners or cleaning solvents, to clean the device.
- Do not use any steam cleaners or high-pressure cleaners.

Personal protective equipment

The following must be worn during all work:

- Work clothes
- Protective gloves
- Safety shoes

14.2 Cleaning items

The following cleaning items can be ordered from DESIGNA:

DESIGNA order no.	Description	Table of contents
7232148932	Cleaning tickets for Multicon MC 120	10 tickets
7232148935	Cleaning strips for receipt printer	15 strips
7232148939	Cleaning set for PIN pad	2 cleaning tickets with moving slider 3 pre-soaked cleaning tickets
7232148941	Cleaning cloths soaked with plexiglass cleaner	10 cloths
7232148915	Cleaning fluid	100 ml
7232148909	Compressed air spray	400 ml
7232148929	Cleaning starter kit	1 microfiber cloth 1 small cleaning ticket for MC 100/120 1 large cleaning ticket for MC 120 1 compressed air spray 100 ml 2 disinfectant cloths

14.3 Maintenance Schedule

The following sections describe maintenance work that is necessary to guarantee reliable and trouble-free operation.

Certain maintenance work may be carried out by Designa trained operating personnel familiar with the user manual and the safety instructions, called **shift manager** in this manual. All other maintenance work may only be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners and is marked accordingly.

Maintenance intervals are given in months or cycles, depending on whichever comes first.

The maintenance intervals should be seen as approximate values and may differ depending on the ambient conditions and frequency of use.

If an increase in contamination is detected during routine inspections, the specified maintenance intervals must be shortened on the basis of the actual level of contamination.

Perform maintenance work during periods of low traffic so as not to interrupt normal service.

Have replacements of the individual components at the ready so that they can be replaced as part of extensive maintenance work.

If you have any questions about maintenance work and intervals, contact your Designa Service.

14.3.1 General maintenance

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Visual inspection of device and components	x					x				
Checking safety relevant user guidance stickers and images <i>See Checking safety labels on page 95</i>	x			x						
Housing <i>See Cleaning the housing on page 95</i>										
Check door locks and bolts for ease of movement	x					x				
Check illuminant (e.g. lightning attachment, dispensing tray), replace if necessary	x					x				
Clean housing exterior	x						x			
Clean front plate	x						x			
Clean device interior	x							x		
Adjusting device door, grease hinges	x							x		
Check door switch	x							x		
Check tariff field for damage	x							x		
Check the device interior and exterior as well as all the fastening materials for damage and corrosion and, if necessary, eliminate corrosion damage, touch up paintwork		x						x		
Make sure the housing and bolt connections are secured firmly		x						x		
Display <i>See Check ticket imprint on page 116</i>										
Clean display and check it for damage	x					x				
Check presentation of all display segments, set intensity	x					x				

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Check firmware version of the display, update if necessary		x						x		
Checking intercom and speech connection <i>See Checking speech contact on page 96</i>	x						x			
Connection, cabling, voltage, grounding										
Check electrical cables for damage		x						x		
Make sure cable connections (terminal strips and plugs) are inserted correctly		x						x		
Visually inspect all the ground connections		x						x		
Measure voltages		x						x		
Checking and adjusting heater (in the winter) <i>See Checking and adjusting the heater with thermostat on page 96</i>	x			x						
Checking and adjusting fan (in the summer) <i>See Checking and adjusting the fan with thermostat on page 97</i>	x			x						
2D Barcode scanner <i>See chapter Cleaning the barcode scanner on page 97</i>										
Check and clean 2D Barcode scanner	x			x						
Check firmware version of the 2D Barcode scanner and, if necessary, update it		x						x		
Cleaning and checking surveillance camera (visual inspection)	x			x						
Cleaning PIN pad <i>See Cleaning PIN pad on page 97</i>										
Clean chip contacts using a slider ticket	x		x							
Clean chip and magnetic track reader using a cleaning ticket	x				x					
Check correct functioning	x							x		

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
RFID systems										
Check correct functioning	x							x		
Check EasyMove antenna for damage and, if necessary, make sure it is inserted correctly	x							x		
Alarm system, check function	x							x		
MP3-Modul, check function	x							x		
DSL modem, check function		x						x		
Journal Printer										
Check print function, adjust ticket imprint	x			x						
Replace ink ribbon if necessary	x			x						
Functional test after completion of maintenance		x						x		
Testing to German accident prevention regulation (DGUV-V3) <i>See Testing in accordance with accident prevention regulations on page 58</i>		x						x		

14.3.2 Maintenance of modules

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrical technician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Multicon MC 120 <i>See Maintenance services for the Multicon MC 120 on page 113 and Filling and emptying services for the Multicon MC 120 on page 112</i>										
Clean ticket transport routes and write(/read) unit using the DESIGNA cleaning ticket	x			x						30,000 tickets
Clean ticket transport routes, write(/read) unit and cutters using compressed air	x			x						30,000 tickets
Clean transport rollers using a microfiber cloth	x			x						30,000 tickets
Clean reading heads and/or barcode glass panel of the write(/read) unit using a microfiber cloth	x			x						30,000 tickets
Clean wire matrix printer head or thermal printer head using a microfiber cloth	x			x						30,000 tickets
Prepare test ticket, check the ticket imprint and, if necessary, change the ribbon cartridge	x			x						30,000 tickets
Prepare test ticket, check the ticket cutting position and, if necessary, readjust it	x			x						30,000 tickets
After completing maintenance work, check that connecting cables are inserted correctly	x			x						
After completing maintenance work, check and align the position of the Multicon insertion slot	x			x						
Check ticket transport routes, write(/read) unit, wire matrix printer or thermal printer and clean thoroughly		x						x		250,000 tickets
Check firmware version and, if necessary, update it		x						x		

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrical technician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Multicon MC Barcode <i>See Maintenance services for the Multicon MC Barcode on page 125 and 18.3 Filling and emptying services for the Multicon MC Barcode on page 124</i>										
Clean ticket transport routes, ticket printer with cutter and barcode ticket reader with compressed air	x			x						30,000 tickets
Clean thermal line using a microfiber cloth	x			x						30,000 tickets
Clean transport rollers using a microfiber cloth	x			x						30,000 tickets
Clean glass panel of the barcode card reader and the mirror using a microfiber cloth	x			x						30,000 tickets
After completing maintenance work, check that connecting cables are inserted correctly	x			x						
After completing maintenance work, check and align the position of the Multicon insertion slot	x			x						
Check firmware version and, if necessary, update it		x						x		

	Required qualification		Maintenance intervals							
	Operating personnel	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
TCC <i>See Carrying out maintenance work at LCC on page 102</i>										
Check battery (type LCC), replace if necessary	x							x		
Check plug contacts		x					x			
Check battery (type LCC), replace if necessary		x						x		

	Required qualification		Maintenance intervals							
	Shift manager	DESIGNA electrical technicians	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Receipt printer <i>See Maintenance services for the receipt printer on page 134 and Filling and emptying services for the receipt printer on page 132</i>										
Clean receipt printer with compressed air	x							x		
Clean receipt printer with cleaning strips	x			x						

	Required qualification		Maintenance intervals							
	Operating-personnel	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Banknoten-Recycler BNR CASHCODE <i>See Carrying out maintenance work at the banknote recycler BNR CASHCODE on page 142 und Filling and emptying the banknote recycler BNR CASHCODE on page 141</i>										
Remove external contamination from the banknote recycler using compressed air or a damp cloth	x			x						
Check and clean banknote reader	x						x			
Clean change module	x						x			
Check and clean banknote reader	x						x			
Clean recycling and escrow cassette, check tape tension	x						x			
Clean money disbursement cassette	x						x			
Clean coin cassette and, if necessary, oil the spring	x						x			
Check connection cable for tight fit	x							x		

	Required qualification		Maintenance intervals							
	Operating-personnel	DESIGNA electrician	Weekly	Monthly	Every 2 months	Every 3 months	Every 6 months	Every 12 months	Every 4 years	According to cycles
Banknoten-Recycler BNR MEI <i>See Carrying out maintenance work at the banknote recycler BNR MEI on page 162 und Filling and emptying the banknote recycler BNR MEI on page 156</i>										
Remove external contamination from the banknote recycler using compressed air or a damp cloth	x			x						
Clean coin cassette	x						x			
Clean loading cassette	x						x			
Check connection cable for tight fit	x							x		
Check and clean main module: Banknote acceptance and positioner		x						x		50.000 Banknotes

14.4 Checking safety labels

Check safety signs

1. Make sure that the safety signs near the device are visible and can always be easily read.

Check safety labels

2. Make sure that the safety labels on the Pay Coinless are visible and can always be easily read.

Check user prompting labels und diagrams

3. Pay attention to good perceptibility of the user prompting labels and diagrams.

14.5 Cleaning the housing

14.5.1 Cleaning the housing exterior

Clean the housing

1. Clean the housing regularly with a soft cloth and a mild cleanser. Clean the housing more often, if there is a high degree of soiling (e.g. dusty environment).

Clean the housing when using gritting salt in the winter

NOTICE

Gritting salt can damage the paintwork of the housing and may result in corrosion.

Clean the outside of the housing monthly with a soft cloth and a mild cleaning agent if gritting occurs in the vicinity.

14.5.2 Cleaning the Plexiglas® front panel

1. Clean the front panel with a soft cloth and a plexiglass cleaning agent.

NOTICE

Do not dry clean the front panel, dry cleaning may cause electrostatic charges to build up.

Do not use any customary microfiber clothes, abrasive agents or aggressive agents like ethyl alcohol or Isopropanol.

Recommended: DESIGNA cleaning clothes, washing-up liquid-water-solution or antistatic plexiglass cleaner.

14.5.3 Clean inside the device

1. Switch off the device.
- 2.

NOTICE

Device might become damaged.

- Pay attention to cleanliness inside the device and clean it more than once a month if there is a high degree of soiling (e.g. dusty environment).
- Do not use any aggressive agents like thinners or petroleum ether for cleaning the casing. Recommended cleanser: Washing-up liquid-water-solution.

Clean the inside of the device regularly with a soft cloth and a mild cleanser.

3. Carefully vacuum inside the device if it is very dirty beforehand.
4. Carefully vacuum the mounting plates.
5. Switch on the device.

14.5.4 Checking the door switch

1. Open the device door and check that an alarm message has been sent to the system server.
2. Pull out the door switch and make sure a closed device door is simulated.

14.6 Cleaning display

1. Clean the display with a soft cloth and a mild cleaning agent
Recommended cleanser: antistatic plexiglass cleaning agent.
2. Check the display for any damages.

14.7 Checking speech contact

1. Together with a colleague at the central switchboard for intercommunication, make sure that speech contact is established with the intercom system of the PAY COINLESS, and check the function and quality of this connection.

14.8 Checking and adjusting the heater with thermostat

Device switched on.

1. If the outside temperature falls below 50°F (10°C), check the functioning of the heater.
For this, adjust the control knob of the thermostat to a higher temperature setting and make sure that this activates the heater.

 CAUTION
Danger of burns!

The surface of the heater may become hot during operation.

Contact with the heater may result in burns.

- Do not touch the surface of the heater.

2. Afterwards turn the control knob of the thermostat back to the starting position: 20°C.

14.9 Checking and adjusting the fan with thermostat

1. Set the blue knob of the (fan) thermostat to a lower temperature setting and make sure that this activates the fan.
2. Subsequently rotate the knob of the thermostat back to the original position.

14.10 Cleaning the barcode scanner

- ⇒ Clean the plexiglass plate of the barcode scanner with a soft cloth and a mild cleaning agent.
Recommended cleanser: antistatic plexiglass cleaning agent.

14.11 Cleaning PIN pad

14.11.1 Cleaning chip contacts using cleaning ticket and slider

Switched on device.

1. Insert the cleaning ticket with the moving slider and the fleece facing up into the ticket reader.
2. Hold the cleaning ticket firmly with one hand and simultaneously move the slider back and forth several times with the other hand.
3. Mark the cleaning process on the field. When you have marked all 12 fields, dispose of the cleaning ticket.

14.11.2 Cleaning chip and magnetic track reader using a cleaning ticket

Switched on device.

1. Insert the pre-soaked cleaning ticket into the card reader.
2. Repeat this process several times.

15 Module TCC (Type LCC)

Functioning

The **TCC** (Terminal Control Computer) manages and controls the device functions with the individual program of a device in the ABACUS system. All TCC are centrally controlled by the **System server** and identified and addressed via IP addresses.²²

15.2 Design and operation

NOTICE

Incorrect LCC operation may lead to device malfunctioning.

- Ensure that the LCC housing is always closed.
If the housing is opened, the optimum heat transfer between the processor chip and the housing is no longer guaranteed which can result in the processor chip overheating.
- Avoid unnecessary switching off and on of the device PAY COINLESS.
An operating system is installed on the LCC which requires a certain “booting” period after the device has been switched off and on.



The LCC models *LCC (V3)* or *LCC (LX)* can be used.
The LCC model (LX) is marked yellow.

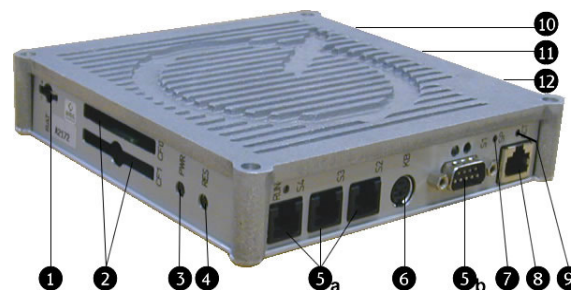


Fig. 36: TCC (Type LCC)

- 1 Battery
- 2 CompactFlash slots
- 3 Power (PWR) button
- 4 RESET button
- 5 Serial interfaces
 - 5a) 3 serial interfaces RJ12
 - 5b) Serial interface 9-pole D-Sub
- 6 Interface PS2 (keyboard)
- 7 LED Speed

²² The IP addresses are configured for your system by DESIGNA before delivery or by your DESIGNA Service in the *System configuration*.

- 8 Ethernet interface, 10/ 100 Mbps, RJ45
- 9 LED Activity
- 10 24V power supply
- 11 62-pole I/O socket
- 12 2 USB interfaces

Battery

NOTICE

SCC operation with a flat battery may result in loss of data.

The battery has a buffer capacity of approx. 3 months (LCC V3) or 4.5 months (LCC LX).

- Only use the LCC with an operational battery.²³
- Replace the battery once a year to ensure its readiness.
- Replace the battery **before** the end of a year if the total period of disconnection (e.g. long-term storage) exceeds the buffer capacity of the battery.
- Always use the type of battery specified for the LCC model.
- *Please refer to the chapter 15.3 Carrying out maintenance work at LCC on page 102.*

The *battery* supplies power to the integrated LCC SRAM and the LCC real time clock when the device PAY COINLESS is switched off or during voltage breakdowns. This prevents data loss when the mains power supply is disconnected.²⁴

LCC (V3)

Type Varta CR 1216: 3.0V; 27mAh; buffer capacity: approx. 3 months (current consumption at LCC: approx. 10µA (real time clock + 2 SRAM))

LCC (LX)

Type: Varta CR 1220: 3.0V; 35mAh; buffer capacity: approx. 4.5 months (current consumption at LCC: approx. 10µA (real time clock + 2 SRAM))

CompactFlash slots

Two CompactFlash memory cards of type I or type II can be inserted. Only slot CF0 is currently used.²⁵

The LCC operating system is saved on a CompactFlash memory card by the manufacturer and inserted at slot CF0.

NOTICE

Always leave the CompactFlash memory card in its slot.

Power (PWR) button

The switching off function of the LCC via the *Power button* is deactivated. The LCC can be switched off via the automatic circuit breaker of the device or the (optional) *ON/OFF switch*.

²³ LCC operation without a battery or with a flat battery as well as spikes when replacing the battery may result in an invalid BIOS configuration at the LCC: If an invalid BIOS configuration occurs, rebooting of the LCC after voltage interruption can take up to 15 minutes (BIOS configuration is restored using standard settings).

²⁴ In **online** mode, TCC data is transferred to and stored at the **System server**. If the battery is flat, data loss at the device can therefore only occur when the device was **offline** prior to the power failure: Data stored offline at the TCC is then not buffered. (offline + power failure + flat battery).

²⁵ The slot CF1 is e.g. used for buffering data when the options "Fiscal" or "SmartCard" are used or by DESIGNA service personnel for copying CF cards.

RESET button

By using a thin object (e.g. small screwdriver) it is possible to press the **RESET button**. This triggers a LCC **Reset**, i.e. the operating system is “rebooted” and a program run restart is triggered. This procedure takes approx. 45 sec.

Serial interfaces

The internal device communication takes place via serial connections (RS 232).²⁶



Fig. 37: Serial interfaces

Three *serial interfaces RJ12* and one *serial interface 9-pole D-Sub* are available.


- 1 COM1 (9pol. D-Sub)
- 2 COM3 (RJ 12)
- 3 COM4 (RJ 12)
- 4 COM2 (RJ 12)

Standard assignment of the serial interfaces

LCC interface	Automatic pay station	Entrance/ exit control terminal	Manual pay station	System configuration
COM1	Option (e.g. BNR 120)	Parallel/ Serial barrier gate	Option	/ttyS0
COM2	Display	Display	Display	/ttyS1
COM3	Banknote reader (BNL)	Option (e.g. EasyMove)	Option (Costumer display)	/ttyS2
COM4	Multicon	Multicon	Multicon	/ttyS3

More than four serial interfaces are required at the automatic pay stations or for **additional** options: In this case, the interface extension *USB-4-COM* is used:

Interface extension USB-4-COM (e.g. automatic pay station)

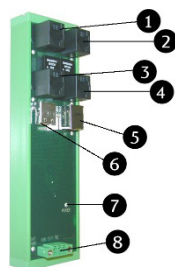

- 1 S10 (RJ12)
- 2 S9 (RJ12)
- 3 S8 (RJ12)
- 4 S7 (RJ12)
- 5 USB "Down"
- 6 USB "Up"
- 7 LED Power
- 8 24V power supply

Fig. 38: Interface extension USB-4-COM

The *USB-4-COM* is connected from the *USB "Up"* ⑥ contact to the *USB 1* interface (see below) at the LCC.

²⁶ Possible signal conversion for parallel device components (i.e. older barrier models and complex barrier applications) takes place via the *Module I/O interface* (see separate module chapter).

USB-4-COM Standard assignment of the serial interfaces (e.g. automatic pay station)

Interface	Standard assignment: Connected components	System configuration
COM 5	Coin processing unit (MVE)	/dev/ttyUSB0
COM 6	(Serial) Receipt printer	/dev/ttyUSB1
COM 7	Option (e.g. EasyMove)	/dev/ttyUSB2
COM 8	Option	/dev/ttyUSB3

Depending on the application a second *USB-4-COM* interface extension can be requested. It is connected to *USB "Down"* ⑤ of the first *USB-4-COM*. The serial interfaces of the second *USB-4-COM* are assigned customer specifically.

Interface PS2 (keyboard)

Not currently used.

LED Speed

The *LED Speed* displays information about the current status of the **Ethernet** connection: The LED continuously lights up at 100Mbps and goes off at 10Mbps.

Ethernet interface, 10/100 Mbps, RJ45

The **LAN** (Local Area Network) is connected to the *Ethernet interface* at the LCC.

LED Activity

The *LED Activity* displays information about the current status of the **Ethernet** connection: The LED displays transmission and reception activity during data transfer.

24V Power supply

The LCC is supplied with 24V DC via the power supply.

62-pole I/O socket

The optional *TFT-Display* is connected to the *62-pole I/O socket*.

2 USB interfaces

If the *USB-4-COM interface extension* is used at the device PAY COINLESS, it is connected to the *USB 0 interface*.

The *USB 2 interface* is not currently used.

15.3 Carrying out maintenance work at LCC

15.3.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Occupational safety and environmental protection

WARNING

Risk of harm to humans and the environment as a result of improper disposal of rechargeable batteries and batteries.

Improper disposal of rechargeable batteries and batteries can be harmful to human health and the environment.

- Remove batteries and rechargeable batteries from all the components.
- Dispose of the batteries and rechargeable batteries according to valid country-specific environmental regulations.

Replacing the battery

NOTICE

LCC operation without a battery or with a flat battery may cause data loss.

The buffer capacity of the battery is approx. 3 months (*LCC V3*) or 4.5 months (*LCC LX*).

- Only use the LCC with an operational battery.²⁷
- Replace the battery once a year to ensure its readiness.
- Replace the battery before the end of a year if the total period of disconnection (e.g. long-term storage) exceeds the buffer capacity of the battery (3 months (*LCC V3*) or 4.5 months (*LCC LX*)).
- Always use the type of battery specified for the LCC model.
- Replace the battery with the device PAY COINLESS switched on to prevent spikes*¹ when replacing the battery.

15.3.2 Replacing the battery



Fig. 39: Replacing the battery at the LCC

Device switched on.

1. Use a pair of tweezers to remove the old battery from the battery compartment of the LCC.
2. Insert the new battery as follows:

The positive terminal (+) faces the side of the LCC displaying a "Q".

(The figure shows the usual installation direction of the LCC in devices of the ABACUS system.)

²⁷ LCC operation without a battery or with a flat battery as well as spikes when replacing the battery may result in an invalid BIOS configuration at the LCC: If an invalid BIOS configuration occurs, rebooting of the LCC after voltage interruption can take up to 15 minutes (BIOS configuration is restored using standard settings).

16 Module I/O Interface Midi-P-USI (12 I/O) (optional)

Functioning

The module *I/O interface* is optionally used at the device PAY COINLESS. The I/O Interface is serially connected to the TCC/SBC and provides digital inputs and outputs for communication between the TCC/SBC and functional units in the device or a connected barrier gate (parallel connection).

16.2 Design and operation

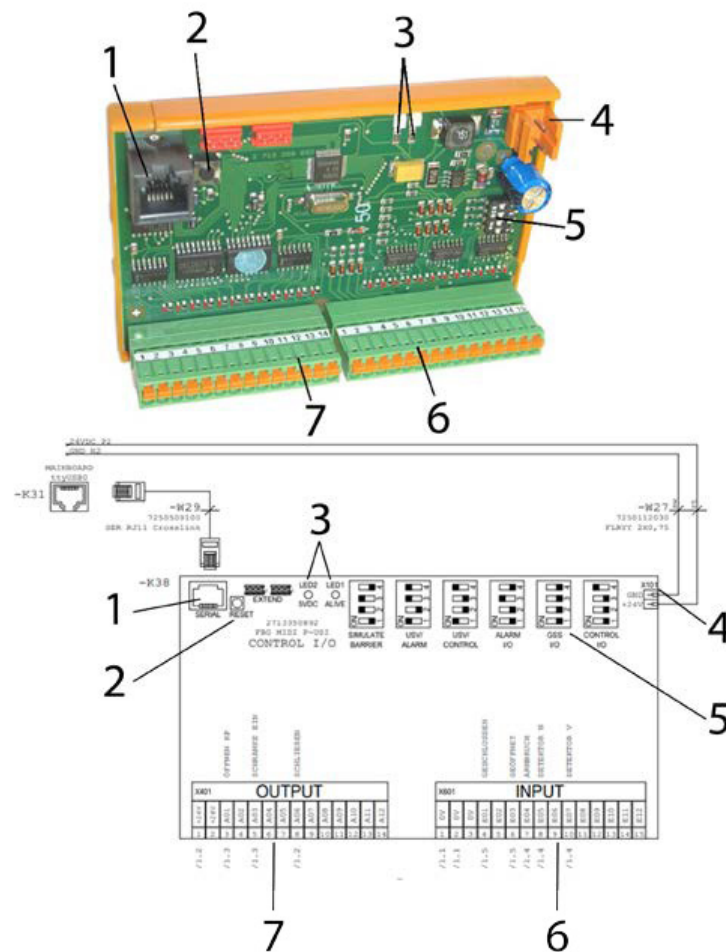


Fig. 40: I/O interface Midi-P-USI (here I/O interface assignment of an entrance control terminal)

- 1 Serial connection
- 2 Reset button
- 3 LED power supply
- 4 24 V power supply
- 5 Function DIP switch
- 6 Inputs E1-E12
- 7 Outputs A1-A12

Serial connection

The TCC/SBC is connected via the *serial connection*.

Reset button

Use the *Reset button* to reset (restart) the program runs of the I/O interface Midi-P-USI.

LED power supply

The two *LEDs power supply* display the correct power supply for the I/O interface Midi-P-USI.

Continuously lit LED 5 V (on the left in figure): Logic power supply OK

Continuously lit LED 24 V (on the right in figure): Operating power supply OK

24 V power supply

The I/O interface Midi-P-USI is supplied with 24 V DC via the *24 V power supply*.

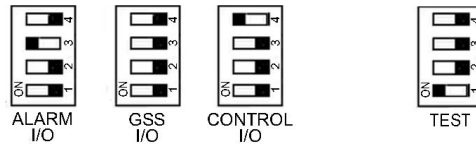
Function DIP switch

Fig. 41: DIP switch positions

The function with which the I/O interface Midi-P-USI is used at the device PAY COINLESS is set at the *function DIP switch*:

Control I/O

Communication between the TCC/SBC and the functional units in the device

Alarm I/O

The same as *Control I/O*, but with a different configuration of contact E03 and A12.

GSS I/O

Communication between the display and buttons (for optional *TFT display*)

Test mode

The same as *I/O interface 16 I/O* (see *Technical Service Instructions I/O Interface 16 I/O*).

⇒ Press the *Reset button* to accept modified DIP switch positions.

Inputs E1-E12

The I/O interface Midi-P-USI has twelve *inputs E1-E12*.

The inputs switch low active.

(The plug of the inputs is equipped with 13 pins to ensure correct insertion.)

Outputs A1-A12

The I/O interface Midi-P-USI has twelve *outputs A1-A12*.

(Not short circuit-proof, up to max. 100mA per circuit, total circuit maximum for all outputs: 300mA).

16.3 Assignment of contacts

The inputs and outputs are assigned as follows depending on the function in the device:

I/O interface installed as “Control I/O” or “GSS I/O”

Name of inputs + outputs / Plug position		Assignment of contacts if installed as	
	Midi-P-USI	Control I/O	GSS I/O ²⁸
Inputs (low active)	E01 / 4	Free	Ticket request
	E02 / 5	Receipt request	Cancel
	E03 / 6	Device door	Receipt request
	E04 / 7	Coin processing unit (MVE) door	Language toggle
	E05 / 8	Banknote cassette	Payment confirmation
	E06 / 9	Cancel	Lost ticket
	E07 / 10	Coin cassette	Ticket shortage
	E08 / 11	Lost ticket	Door switch
	E09 / 12	Issue debit card	Free
	E10 / 13	Language toggle	Free
	E11 / 14	Ticket shortage	Free
	E12 / 15	UPS (Battery low)	Free
Outputs (0V switching)	A01 / 3	MVE coin shortage	(Arrow) Ticket request/ Multicon
	A02 / 4	Door opener	Illumination dispensing tray
	A03 / 5	Free	(Arrow) Coin slot
	A04 / 6	Paper shortage printer	(Arrow) Banknote reader
	A05 / 7	Coin cassette full	(Arrow) SmartCard
	A06 / 8	Banknote cassette full	(Illuminated button) Cancel
	A07 / 9	Free	(Illuminated button) Receipt
	A08 / 10	Device in operation	Free
	A09 / 11	Free	Free
	A10 / 12	EasyMove out of service	Free
	A11 / 13	Free	Free
	A12 / 14	Alarm siren (Alarm I/O)	Free

I/O interface installed as “Alarm I/O”

If the I/O interface is installed as “Alarm I/O”, a signal output is immediately set to *Alarm siren* (A12) when the signal input *Device door* (E03) occurs. This alarm is triggered without a control via the **TCC**.

²⁸ Devices with TFT display: GSS I/O replaces the I/O functionality of the LC display controller

The function card 12 *APS-Alarm ON/ OFF* is then used to authorize device access prior to opening the device door and to switch off the alarm (see *chapter 13.2.3 Remove banknote cassette (function card 12 APS alarm ON/ OFF) on page 82*).

17 Module Multicon MC 120



The description of the Multicon below as DESIGNA system module includes its complete functions for all devices. Information about specific functions or variants which are only available for certain devices is referred to separately.

17.1 Functioning

The Multicon MC 120 is used to process tickets and cards and can be equipped with magnetic stripe and/ or barcode technology. Depending on the device and the applied technology, various equipment levels are possible.

17.2 Design and operation

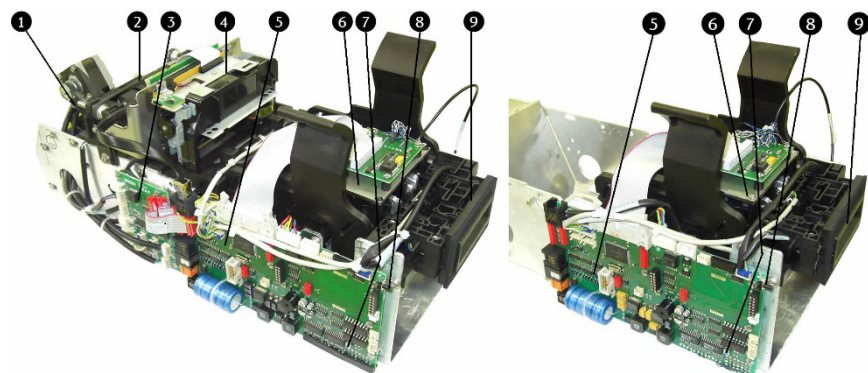



Fig. 42: Multicon with magnetic stripe technology (example for equipment at INT (left) and OUT (right))

- 1 Feeding unit and rear parking position
- 2 Self-sharpening cutter
- 3 PCB MC 120 paper feeder + cutter
- 4 Ticket printer (here: dot matrix printer in magnetic stripe system)
- 5 PCB MC 120 mainboard
- 6 Write(/read) unit (here: in magnetic stripe system)
- 7 Reset button
- 8 Test ticket button
- 9 Multicon insertion slot

Not shown:

- 10 Bottom ticket draw-in (paper tickets)

Feeding unit and rear parking position

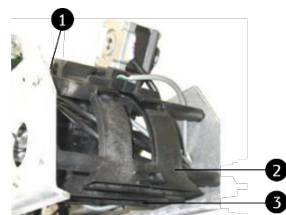

- 1 Rear parking position
- 2 Feeding channel I
- 3 Feeding channel II

Fig. 43: Feeding unit and rear parking position

Rear parking position
(feeding channel I blocked)

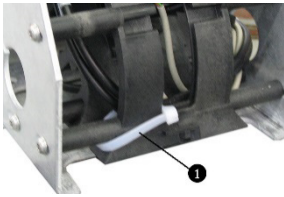


Fig. 44: Feeding channel I blocked

Feeding channel I and
feeding channel II



Fig. 45: Feeding gap MPS

Self-sharpening cutter

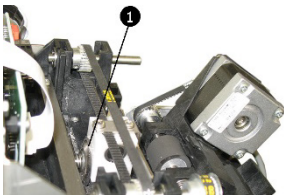


Fig. 46: Self-sharpening cutter

**FBG MC 120 Paper feeder +
Cutter**

Ticket printer

Dot matrix printer (only
magnetic stripe technology)



Fig. 47: Dot matrix printer

Paper tickets or plastic cards are “parked” in the *rear parking position* ❶ while processing other types of cards, e.g. payment processes with debit cards or credit cards or when processing **value checks**.

Feeding channel I ❷ cannot be used in case the parking position is used at the device, and is thus blocked.

i

If a *rear parking position* is desired (e.g. credit card or value check processing), do not remove the block ❶ at *feeding channel I* and refrain from using it.

The *feeding channels I+II* enable ticket feeding from a belt: Paper tickets are fed from one or two²⁹ ticket magazines to the *write(/read) unit*.

When using options (e.g. *rear parking position* (see above)), the entire *feeding channel I* should not be used and is thus blocked.

MPS 120: If necessary, *feeding gap MPS* ❶ at *feeding channel I* is used if the option “Ticket feeding from belt” is desired and carried out at the back of the housing).

The *self-sharpening cutter* ❶ enables the cutting of paper tickets from a belt.

Due to its mechanical features the cutter is self-sharpening and maintenance free.

The actions of the feeding unit and cutter are controlled via the *PCB MC 120 paper feeder + cutter*. The *PCB MC 120 paper feeder + cutter* is connected to the *PCB MC 120 mainboard* via a flat conductor cable and receives all the necessary control signals from here.

A dot matrix printer **or** a thermal printer can be used for magnetic stripe technology; barcode technology only allows the application of a thermal printer.

The printed circuit board of the ticket printer (*PCB ticket printer*) is connected to the *PCB MC 120 mainboard* and receives all the necessary control signals from here.

The dot matrix printer prints the paper tickets in plain text with digits from 0-9 and capital letters on several lines.

The number of characters per line is limited to 28.

²⁹ Only ENT 120 and IN 1307: For information on *double ticket magazine* also see the section *Device Description/ Ticket magazine holder*).

Thermal printer

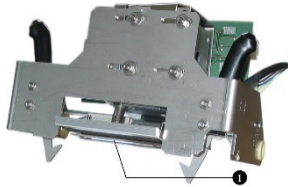


Fig. 48: Thermal printer

A thermal printer can also be used in magnetic stripe systems to utilize additional options for ticket printing (e.g. graphical presentation).

In a barcode system, a thermal printer is always used at the Multicon of the ENT 120 and APS 120 to print barcodes for ticket processing (as well as additional ticket information, if required).

The thermal printer uses thermal printing technology to print paper tickets. The number of characters per line is limited to 28. Paper tickets with an "interleaved 2 of 5" barcode are printed.

NOTICE

Always handle the thermal printer with care to prevent damages to the delicate *thermal print head* ❶.

PCB MC 120 mainboard

The magnetic track reader is equipped with a printed circuit board (*PCB MC 120 mainboard*) which has serial communication with the **TCC/SBC** and takes control of the processes.



The *PCB MC 120 mainboard* connection assignment is described in the separate instructions *PCB MC 120 mainboard*.

Write(/read) unit

The *write(/read) unit* at the Multicon depends on the applied technology:



Barcode and magnetic stripe technology can be used simultaneously at a Multicon, e.g. to ensure credit card processing in a barcode system.

Magnetic stripe technology

The *write(/read) unit* is equipped for magnetic stripe technology with side or middle write/ read heads. The data of the tickets and cards is read and, if necessary, written (coded).

The *write(/read) unit* draws in tickets and cards, or these are inserted from a ticket stripe: Depending on the **configuration** and the device, the ticket is subsequently either issued or drawn into a collecting box.

As standard, paper tickets as well as plastic cards with a side stripe and optionally also with a middle stripe can be processed (depending on the installed read/ write heads). Furthermore, discount stripes can be used in combination with middle or side stripes; these are then wide magnetic stripes (12 mm).

In order to prevent swindling (insertion of 2 tickets), new tickets are only written on from below (e.g. ticket issue at ENT 120 or **producing** of cards). Therefore, it is essential to pay attention to the position of the magnetic stripe when loading a ticket stripe at ticket issuing devices (see *chapter 17.3.2 Insert new ticket belt on page 112*).

Barcode technology

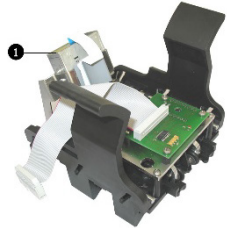


Fig. 49: Barcode card reader

The *write(/read) unit* is equipped with a *barcode card reader* ❶ for barcode technology. The ticket and card data is only read here.

Tickets and cards are inserted from the front or rear for processing. Depending on the **configuration** and the device, the tickets and cards are subsequently returned or drawn into a collecting box (see *bottom ticket draw-in*).

Paper tickets and plastic cards with barcodes (type "Interleaved 2 of 5") can be read.

If magnetic stripe processing is also desired (e.g. credit card processing), additional write/ read heads are used: This provides the same options as for pure magnetic stripe technology.

Clamp attachment

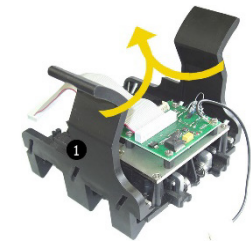


Fig. 50: Clamp attachment

The *write(/read) unit* is equipped with a *clamp attachment* ❶ which can be easily removed and replaced, e.g. when cleaning (see *chapter 17.4.3 Cleaning the ticket transport routes, write (/read) unit, cutter and ticket printer on page 115*).

Reset button

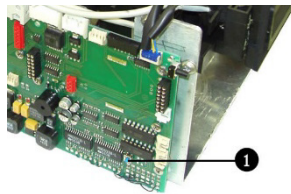


Fig. 51: Reset button

The *reset button* ❶ at the *PCB MC 120 mainboard* triggers a reset at the Multicon: Tickets are moved through the Multicon and ejected at the *Multicon insertion slot*.

The *reset button* is also used to execute a program download if a laptop is connected and/ or to read the counter readings and version no. (see *separate instructions PCB MC 120 mainboard*).

Test ticket button

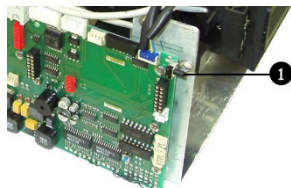


Fig. 52: Test ticket button

A "test ticket" is created at the Multicon via the *test ticket button* ❶. The test ticket allows the ticket imprint as well as the ticket cutting position to be checked).

The test ticket button is also used to adjust the ticket cutting position (see *chapter 17.4.4 Check ticket imprint on page 116*).

Multicon insertion slot

The tickets and cards are fed into the *write(/read) unit* or returned to the customers via the *Multicon insertion slot*.

Bottom ticket draw-in
(paper tickets)

Paper tickets can be drawn into a collecting box from the *bottom ticket draw-in*, e.g. value checks.

17.3 Filling and emptying services for the Multicon MC 120

17.3.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see chapter *Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

17.3.2 Insert new ticket belt

Device switched on.

1. Make sure that the ticket magazine is placed with the magazine's underside recess on the roller scanner of the *ticket magazine holder*. This is the only way that the roller scanner can check the ticket storage and send a signal to the **TCC/SBC** if there is a shortage³⁰.
2. Insert the ticket belt as follows:

Magnetic side stripe	Magnetic central stripe	Barcode
		
Magnetic stripe at the bottom	Magnetic stripe at the bottom	Unprinted, thermal coated ticket surface at the top
Fig. 53: Insert new ticket belt		

3. Insert the first ticket from the rear into *feeding channel I* or *II*.³¹
 - The ticket is automatically positioned once it reaches the light barrier.

³⁰ Only entrance control terminal

³¹ Here: Insertion at *feeding channel I* (IN).

If a *rear parking position* is used (e.g. credit cards or value check processing at the PAY), *feeding channel I* is blocked: Do not remove the block and use *feeding channel II* instead.

4. Press the *test ticket button*.
- The first ticket is now fed through the Multicon and issued as a “test ticket”.
5. Check the cutting position and print image.

17.4 Maintenance services for the Multicon MC 120

17.4.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate cleaning

WARNING

Risk of injury from inappropriate cleaning!

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Hazardous laser radiation

**WARNING****Risk of injury due to laser radiation!**

Laser radiation can cause permanent eye damage.

The (write/read) unit of the Multicon for barcode technology is equipped with a barcode scanner.

Class 2 laser product: The accessible laser radiation is not considered hazardous when used for a short period of exposure (up to 0.25 s).

- Do not stare into the laser beam.
- Work at the barcode scanner should only be carried out by specially instructed **shift managers**.
- If a power supply is required, the respective tasks at the barcode scanner should only be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.

Hazardous optical radiation

**WARNING****Risk of injury due to optical radiation!**

The Multicon is equipped with light barriers with optical radiation (infrared (IR-A)).

Optical radiation can cause permanent eye damage.

- Do not stare into the beam.
- Work at the light barriers should only be carried out by specially instructed **shift managers**.
- If a power supply is required, the respective tasks at the light barriers should only be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.

Inappropriate cleaning with air pistols

**CAUTION****Risk of injury due to inappropriate cleaning with air pistols!**

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage of the Multicon.

- Always keep the Multicon MC 120 very clean. A clean Multicon MC 120 is better protected against faults.
- When cleaning with compressed air, always make sure the jet of air from the nozzle is **not** aimed directly inside the device.
- Do not use thinners or any liquids when cleaning.
- Recommended cleanser:
 - DESIGNA cleaning tickets
 - dry microfiber cloth
 - Special, dry microfiber cloth for cleaning delicate surfaces.


17.4.2 Cleaning the ticket transport routes and (write-/) read unit with DESIGNA cleaning card

Device switched on.

1. At first, remove the ticket belts from the *feeding unit* at the rear of the Multicon.
2. Press the *test ticket* button and the *reset button* simultaneously.
3. Release the *reset button* and keep the *test ticket button* pressed until an acoustic signal sounds.
 - The Multicon is now in its cleaning mode:
A permanent ticket transport is activated into the issuing direction (from the rear to the front). The light barriers are not active as no ticket positioning is needed.
4. Insert the cleaning ticket into the *feeding unit* at the rear and remove it from the *insertion slot* in the front after it has been transported through the Multicon. (Multicon without *feeding unit* (e.g. OUT):
Insert the cleaning ticket directly into the write (/read) unit from the rear.
5. Repeat this several times using both sides of the cleaning ticket and both *feeding channels* (if two feeding channels are available).
(The feeding channels are in an alternating acceptance mode. 1 sec. each.)
 - The cleaning function stops automatically after 1 minute or can be stopped by pressing the *reset button*.
 - The Multicon is now back in its normal operating mode.

17.4.3 Cleaning the ticket transport routes, write (/read) unit, cutter and ticket printer

1. Switch off the device.
2. If necessary, pull out the retainer with the Multicon.

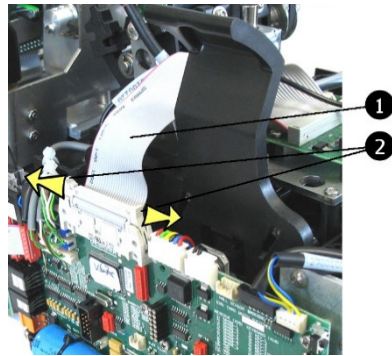

- 1 Flat cable
- 2 Retainers

Fig. 54: Disconnecting the flat cable

3. Disconnect the *flat cable* and the *earthing cable* of the write(/read) unit.
4. Move the *retainers* to the side and disconnect the *flat cable* from the top.
5. The *earthing cable* is now accessible and should also be disconnected.
6. Now squeeze the prongs of the *clamp attachment* together and remove it from the top.
7. Flip up the dot-matrix printer or thermal printer.
8. At first, clean the ticket transport route and the components of the *write(/read) unit* (top and bottom) with compressed air.
When cleaning with compressed air, always make sure that the jet of the compressed air nozzle is not directed into the interior of the device.
9. Regularly remove paper snippets and fluff from the area around the self-sharpening cutter with compressed air.
10. Clean the transport rollers of the *write(/read) unit* (top and bottom) with a dry microfiber cloth.
11. Clean the read heads of the (read/write) unit (top and bottom) and/or the barcode glass plate with a dry microfiber cloth.
12. Replace the *clamp attachment* onto the *write(/read) unit*.
13. Re-connect the *earthing cable* and the *flat cable*.
Allow the *retainers* to engage with the *flat cable*.
14. Clean the wire print head or thermal print head with a dry microfiber cloth.
15. Fold the dot matrix printer back to its original position or fold the thermal printer back, press the fixing clamps together and carefully place the thermal printer in its position.
16. Switch on the device.

17.4.4 Check ticket imprint

Device switched on.

1. Press the *test ticket button* once:
A test ticket is produced.
2. Check that a clean, clear and regular print image is available for the ticket imprint.

Dot matrix printer


3. If you discover problems despite cleaning, change the ribbon cartridge of the dot matrix printer.

Thermal printer

4. If the print image remains inadequate after cleaning, please contact your DESIGNA service. The thermal printer can be readjusted and set by your DESIGNA service department.

Change ticket printer ribbon cartridge

1. Switch off the device.
2. Pull the ticket printer upwards.
3. Lift and remove the used ribbon cartridge.
4. Insert the new ribbon cartridge.

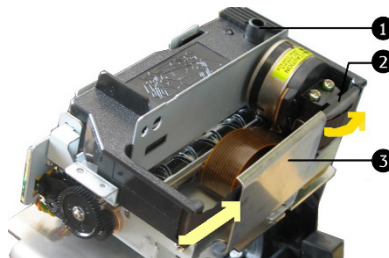

- | | |
|---|---------------|
| 1 | Turning knob |
| 2 | Print head |
| 3 | Guiding plate |

Fig. 55: Place the ribbon cartridge

5. Feed the ribbon in a way that it is guided between the *print head* and the *guiding plate*.
The ribbon cartridge has to lock into its place in the ticket printer.
6. Tense the ribbon via the *turning knob*.
7. Put the ticket printer back to its original position.
8. Switch on the device.

17.4.5 Checking and adjusting the ticket cutting position

Device switched on.

1. Press the *test ticket button* once:
A test ticket is produced.
2. Check whether the connecting bars between the tickets are being cut in the middle.
The cutting position should be exactly between the tickets in the middle of the two connecting bars. This reduces the amount of rest paper and the workload of the cutting blade.
3. Adjust the ticket cutting position if the tickets are not cut in the middle.

Adjusting the ticket cutting position

Device switched on.

1. Press the *test ticket button* for approx. 4 sec. until a signal (1x short) sounds.
2. Subsequently release the button:

- Four 4 test tickets from strip are created, cut and measured. The test tickets are purposely cut too long during the adjustment process. Once the process has been completed a signal sounds (2x short): The new cutting position has been accepted.
- 3. Now press the *test ticket button* once and check the new cutting position. Repeat the process, if necessary.

Resetting the cutting position to factory setting

1. Press the test ticket button for approx. 4 sec. until a signal (1x short) sounds.
 2. Do not subsequently release the button, but keep it pressed for a further 4 sec.
 - Once the process has been completed a signal sounds (irregular): The factory setting has been reset.

17.4.6 Checking all connecting cables are inserted correctly

1. Switch off the device.
 2. Check that all connecting cables are inserted correctly.
 3. Switch on the device.

17.4.7 Checking the correct position of the Multicon insertion slot

1. Check correct position of the Multicon insertion slot.

This should be flush with the front panel or protrude only slightly (approx. 1mm), so that tickets and cards are only inserted into the insertion slot during operation.

 2. Switch off the device.
 3. If necessary, readjust the insertion slot:
Unscrew the knurled screws which hold the Multicon in place on the mounting plate and displace it slightly.
 4. Slightly retighten the knurled screws, close the door of the device and check whether the installation position is correct.
 5. Retighten the knurled screws if the position is correct.
 6. Switch on the device.

17.5 Error analysis

Automatic routines

The following routines are automatically carried out when the Multicon is switched on (power supply) or if a reset is carried out with the reset button:

- The *Live LED* (see Fig. below) on the *PCB MC 120 Mainboard* flashes permanently (if there is no error)
 - Single initializing of the printer
 - The ticket channel is being emptied
 - An acoustic signal sounds, 2x short
- ⇒ Check these routines if incorrect operation occurs.

If an error occurs, an acoustic signal sounds (4x long), there is a subsequent pause and an error code is displayed via an acoustic signal:

1x acoustic signal

2x acoustic signal

3x acoustic signal

Cutter does not return to the idle position

Printer faulty

Ticket still in the device or jammed at the feeding unit

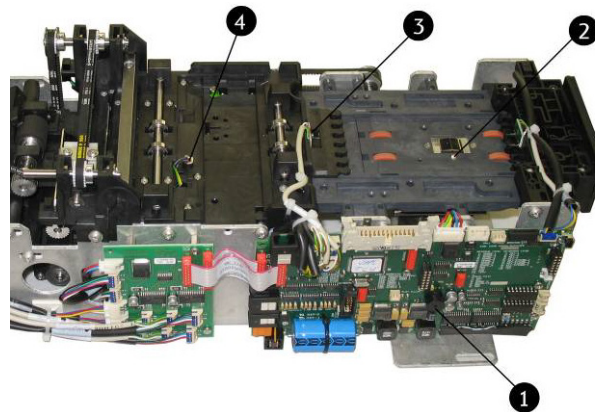


Fig. 56: Live LED and light barrier for error analysis

After 3x acoustic signal ("ticket jammed") a further error code then occurs with a different acoustic signal to define the error (version V56 and higher):

1x acoustic signal

2x acoustic signal

3x acoustic signal

4x acoustic signal

5x acoustic signal

Light barrier Magnetic head occupied or defective

Light barrier Center occupied or defective

Light barrier Printer occupied or defective

Ticket feed: Ticket belt cannot be cut

Parked ticket issuing not possible

17.6 Troubleshooting

Inappropriate troubleshooting

NOTICE

Inappropriate troubleshooting can result in damage of the device.

- Always observe the following simple troubleshooting measures.
- Simple troubleshooting measures are listed below.
Complex measures should only be carried out by trained specialized staff or by your DESIGNA service.

Error	Possible causes	Possible measures
LED at the <i>PCB MC 120 mainboard</i> does not light up	Operating state has not been achieved	Check correct connection of the power supply to the Multicon and <i>PCB MC 120 mainboard</i>
	<i>PCB MC 120 mainboard</i> disturbed/ defective	Disconnect and reconnect power supply
MC 120 or <i>ticket printer</i> initialize outside the automatic routines	One or several components are blocked	Check smoothness and freedom of operation of the <i>ticket printer</i>
	Connection cable is not connected (correctly)	Check correct insertion of the connection cable and, if necessary, insert it correctly
	Trapped tickets?	Check transport route of the ticket
Cutter is running after switching on	<i>PCB MC 120 mainboard</i> or <i>PCB MC 120 paper feeder + cutter</i> disturbed/ defective	Disconnect and reconnect power supply <i>PCB MC 120 mainboard</i> or <i>PCB MC 120 paper feeder + cutter</i>
	Connection cable is not connected (correctly)	Check correct insertion of the connection cable and, if necessary, insert correctly
Message ticket incorrect at device display	Magnetic information on the ticket is incorrect	Check magnetic information on another Multicon Recode and reinsert ticket Test the previously used Multicon
	Transport not in the correct reading position	Check the ticket's transport route and, if necessary, clean it Check the cleanliness of the transport rollers and, if necessary, clean them
	Correct insertion direction observed (side stripe?)	Observe the insertion direction
Trapped tickets	Foreign matter	Check <i>write(/read) unit</i> for foreign matter and, if necessary, clean it Check the ticket's transport route and, if necessary, clean it Check the cleanliness of the transport rollers and, if necessary, clean them
	Rough-running cutter	Check the cleanliness of the cutter and, if necessary, clean it

	Rough running MC 120 motor	Check the cleanliness of the transport belts and transport -wheels and, if necessary, clean them
--	----------------------------	--

18 Multicon MC Barcode Module



The description of the Multicon MC Barcode below as DESIGNA system module includes its complete functions for all devices.

Information about specific functions or variants which are only available for certain devices is referred to separately.

18.1 Functioning

The Multicon MC Barcode is used to process barcode tickets and cards. Depending on the device and the desired functions, various equipment levels are possible.

18.2 Design and operation

Example for equipment at the entry control terminal

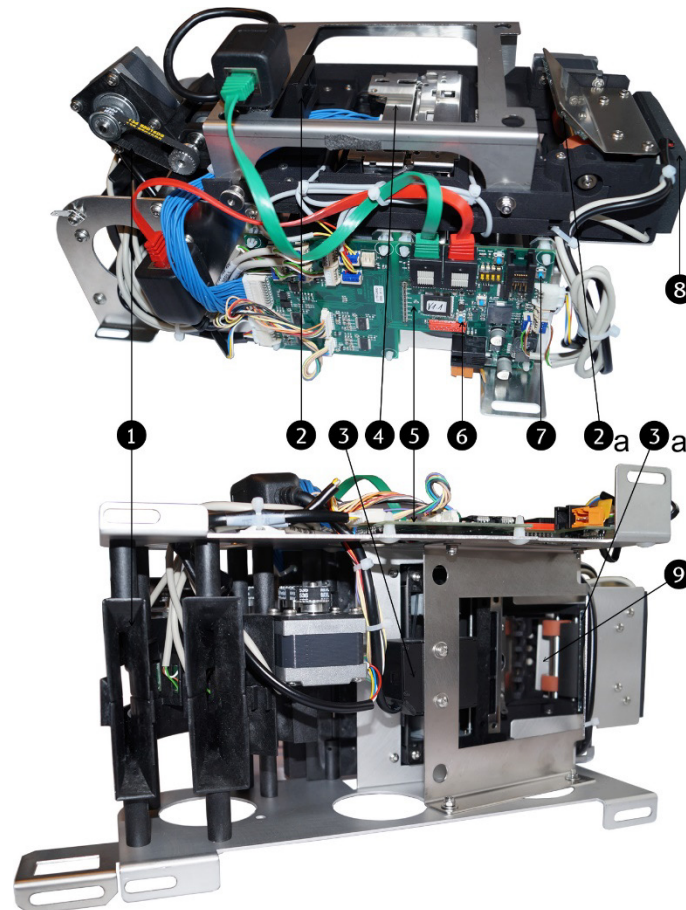


Fig. 57: Multicon MC Barcode, example for equipment at the entry control terminal

- 1 Feeding unit (here a feeding unit with two feeding channels, optional)
- 2 Barcode card reader with mirror (2a)
- 3 Barcode card reader with mirror (3a) (optional)
- 4 Ticket printer incl. cutter

- 5 PCB MC Barcode Mainboard
- 6 Reset button
- 7 Test ticket-button
- 8 Illuminated insertion slot
- 9 Bottom ticket draw-in (paper tickets, optional)

Feeding unit

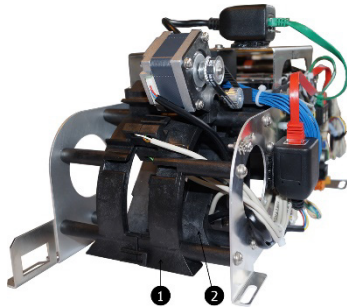


Fig. 58: Double feeding unit (optional)

The Multicon MC Barcode can be equipped with either a single or a double feeding unit.

When using the single feeding unit, paper tickets are fed from a belt through a single feeding unit at the ticket printer.

The *feeding channels I 1+II 2* enable ticket feeding from a belt: Up to 2x 5,000 paper tickets are fed from two ticket magazines.

Barcode card reader



Fig. 59: Barcode card reader

The Multicon MC Barcode is fitted with a barcode card reader with CCD technology as standard. In this case, the barcode is read from the top.

To be able to read barcode tickets and cards from all four directions, the Multicon MC Barcode can be additionally equipped with a barcode card reader.

The ticket and card data is only read here (not written (coded)).

DESIGNA paper tickets and plastic cards with barcodes can be read.

Ticket printer incl. cutter

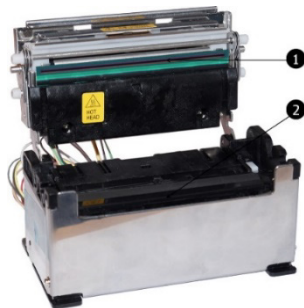


Fig. 60: Ticket printer incl. cutter

The ticket printer prints the paper tickets with a barcode using a thermal printing process.

Paper tickets are only printed after being fed to the ticket printer either via the single feeding unit at the ticket printer or the double feeding unit. Paper tickets fed via the illuminated insertion slot are not printed.

The *cutter 2* ensures the paper tickets are cut from the belt.

PCB MC Barcode Mainboard

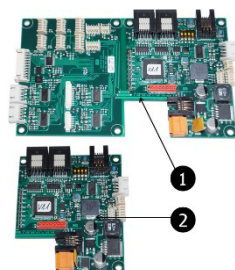


Fig. 61: PCB MC Barcode Mainboard

The Multicon MC Barcode is equipped with a printed circuit board (*PCB MC Barcode mainboard*) which has serial communication with the **TCC/SBC** and takes control of the processes.

Two versions of the PCB mainboard are available: PCB MC Barcode mainboard for devices with a ticket printer **1** and without a ticket printer **2**.



The *PCB MC Barcode mainboard* connection assignment is described in the separate instructions *PCB MC Barcode mainboard*.

Reset button

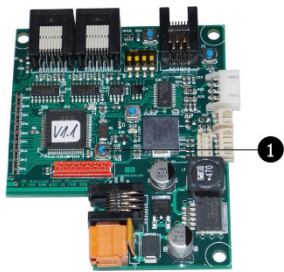


Fig. 62: Reset button

The *reset button* ❶ at the *PCB MC Barcode mainboard* triggers a reset at the Multicon: Tickets are moved through the Multicon and ejected at the *illuminated insertion slot*.

The *reset button* is also used to execute a program download if a laptop is connected and/ or to read the counter readings and version no. (see *separate instructions PCB MC Barcode mainboard*).

Test ticket button

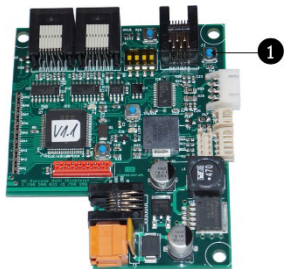


Fig. 63: Test ticket button

A test ticket is created at the Multicon via the *test ticket button* ❶. The test ticket allows the ticket imprint to be checked (see *chapter 18.3.2 Insert new ticket belt on page 125*).

Illuminated insertion slot

The tickets and cards are fed into the *Multicon MC Barcode* or returned to the customers via the *illuminated insertion slot*.

Bottom ticket draw-in (paper tickets, optional)

Paper tickets can be drawn into a collecting box from the *bottom ticket draw-in*.

18.3 Filling and emptying services for the Multicon MC Barcode

18.3.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

18.3.2 Insert new ticket belt

Entrance Control Terminal and Automatic Pay Station

Device switched on.

1. Make sure that the ticket magazine is placed with the magazine's underside recess on the roller scanner of the ticket magazine holder. This is the only way that the roller scanner can check the ticket storage and send a signal to the **TCC/SBC** if there is a shortage³².
2. Insert the ticket belt as follows:

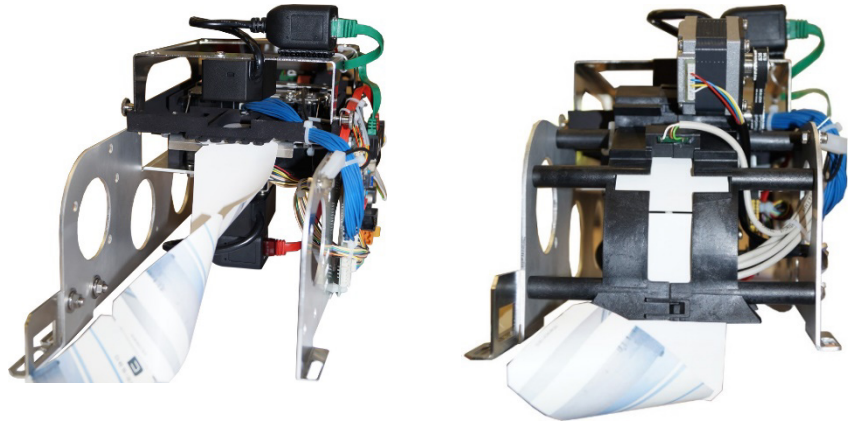


Fig. 64: Multicon MC Barcode: Without double feeding unit (left), with double feeding unit (right)

3. Feed the first ticket from the rear into the thermal printer or into the feeding channel I or II. The unprinted, thermal coated ticket surface must always face upwards.
 - The ticket is automatically positioned once it reaches the light barrier.
4. Press the test ticket button.
 - The first ticket is now fed through the Multicon MC Barcode and issued as a test ticket.
5. Check the print image.

Manual Pay Station

Device switched on.

1. Feed the first ticket to the Multicon from the rear through the opening for ticket feeding from a belt. The unprinted, thermal coated ticket surface must always face upwards.
 - The ticket is automatically positioned once it reaches the light barrier.

18.4 Maintenance services for the Multicon MC Barcode

18.4.1 Safety

³² Only Entrance Control Terminal

Electric voltage

 DANGER**Danger of death due to electric shock!**

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate cleaning

 WARNING**Risk of injury from inappropriate cleaning!**

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Hazardous optical radiation

 WARNING**Risk of injury due to optical radiation!**

The Multicon is equipped with light barriers with optical radiation (infrared (IR-A)).

Optical radiation can cause permanent eye damage.

- Do not stare into the beam.
- Work at the light barriers should only be carried out by specially instructed **shift managers**.
- If a power supply is required, the respective tasks at the light barriers should only be carried out by Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage of the device.

- Always keep the Multicon MC Barcode very clean. A clean Multicon MC Barcode is better protected against faults.
- When cleaning with compressed air, always make sure the jet of air from the nozzle is **not** aimed directly inside the device.
- Do not use thinners or any liquids when cleaning.
- Recommended cleanser:
 - dry microfiber cloth
 - Special, dry microfiber cloth for cleaning delicate surfaces.

18.4.2 Cleaning Ticket Transport Routes, Barcode Card Reader, Ticket Printer incl. Cutter

1. Switch off the device.
2. If necessary, extract the pull-out with the Multicon.

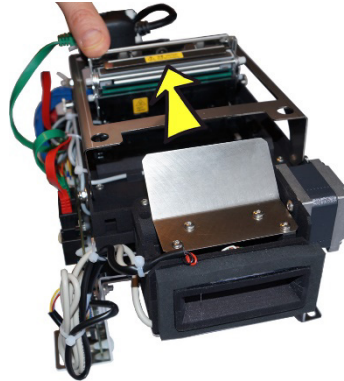


Fig. 65: Folding up the thermal line

3. Fold up the thermal line of the thermal printer.
4. Clean the ticket transport route, the ticket printer incl. cutter and the barcode card reader thoroughly with compressed air.
5. Use a dry microfiber cloth to clean the thermal line.
6. Return the thermal line to its initial position.
7. Use a dry microfiber cloth to clean the freely accessible transport rollers.
8. Use a dry microfiber cloth to clean the barcode glass panel and the mirror.
9. Switch on the device.

18.4.3 Checking all connecting cables are inserted correctly

1. Switch off the device.
2. Check that all connecting cables are inserted correctly.
3. Switch on the device.

18.4.4 Checking the correct position of the Multicon insertion slot

1. Check correct position of the Multicon insertion slot.

This should be flush with the front panel or protrude only slightly (approx. 1mm), so that tickets and cards are only inserted into the insertion slot during operation.
2. Switch off the device.
3. If necessary, readjust the insertion slot:

Unscrew the knurled screws which hold the Multicon in place on the mounting plate and displace it slightly.
4. Slightly retighten the knurled screws, close the door of the device and check whether the installation position is correct.
5. Retighten the knurled screws if the position is correct.
6. Switch on the device.

18.5 Error analysis

Automatic self test

When switching on (power supply) the Multicon MC Barcode and when using the *reset button*, the device performs a self test:

- The ticket channel is being emptied
- An acoustic signal sounds, 1x short
- If necessary, a subsequent short acoustic signal in a different pitch indicates that the device has not yet been initialized. This does not impact functioning.

If an error occurs, an acoustic signal sounds (4x long), there is a subsequent pause and an error code is displayed via an acoustic signal:

1x acoustic signal

Cutter does not return to the idle position

2x acoustic signal

Printer not working correctly, at least one thermal element is defective. All 432 thermal elements of the thermal line are tested.

3x acoustic signal

Ticket still in the device or jammed at the feeding unit

After 3x acoustic signal ("ticket jammed") a further error code then occurs with a different acoustic signal to define the error.

1x acoustic signal

Light barrier in front of the printer occupied or defective

Example: Ticket jammed at front

- 4x acoustic signal (even tone)
- Pause
- 3x acoustic signal (even tone)
- Pause
- 1x acoustic signal (irregular tone)

19 Module Receipt Printer

Functioning

To be able to issue customers with a receipt of payment processes, a receipt printer is installed in ABACUS payment devices (automatic pay stations or at the exit with optional **drive&pay**).

Receipt printers at pay stations also issue receipts about the removal of the coin cassette or banknote cassette.

19.2 Design and operation

Basically, the receipt printers in all the ABACUS devices are designed as shown in the figure below. Even if the installation position or add-ons (e.g. weather protection) vary, functioning and operation of the elements stay the same.

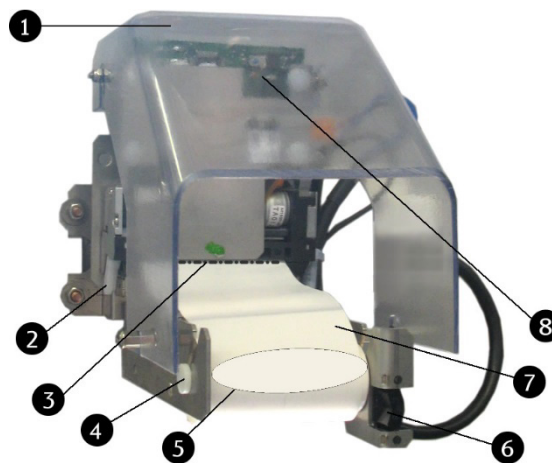


Fig. 66: Receipt printer

- 1 Weather protection
- 2 Opening handle (for draw-in device)
- 3 Draw-in device
- 4 Paper roll holder
- 5 Printable surface
- 6 Reflex light barrier
- 7 Paper roll
- 8 PCB receipt printer

Weather protection

The *weather protection* protects the receipt printer if the device is open (not available at Pay 1104).

Opening handle (for draw-in device)

It is possible to lift the print head of the thermal printer with the *opening handle* in order to, e.g., remove an old paper roll, to clean the paper guide with **compressed air** or to insert a new paper roll (see *chapter 19.4.2 Insert new paper roll on page 133*).

Draw-in device

The paper roll is fed into the receipt printer via the *draw-in device* with the printable surface facing upwards.

Paper roll holder

The paper roll is mounted onto the *paper roll holder*, which is loosely placed into the holding device.

Printable surface

The *printable surface* of thermal paper is easily recognizable as the paper changes color due to heat generation (e.g. by scratching the surface).

Reflex light barrier

Fig. 67: Reflex light barrier


The *reflex light barrier* ❶ on the *paper roll holder* registers a shortage of paper.

If the diameter of the inserted paper roll is below a certain size, a message is generated at the **TCC/SBC** and sent to the **System server**.

Paper roll

The following *paper roll* is suitable for the receipt printer and can be ordered:

	Automatic pay stations	Exit control terminals
DESIGNA Ident. no.	7 232 120 579	7 232 120 580
Paper width	2.24 in (57 mm)	2.24 in (57 mm)
Paper length	312 ft (95 m)	98 ft (30 m)
Paper strength	0.246 oz./ft ² (75 g/m ²)	0.246 oz./ft ² (75 g/m ²)

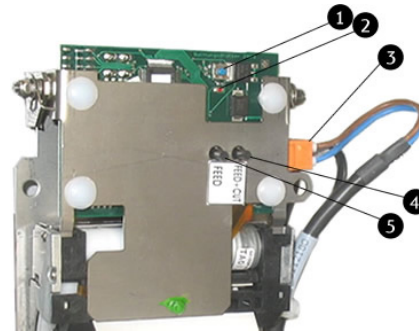PCB receipt printer

- 1 Reset button
- 2 Operating LED
- 3 Power supply
- 4 FEED+CUT (Feed/ Cut-off button)
- 5 FEED (Feed button)
- Not shown:
- 6 Serial connection

Fig. 68: PCB receipt printer

Reset button

Use the *reset button* to trigger the following functions:

Reset + FEED+CUT

Three sections are printed as test printout separated by partial cuts.

Reset + FEED

The version no. of the receipt printer software, the recent settings of the DIP switches, the recent character set and a test pattern are printed and issued as test printout. The paper stripe is cut.

Operating LED

The *operating LED* flashes when a 24V power supply is connected and the required program information has been loaded onto the controller of the *PCB receipt printer*.

Power supply

The receipt printer is supplied with 24V DC via the *power supply*.

**FEED+CUT
(Feed/ Cut-off button)**

The *FEED+CUT* button feeds approx. 6.5 cm of paper before cutting it off.

FEED
(Feed button)

The *FEED button* feeds the paper by one feed step if the button is pressed once. If the button is kept pressed the paper feeding occurs until the button is released

Serial connection

The receipt printer is connected to the **TCC/SBC** via the *serial connection*.

19.3 Optional receipt printer

When using certain options (e.g. PINPad, fiscal printers), a receipt printer designed for wider paper rolls can be installed at the device PAY COINLESS. This receipt printer can print up to 40 characters per line.

The design and operation of the optional receipt printer basically correspond to those of the default receipt printer and are, therefore, not described separately.

Paper roll

The following *paper roll* is suitable for the optional receipt printer and can be ordered:

DESIGNA Ident. no.	7 232 120 581
Paper width	3.15 in (80 mm)
Paper length	197 ft (60 m)
Paper strength	0.246 oz./ft ² (75 g/m ²)

19.4 Filling and emptying services for the receipt printer

19.4.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (*see chapter Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

Hot surface

CAUTION

Danger of burns!

The surface of the print head and motor may become hot during operation.

Contact with the surface may result in burns.

- Do not touch the print head or motor.

19.4.2 Insert new paper roll

NOTICE

Only use the specified thermal paper to ensure a long service life and an excellent printout.

Suitable thermal paper can be ordered from DESIGNA. Lower quality paper can cause inferior printouts, abrasion of the print head and paper jams.

Device switched on.

1. Loosen the print head from the old paper roll by releasing the *opening handle*.
 - The old paper roll can now be removed.
2. Remove the *paper roll holder* and the old paper roll and place a new paper roll on the holder.
3. Reinsert the *paper roll holder*.
4. Feed the paper into the draw-in device as follows:

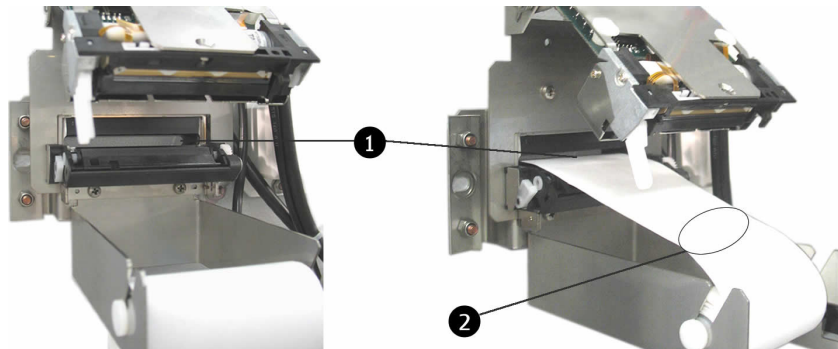


Fig. 69: Feeding paper into the draw-in device

The paper roll is fed into the *draw-in device* ① with the *printable surface* ② facing upwards.

5. If the paper roll has been inserted flush and correctly, clamp down again the print head onto the paper roll by carefully folding and pressing the printer unit back into its position until the opening handle locks.

NOTICE

Always carefully close the printer.

6. Press *FEED+CUT*:
 - The paper is fed approx. 2.56 in and then cut off.

19.4.3 Issue test printout

Device switched on.

After inserting a new paper roll:

1. Use the test printout to check whether the paper has been inserted correctly (*printable surface* facing upwards) and whether the receipt printer produces a perfect printout.

2. Press *Reset + FEED* **or** *Reset + FEED+CUT*, depending on which test printout you desire.
 - The desired test printout is carried out.

19.5 Maintenance services for the receipt printer

19.5.1 Safety

Inappropriate cleaning and basic services



WARNING

Risk of injury from inappropriate cleaning and basic services!

Inappropriate cleaning and basic services can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out basic services, cleaning and filling work **inside** the device as indicated (see list below) and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Electric voltage



DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate cleaning

WARNING

Risk of injury from inappropriate cleaning!

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Hot surface

CAUTION

Danger of burns!

The surface of the print head and motor may become hot during operation.

Contact with the surface may result in burns.

- Do not touch the print head or motor.

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage of the receipt printer.

- Always print with inserted, suitable paper.
- Do **not** touch the print head with pointed or sharp objects.
- Do **not** use thinners to clean the transport rollers.
Recommended cleanser: DESIGNA cleaning fluid

19.5.2 Cleaning the receipt printer with compressed air

1. Switch off the device.

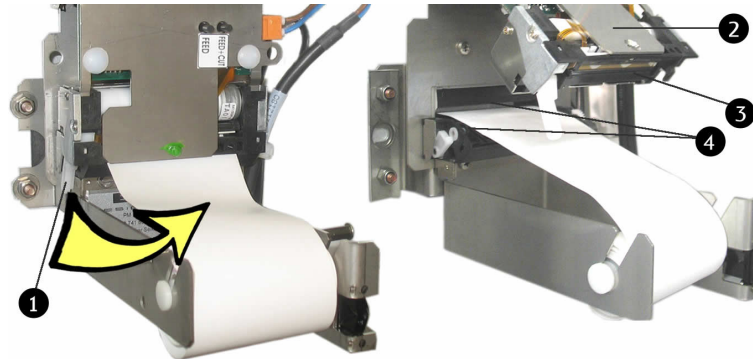


Fig. 70: Releasing the opening lever to loosen the print head from the paper reel

- 1 Opening lever
 - 2 Printer unit
 - 3 Print head
 - 4 Paper guide
2. Loosen the *printer unit* from the paper reel by releasing the *opening lever*.
 3. Clean the *printer unit*, *print head* and *paper guide* with compressed air.
 4. Clamp the *print head* back onto the paper reel by carefully folding and pressing the *printer unit* back into its position until the *opening lever* locks.

NOTICE

Always carefully close the printer unit.

5. Switch on the device.

19.5.3 Cleaning the receipt printer using cleaning strips

Switched on device:

1. Remove the paper reel (*see chapter 19.4.2 Insert new paper roll on page 133*).
2. Guide the cleaning strip through the receipt printer using the FEED button.
3. Repeat this process several times.
4. Remove the cleaning strips and reinsert the paper reel.

20 Module Banknote Recycler BNR CASHCODE (optional)

Insufficient operating temperature

NOTICE

Insufficient operating temperature may lead to malfunctioning of the banknote processing

- The PAY COINLESS has to be equipped with a heater if a banknote processing is installed.

20.1 Functioning

The *banknote recycler* is a combination of a banknote reader and a self-filling banknote return and fulfils the following functions at the PAY COINLESS:

- Acceptance and verification of up to 20 inserted banknotes ³³ at the banknote reader
- Storage of the accepted banknotes in the *(multi-)escrow cassette* or the *recycling cassettes* until the payment process has been completed (*hardware escrow*)
- Storage of the banknotes in the *recycling cassettes* or the *banknote cassette*
- Output of up to 20 banknotes as change from the *cash dispensing cassette*
- Relays the corresponding signals (received banknotes) to the TCC

³³ For polymer banknotes: only 10 banknotes

20.2 Design and operation

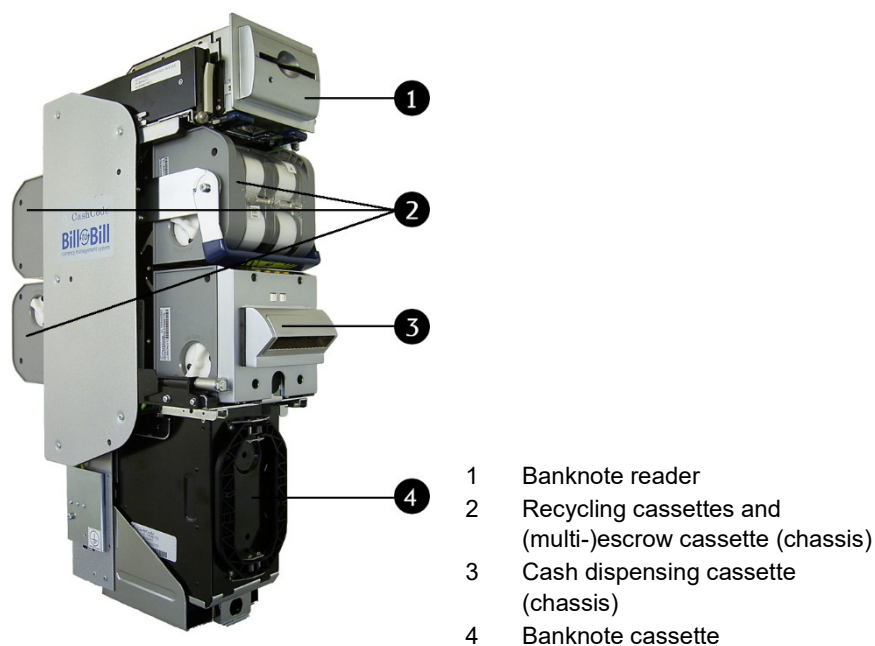


Fig. 71: Banknote recycler BNR CASHCODE

General information

All the components are easy to remove and re-install, e.g. to remove trapped banknotes. *Please refer to the chapter 20.4 Carrying out maintenance work at the banknote recycler BNR CASHCODE on page 142.*

Banknote reader

The banknote reader is programmed to accept permitted banknotes and to reject non-permitted banknotes and counterfeit money. Up to 16 different banknotes (also different currencies) can be accepted with 4 insertion directions.

If the *banknote reader* is ready to accept banknotes (unpaid ticket has been inserted), the LED illuminates green at the insertion slot. The LED illuminates red if the banknote reader is out of service.

Counterfeit banknotes and banknotes which should not be accepted at the PAY COINLESS are returned by the banknote reader. Up to 20 banknotes³⁴ can be accepted per payment process and placed in the *recycling cassettes* or the *escrow cassette*.

³⁴ For polymer banknotes: only 10 banknotes

Recycling cassettes and (multi-)escrow cassette (Chassis)

The chassis of the *banknote recycler* is equipped with up to three identical cassettes which are used to hold and store the banknotes. Programming ensures that up to two cassettes are used as *recycling cassettes* and one as the *escrow cassette*. The *escrow cassette* can also be configured as a *multi-escrow cassette* ³⁵. The cassette then functions as both an *escrow cassette* and a *recycling cassette*.

Since the three cassettes are identical their position in the chassis is optional and correct identification is guaranteed by the software: After removal, they can be re-inserted at any of the three positions.

The output of banknotes (in case of cancellation or when returning change) occurs via a fourth cassette in the chassis, the *cash dispensing cassette* (see *below*).

Recycling cassettes

Up to two of the cassettes are programmed as *recycling cassettes*.

They provide a storage location for banknotes before being returned as change. The desired value of banknotes to be returned is assigned accordingly via the cassette programming.

The cassettes are self filling during operation: Banknotes amounting to the programmed value that have been accepted by the banknote reader are sorted in the *recycling cassettes*.

It is from here that the last sorted banknotes are then output, e.g. if cancellation occurs: The respective recycling cassette also functions as a banknote hardware escrow for the programmed value. This prevents “money laundering” (*also see below: Escrow cassette*).

It is possible to store up to 100 banknotes. To ensure the capacity of the *recycling cassette* is not exceeded during the payment process, a maximum number of banknotes should be configured. The recommended number of banknotes is 50. This figure can be exceeded by 10 banknotes, after which the banknotes are transported automatically to the *banknote cassette*.

In addition to self filling during operation, the *recycling cassettes* can be manually filled or emptied using **function cards**. See *Fill recycling cassettes of the banknote recycler BNR CASHCODE on page 78* and *Empty recycling cassettes of the banknote recycler BNR CASHCODE on page 81*.

Escrow cassette

One of the three cassettes is programmed as an *escrow cassette*. All the banknotes accepted by the banknote reader which are **not** intended for the *recycling cassettes* are guided to this cassette. The escrow cassette is used for these banknotes as a banknote hardware escrow: The banknotes are held here until the payment process has been completed and then guided to the *banknote cassette*.

If cancellation occurs, the inserted banknotes are returned (*see chapter 12.1 Payment of transient tickets on page 66*). This prevents “money laundering”.

Up to 20 banknotes can be held here during a payment process.

³⁵ From ABACUS version x16 and higher

Multi-escrow cassette (optional) Optionally, an *escrow cassette* can be configured as a *multi-escrow cassette*. This cassette can then also be used as a hardware escrow for storing up to 20 inserted banknotes and as a *recycling cassette* for storing up to 70 banknotes as change. To ensure the capacity of the *recycling cassette* is not exceeded during the payment process, a maximum number of banknotes should be configured. The recommended number of banknotes is 50. This figure can be exceeded by 10 banknotes, after which the banknotes are transported automatically to the *banknote cassette*.

Cash dispensing cassette (Chassis)

The *cash dispensing cassette* is the fourth cassette in the chassis and is equipped with a dispensing slot. Up to 20 banknotes can be collected in the *cash dispensing cassette* from the other cassettes and returned to the customer as a banknote bundle.

The position of the cash dispensing cassette in the chassis is always the same.

A lock preventing unauthorized removal of the entire *chassis* from the PAY COINLESS is fitted to the *cash dispensing cassette* (see chapter 20.4.4 *Checking and cleaning the chassis* on page 145).

NOTICE

Damage of the device.

- After removing the chassis, always leave the key in the unlocked position to ensure that the latch is not damaged when standing down or re-inserting the chassis.

Banknote cassette

Banknotes from the *(multi-)escrow cassette* are sorted into the *banknote cassette* once the payment process has been completed, this also applies to excess banknotes from the *recycling cassettes* or banknotes which are guided from the recycling cassette to the banknote cassette using a **function card**. If there is insufficient space in the banknote cassette, the process is cancelled immediately.

The banknote cassette stores up to 1000 (new) banknotes and holds them in a stacked formation. The stacking mechanism allows the stacking of new banknotes without the already stacked banknotes being moved. This prevents bending and jamming. The banknote cassette can be locked with two locks for which two different keys are required.

Another lockable banknote cassette for up to 1000 banknotes can be used.

20.3 Filling and emptying the banknote recycler BNR CASHCODE

20.3.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see chapter *Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

20.3.2 Removing and opening the banknote cassette

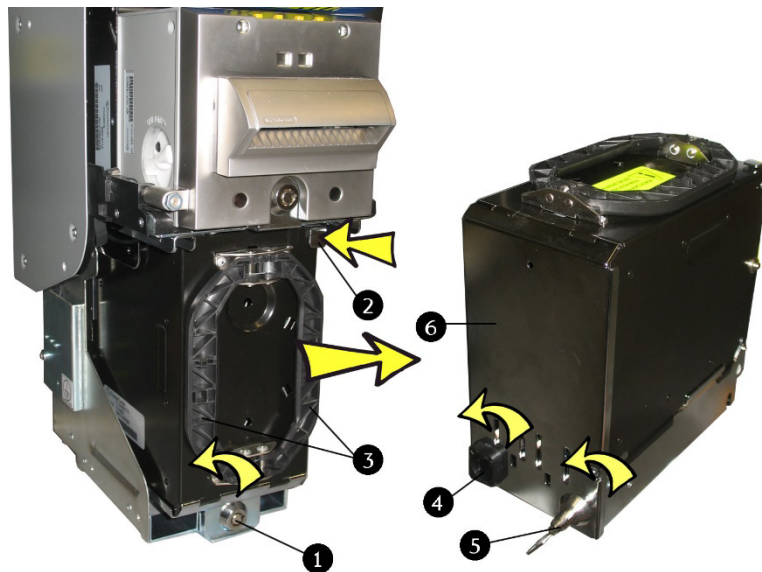


Fig. 72: Removing and opening the banknote cassette

- 1 Removal lock
- 2 Removal lever
- 3 Foldable handle
- 4 Turning bolt (lock, if necessary (optional))
- 5 Lock
- 6 Flap

Device switched on:

1. Fold the *foldable handle*, hold the cassette tightly at its *foldable handle* and press the *removal lever*.

2. Release the cassette from the guide by pulling it towards the front. This blocks the insertion slot.
- Removal of the banknote cassette is registered at the **System server** and a receipt of the banknotes in the cassette is printed out (*see chapter 13.2.3 Remove banknote cassette (function card 12 APS alarm ON/OFF) on page 82*).
The second key is required to open the cassette.
3. Place the cassette so that the *flap* can be opened.
4. Unlock the *flap* at the *turning bolt* and *lock*.
5. Now open the *flap*.
6. Carefully lock the *flap* after removing the banknotes.
7. Reinsert the cassette into the guide directly underneath the chassis.
8. Make sure that the cassette locks into place correctly.
9. Afterwards lock the banknote cassette at its *removal lock*.

20.4 Carrying out maintenance work at the banknote recycler BNR CASHCODE

20.4.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (*see chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (*see chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate cleaning

WARNING

Risk of injury from inappropriate cleaning!

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage of the device.

- Do **not** use thinners to clean the device.
Recommended cleanser: DESIGNA cleaning fluid.

20.4.2 Cleaning off outer soiling

1. Switch off the device.
2. Outer soiling due to dust, snippets of paper etc. has to be carefully cleaned off with a damp, fluff-free cloth or with compressed air.
3. Switch on the device.

20.4.3 Cleaning the banknote reader

1. Switch off the device.
2. Remove the banknote reader from the device.

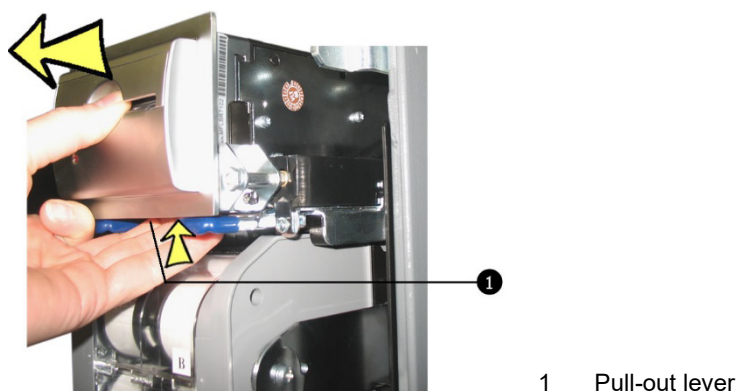


Fig. 73: Removing the banknote reader

3. Lift up the *pull-out lever* underneath the banknote reader and extract the banknote reader from the guide at the front.

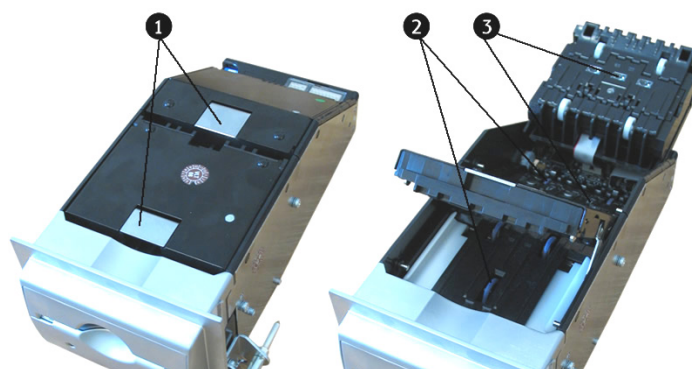


Fig. 74: Cleaning the banknote reader

- 1 Opening lever
- 2 Transport rollers
- 3 Validating sensors
4. Open the transport and validating unit by holding the *opening lever* in an upward position and simultaneously lifting up the top part.
5. At first, clean the banknote reader with compressed air.
6. Ensure that no scratches or cracks are present on the guides and *sensors*.
7. Ensure that no dirt is present on the *transport rollers* and *validating sensors*.
8. Clean the *validating sensors*, cassette contacts and interspaces with a cotton bud which has been soaked in a suitable cleaning fluid.
9. Clean the *transport rollers* and transport route with a fluff-free microfiber cloth and a suitable cleaning fluid.
10. Allow the banknote reader time to dry (approx. 5 min) after cleaning.
11. Close the validating and transport unit and reinsert the banknote reader into the holder.

12. Switch on the device.

20.4.4 Checking and cleaning the chassis

The *chassis* must be removed from the device in order to clean it and to gain access to the cassettes.

CAUTION

Risk of injury when lifting heavy load!

Lifting the chassis may cause slight injury due to the considerable weight (approx. 10 kg).

- Due to the considerable weight of the chassis, always be extremely careful when removing it and use at least one hand to support the heavy load from underneath.

Removing the chassis

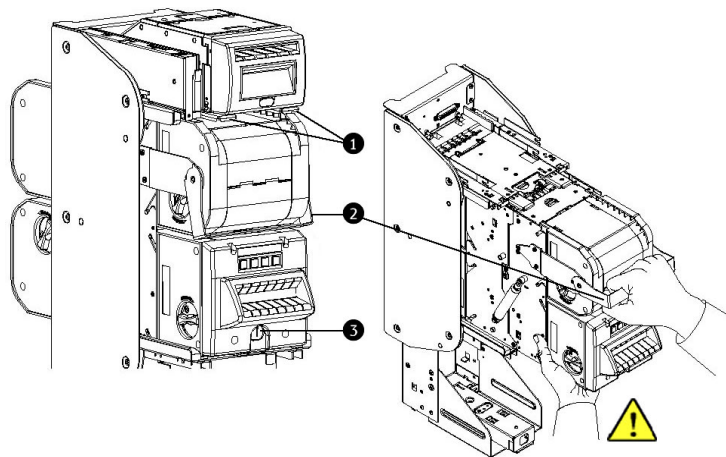


Fig. 75: Removing the chassis

- 1 Pull-out bar
- 2 Handle
- 3 Lock

Device switched on.

1. Unlock the chassis at the *lock*.
2. Press the two *pull-out bars* underneath the banknote reader and use the *handle* to **slightly** (!) extract the chassis at first.
3. Now use the *handle* to carefully remove the chassis from the device; always take the weight of the chassis into consideration. Always use at least one hand to support the heavy load from underneath.
 - This blocks the insertion slot of the cassette.
 - Removal of the banknote cassette is registered as alarm message at the System server.

NOTICE

Damage of the advice.

- Always leave the key of the *lock* in the unlocked position to ensure that the latch is not damaged when standing down or re-inserting the chassis.

4. Carefully place the chassis on a flat surface in order to clean it (*monthly services*) or, if necessary, to remove the cassettes.

Cleaning the chassis

1. The chassis can be opened with or without cassettes.
Remove the cassettes if desired (*see below Recycling cassettes and (multi-)escrow cassette*).

2. Open the chassis:

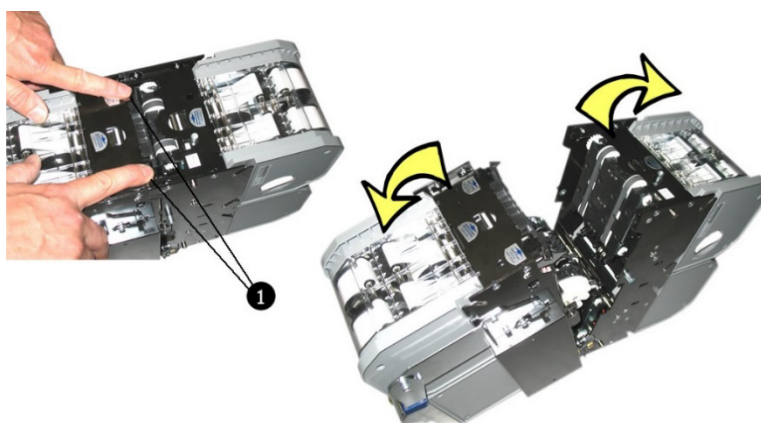


Fig. 76: Opening the chassis

- 1 Unlocking buttons
3. Press the two *unlocking buttons* at the same time.
- The lock is unlocked and the chassis can be carefully opened and cleaned. A gas pressure spring ensures that the chassis remains open.

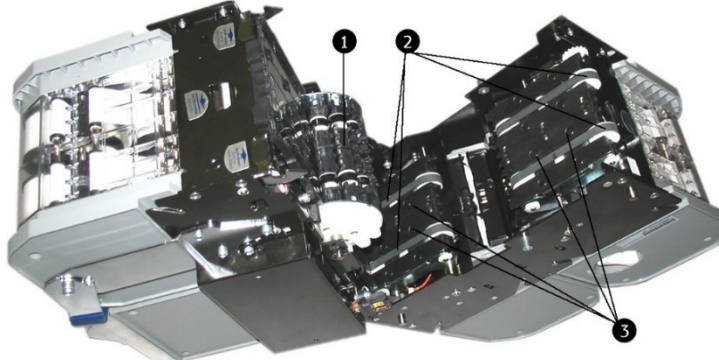


Fig. 77: Cleaning the chassis

- 1 Path switch
- 2 Transport belts
- 3 Validating sensors

4. At first, clean the chassis with compressed air.
5. Ensure that no scratches or cracks are present on the guides and *validating sensors*. (A total of 24 validating sensors; six along each transport route).
6. Ensure that no dirt is present on the *transport belts* and *validating sensors*.
7. Clean the *validating sensors*, cassette contacts and interspaces with a cotton bud which has been soaked in a suitable cleaning fluid.
8. Clean the *transport belts* and transport route with a fluff-free and a suitable cleaning fluid.
9. Allow the chassis time to dry (approx. 5 min) after cleaning.

Checking and cleaning the path switch

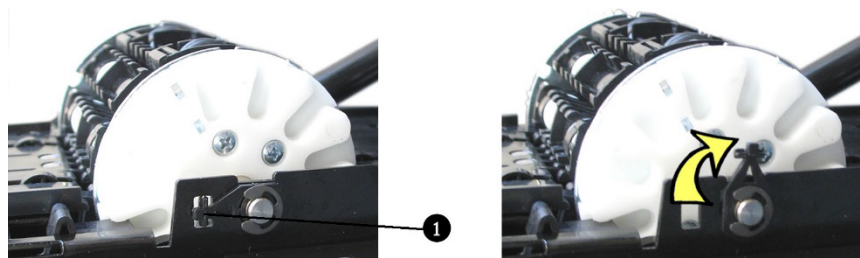


Fig. 78: Removing the path switch

1 Retainers

1. Disengage the *retainer* from the metal plate recess and turn it clockwise to a vertical position.
Carry out this task on both sides of the path switch.
2. Now **carefully** remove the *path switch* from the top.
3. At first, clean the path switch with compressed air.
4. Ensure that no scratches or cracks are present on the path switch.
5. Ensure that no dirt is present on the transport belts and transport rollers.
6. Clean the transport belts, transport rollers and interspaces with a cotton bud which has been soaked in a suitable cleaning fluid.
7. Allow the path switch time to dry (approx. 5 min) after cleaning and place it carefully back onto the metal plate.
8. Turn the *retainer* anti-clockwise until it engages in the metal plate recess.
9. Close the chassis.

Cleaning the recycling cassettes and the (multi-)escrow cassette

1. Remove the *recycling* or *(multi-)escrow cassettes* from the chassis:

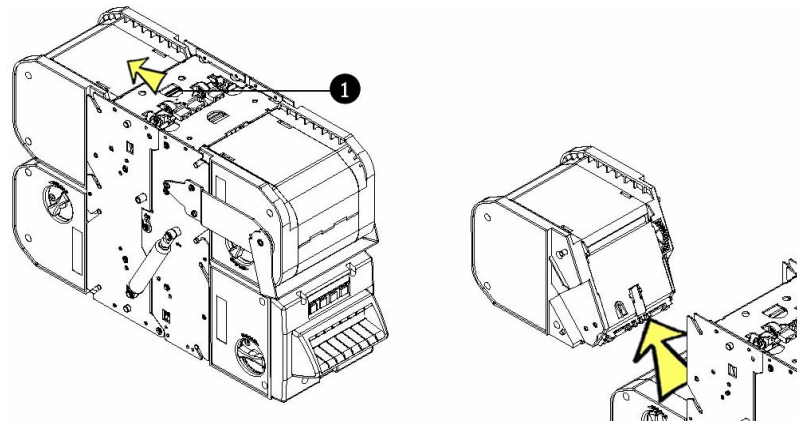


Fig. 79: Removing the recycling or (multi-)escrow cassettes

- 1 Unlocking system
2. Slide the *unlocking system* in the specified direction.
 - The lock is unlocked and the cassette can be removed.
 - The *unlocking system* of the bottom *recycling* or *(multi-)escrow cassette* is located on the underside of the chassis.
3. If necessary, turn the chassis to also remove the bottom *recycling* or *(multi-)escrow cassette*.
4. Open the *recycling* or *(multi-)escrow cassettes*:


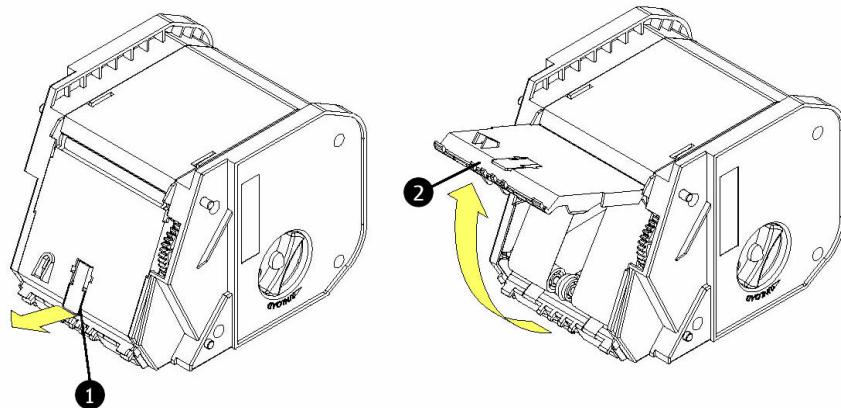


Fig. 80: Opening the recycling or (multi-)escrow cassettes

- 1 Metal catch
- 2 Cassette lid
5. Lift up the *metal catch* and open the *cassette lid* for inspecting and cleaning.
6. At first, clean the cassette interior with compressed air.

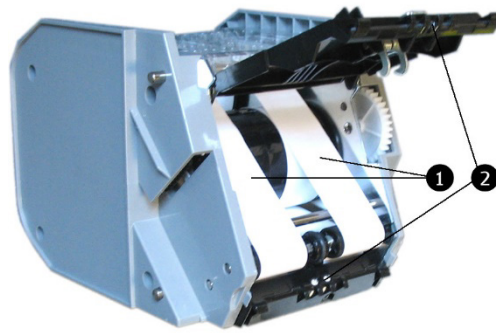

- 1 Tapes
- 2 Light barrier and prism

Fig. 81: Cleaning the recycling or (multi-)escrow cassettes

7. Ensure that no dirt is present on the *light barrier and prism*.
8. Clean the *light barrier and prism* with a cotton bud which has been soaked in a suitable cleaning fluid.
9. Allow the cassette interior time to dry (approx. 5 min) after cleaning.
10. Make sure the *tapes* have sufficient tension.
If a *tape* becomes slack and sags slightly, turn the plastic rotary knob on the outside of the cassette to re-tension it.

Notice


Removing the tapes from the cassette will result in malfunctioning of the cassette.

- Do not try to remove the *tapes* from the cassette.

11. Close the cassette and reinsert it into the holder at the chassis.

Cleaning the cash dispensing cassette


1. Position the chassis to ensure easy access to the *unlocking system* of the *cash dispensing cassette* at the bottom.
2. Remove the *cash dispensing cassette* just like the *recycling* and *(multi-)escrow cassettes*.
3. Open the cash dispensing cassette:

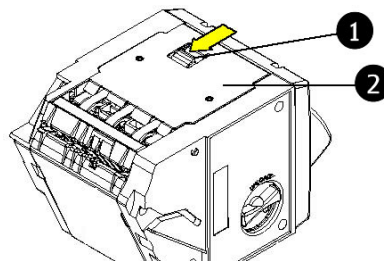

- 1 Metal catch
- 2 Cassette lid

Fig. 82: Opening the cash dispensing cassette

4. Unlock the *metal catch* and lift up the *cassette lid* for inspecting and cleaning.
5. Clean the cassette interior with compressed air.

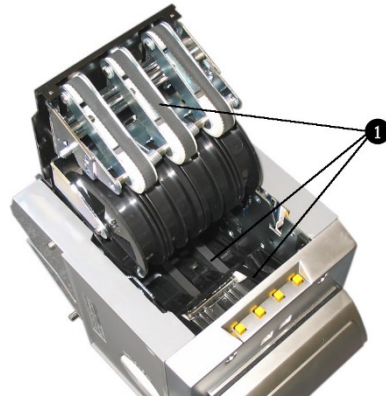

1 Transport belts

Fig. 83: Cleaning the cash dispensing cassette

6. Ensure that no scratches or cracks are present on the guides and *transport belts*.
7. Ensure that no dirt is present on the *transport belts*.
8. Clean the *transport belts* and transport route with a fluff free cloth and a suitable cleaning fluid.
9. Allow the cassette time to dry (approx. 5 min) after cleaning.
10. Close the cassette and reinsert it into the holder at the chassis.

Sliding back the change module

1. Slide the change module back into the holder. Pay attention to the unlocked position of the extraction lock, making sure its bolt is not bent.

20.4.5 Cleaning the banknote cassette

1. Clean the banknote cassette with compressed air.
 2. Make sure the *moving plate* runs smoothly.
 3. If necessary, lightly oil the spring with resin-free oil.
(Recommended: Ballistol spray, DESIGNA Ident. no. 8 815 057 000)

20.4.6 Checking all connecting cables are inserted correctly

1. Switch off the device.
 2. Check that all connecting cables are inserted correctly.
 3. Switch on the device.

20.5 Troubleshooting

20.5.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate troubleshooting

NOTICE

Inappropriate troubleshooting can result in damage of the device.

- Always observe the following simple troubleshooting measures.
- Simple troubleshooting measures are listed below. Complex measures should only be carried out by trained specialized staff or by your DESIGNA service.

Shift manager

Specially instructed **shift managers** are allowed to carry out Troubleshooting as described in the following sections. These are:

Eliminating a jam

- in the chassis
- in the banknote reader

20.5.2 Eliminating a jam

A banknote may become stuck in the module BNR CASHCODE. A jam can be simply eliminated as follows:

NOTICE

Switching off the device may result in malfunction.

- If an error has occurred, the device PAY COINLESS must not be switched off. Initialization occurs automatically after eliminating the error.

In the chassis

1. Fully remove the *chassis* from the device PAY COINLESS.

2. Open the *chassis*.
3. Check the transport routes of the banknotes.
4. Remove the *recycling, (multi-)escrow* and *cash dispensing cassettes* from the *chassis*.
5. If necessary, carefully remove the banknote.
6. Check that the light barriers and the light barrier prism are clean.
7. If necessary, clean the light barriers and the light barrier prism.
8. Re-close the cassette and reinsert it into its holder at the *chassis*.
9. Reinsert the *chassis* into the banknote recycler.
10. Wait until the banknote recycler has been initialized.
11. If initialization does not occur automatically, use the function cards 01 *Device out of service* and 02 *Device in service* (see operator manual *Function Cards*) to start initialization or the command *Set device out of service* and *Set device in service* in the context menu of the device in WinOperate (see operator manual *WinOperate*).

-
12. **i** If a banknote has been removed from the *multi-escrow cassette* manually, it cannot be detected. The counters must be corrected by emptying the *multi-escrow cassette*.
-

If necessary, use the respective function card in the banknote cassette to empty the *multi-escrow cassette* (see chapter *Empty recycling cassettes of the banknote recycler BNR CASHCODE* on page 81).

In the banknote reader

1. Remove the *banknote reader* from the device PAY COINLESS.
2. Open the transport and test unit.
3. If necessary, carefully remove the banknote.
4. Close the transport and test unit and reinsert the *banknote reader* into the holder.
5. Wait until the banknote recycler has been initialized.
6. If necessary, start initialization as described above.

-
- i** If the error persists, please contact your DESIGNA Service.
-

21 Module Banknote Recycler BNR MEI (optional)

Insufficient operating temperature

NOTICE

Insufficient operating temperature may lead to malfunctioning of the banknote processing

- The PAY COINLESS has to be equipped with a heater if a banknote processing is installed.

21.1 Functioning

The *banknote recycler BNR MEI* is a combination of a banknote reader and a self-filling banknote return and fulfils the following functions at the PAY COINLESS:

- Checks all the inserted banknotes at the *main module*
- Storage of the accepted banknotes in the *main module* until the payment process has been completed (*hardware escrow*)
- Storage of the banknotes in the *recycling cassettes* or the *banknote cassette*
- Filling the *recycling cassettes* via the loader cassette
- Output of up to 15 banknotes as change from the *main module*
- Relays the corresponding signals (received banknotes) to the **TCC**

21.2 Design and operation

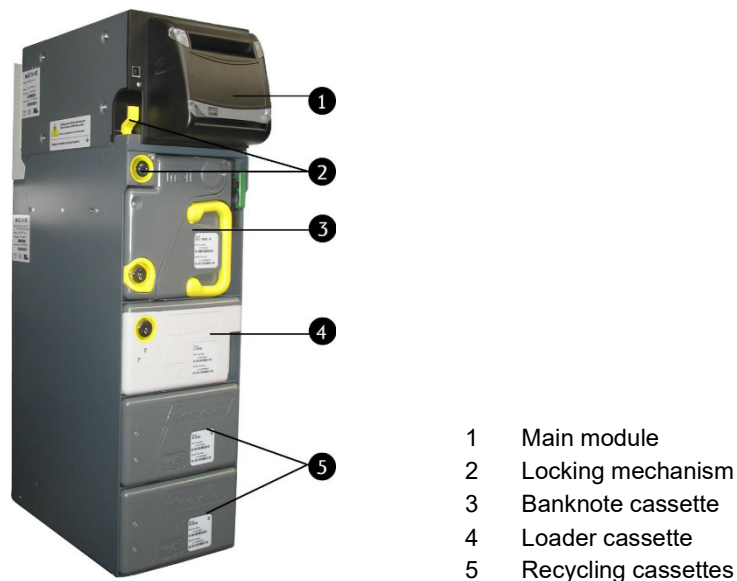


Fig. 84: Banknote recycler BNR MEI

General information

All the components are easy to remove and re-install, e.g. to remove trapped banknotes.

Main module	The main module fulfils the following functions at the banknote recycler:
Accepting banknotes	The <i>main module</i> is programmed to accept permitted banknotes and to reject non-permitted banknotes and counterfeit money. Up to 8 different banknotes (also different currencies) can be accepted with 4 insertion directions. If the <i>main module</i> is ready to accept banknotes (unpaid ticket has been inserted), the upper indicators at the insertion slot light up green. If the indicators light up red, the <i>main module</i> is out of service. Counterfeit banknotes and banknotes which should not be accepted are returned by the main module reader. Up to 20 banknotes can be accepted per payment process and placed in the <i>recycling cassettes</i> or the <i>escrow cassette</i>.
Hardware escrow	Up to 15 banknotes can be accepted per payment process and held in the hardware escrow of the <i>main module</i> until the payment process has been completed. If cancellation occurs, the inserted banknotes are returned (see chapter 12.1 <i>Payment of transient tickets on page 66</i>). This prevents “money laundering”.
Banknote output	In the <i>main module</i> , up to 15 banknotes can be retrieved from the <i>recycling cassettes</i> and output as a bundle of banknotes via the output slot.
Sorting banknotes	After the payment process, banknotes are transported from the <i>hardware escrow</i> to the <i>recycling cassettes</i> or the <i>banknote cassette</i>. When filling the <i>recycling cassettes</i> manually, the banknotes from the <i>loader cassette</i> are checked in the <i>main module</i> and transported to the respective <i>recycling cassette</i> and, if necessary, to the <i>banknote cassette</i>.
Locking mechanism	The banknote recycler BNR MEI is equipped with a <i>locking mechanism</i> that prevents the removal of all the cassettes and modules containing banknotes.
Banknote cassette	Banknotes from the <i>main module</i> are sorted into the banknote cassette after the payment process; this is also the case for banknotes from the <i>loader cassette</i> which are not defined for the <i>recycling cassettes</i>. Up to 600 banknotes are stacked by a mechanical stacker mechanism, ensuring that stacked banknotes are no longer moved. This prevents banknotes becoming bent or trapped. The <i>banknote cassette</i> is equipped with a <i>locking mechanism</i> that prevents removal and can be additionally locked with a lock for which a different key is required.
Loader cassette	Up to 250 banknotes of one denomination can be stored in the <i>loader cassette</i> for filling the <i>recycling cassettes</i> . The parameters of the banknote to be stored in the cassette for filling the <i>recycling cassettes</i> must be set at the <i>loader cassette</i> during initial start-up.



Configuration of the device and setting of the banknote parameters are carried out by your DESIGNA Service or trained and specialized staff who have participated in a respective DESIGNA training course.

Different loader cassettes can be used for different types of banknotes.

The loader cassette is activated and the recycling cassettes filled using the respective function card (no. 5: *Fill hopper*) (see *Filling the recycling cassettes of the banknote recycler BNR MEI on page 79*). Once the filling process has been completed, the loader cassette is deactivated and can be removed.

The loader cassette is equipped with a *locking mechanism* that prevents removal and can be additionally locked with a lock for which a different key is required.

The loader cassette is not necessary for operation.

Recycling cassettes

Recycling cassettes enable the storage of banknotes as change. One or two lockable *recycling cassettes* can be used; each for the storage of two banknote types with a capacity of up to 25 and 55 banknotes. The actual banknote denomination is allocated by programming the respective recycling cassettes. It is possible to use banknote types of the same denomination.

The *recycling cassettes* are filled automatically during operation: Banknotes of the programmed denomination, which are accepted by the main module, are sorted into the *recycling cassettes*.

In addition to automatic filling during operation, the *recycling cassettes* can be filled and emptied using **function cards**. See *Filling the recycling cassettes of the banknote recycler BNR MEI on page 79* and *Empty recycling cassettes of the banknote recycler BNR MEI on page 81*.

21.3 Filling and emptying the banknote recycler BNR MEI

21.3.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock.

Filling and emptying is carried out with the device switched on.

When the device is switched on, the main power voltage (120V) is applied to the following components: the power distribution box, the terminal block -X0, the power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (*see chapter Device Description*).

Contact with live components may result in death.

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.

NOTICE


Damage of the device.

The **green** operating elements are intended for fully trained specialized staff or DESIGNA Service staff **only**.

The **yellow** operating elements at the module BNR MEI can be used on a daily basis by instructed shift managers who are familiar with the operating and safety instructions.

21.3.2 Unlocking and locking the locking mechanism

Unlocking the locking mechanism

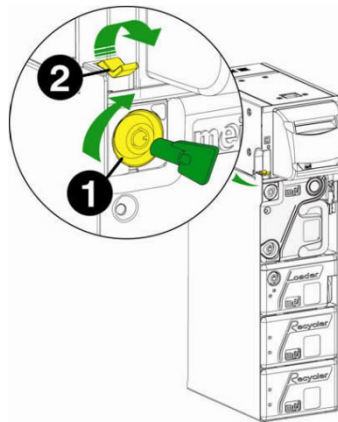

- 1 Lock
- 2 Locking lever

Fig. 85: Locking mechanism

1. Use the key to unlock the *lock* (clockwise).
2. Push the yellow *locking lever* towards the front.
1. Push the yellow *locking lever* upwards.
2. Use the key to lock the *lock* (anti-clockwise) and remove the key.

Locking the locking mechanism

21.3.3 Removing and opening the banknote cassette

i After removal from the banknote recycler, the banknote cassette cannot be re-inserted immediately. The banknote cassette must be opened and closed once prior to re-insertion.

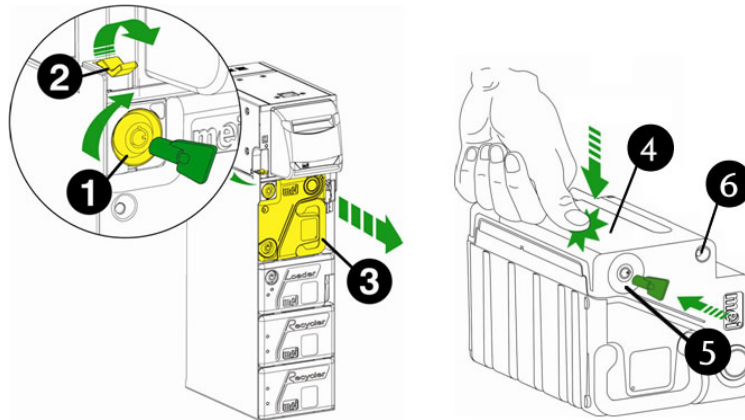


Fig. 86: Removing and opening the banknote cassette

- 1 Lock
- 2 Locking lever
- 3 Handle
- 4 Opening flap
- 5 Banknote cassette lock
- 6 Indicator

Switched-on device.

1. Unlock the locking mechanism at the *lock* and the *locking lever*.
2. Lift up the *handle* and extract the banknote cassette from the banknote recycler.
 - This blocks the insertion slot.
 - Removal of the banknote cassette is registered at the **system server** and a receipt of the banknotes in the banknote cassette is printed out. A second key is required to open the banknote cassette.
3. Position the banknote cassette with the *opening flap* facing upwards.
4. Press the *opening flap* gently and use the key to unlock the *banknote cassette lock* (anti-clockwise).
5. After removing the banknotes, use the key to close the *opening flap* carefully (clockwise) and remove the key.
 - The *indicator* lights up green and the cassette can be inserted.
6. Re-insert the banknote cassette into the banknote recycler and fold down the handle.
7. Make sure that the banknote cassette engages properly.

- i** It must be possible to insert the banknote cassette with a minimum amount of force. If the banknote cassette does not engage correctly, check whether the locking lever is unlocked and the banknote cassette indicator is illuminated green. If the indicator is gray, the banknote cassette must be relocked by opening it, removing all the banknotes and then relocking it.

8. Subsequently lock the locking mechanism.

21.3.4 Removing and opening the loader cassette

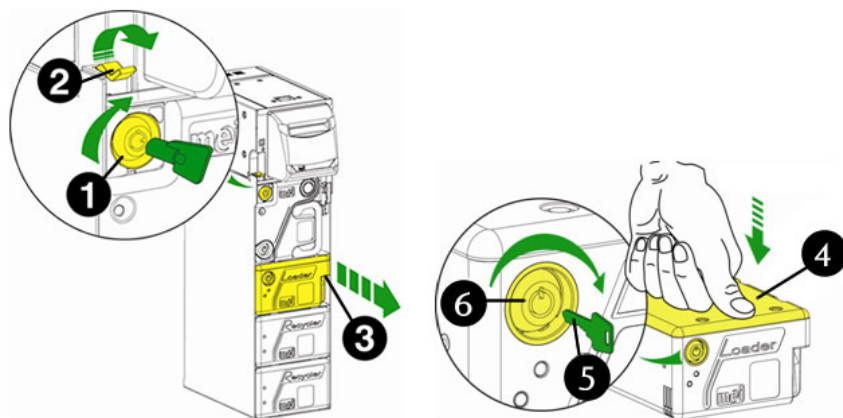


Fig. 87: Removing and opening the loader cassette

- 1 Lock
- 2 Locking lever
- 3 Loader cassette
- 4 Opening flap
- 5 Key
- 6 Loader cassette lock

Switched-on device.

1. Unlock the locking mechanism at the *lock* and the *locking lever*.
2. Extract the *loader cassette* from the banknote recycler.
A second key is required to open the loader cassette.
3. Position the loader cassette with the *opening flap* facing upwards (see figure above).
4. Press the *opening flap* gently and use the *key* to unlock the *loader cassette lock* (clockwise).
5. Fill the loader cassette with banknotes (see chapter 21.3.5 *Loader cassette: Filling with banknotes* on page 160).

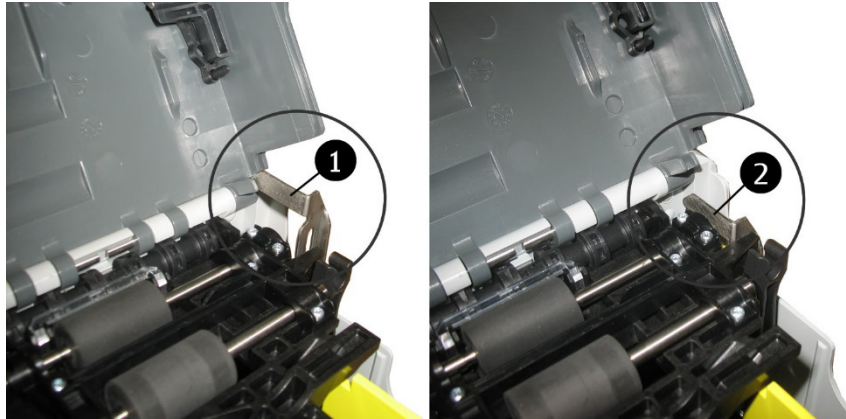


Fig. 88: Loader cassette, locking latch: correct position (left), wrong position (right)

6. Make sure the locking latch is *positioned correctly*. If necessary, lift the locking latch until it engages in the guide.
7. Press the *opening flap* gently and use the key to close it carefully (anti-clockwise).
- A click indicating that the loader cassette has been locked properly is audible after turning the key to a vertical position.
8. Re-insert the loader cassette into the banknote recycler. Support it from the bottom.
9. Make sure that the loader cassette engages properly.



It must be possible to insert the loader cassette with a minimum amount of force. If the loader cassette does not engage correctly, check whether the locking lever is unlocked.

10. Subsequently lock the locking mechanism.

21.3.5 Loader cassette: Filling with banknotes

Preparation of banknotes

-
- i** Always fill the loader cassette with carefully prepared banknotes.
If the notes are not carefully prepared they can become trapped in the transport route or cause dispensing faults.
-

Condition of banknote piles

Banknotes which are

- stuck together or have sticky surfaces,
- have bent edges of more than 5mm or have tears longer than 5mm,
- are limp or moist,
- are fastened with paper clips etc. or have been repaired with sticky tape,
- have holes or missing sections,
- are creased, concave or are deformed by storage,

can cause dispensing faults. This can also occur when using new and old banknotes in the same cassette.

-
- i** Avoid using the banknotes described above.
Only fill banknotes of one value in each cassette.
-

Preparation of new (bundled) banknotes



Fig. 89: Preparing banknote bundle

1. Store the banknotes at room temperature (min. of 8 hrs prior to filling).
2. Undo the band around the banknote bundle.
3. Separate the notes:
Loosen the notes by striking the bundle on the edge of a table.
Leaf through the banknote bundle from both sides at both ends.
4. Or: Loosen the bundle using an automatic banknote counter.
5. Arrange the bundle evenly by tapping the longer edge on a table.

Preparation of used (bundled) banknotes

1. Undo the band around the banknote bundle.
2. Remove any foreign objects (paper clips, etc.).
3. Remove torn or very worn notes.
4. Flatten creased or bent banknotes.
5. Arrange the bundle evenly by tapping the longer edge on a table.

Filling with banknotes

1. Release and open the loader cassette (see chapter 21.3.4 *Removing and opening the loader cassette on page 158*).

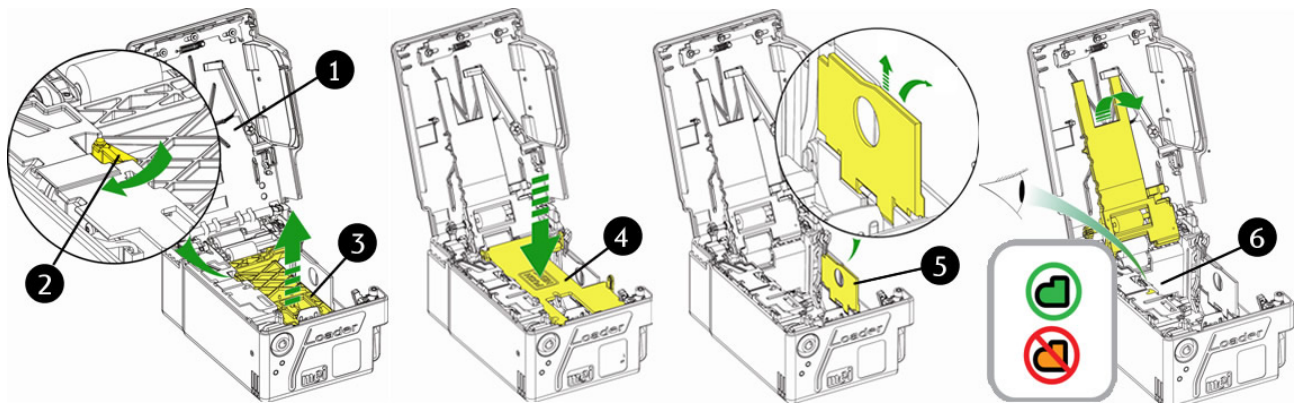


Fig. 90: Filling with banknotes

- 1 Opening flap
 - 2 Locking lever
 - 3 Max. level detection plate
 - 4 Pressure plate
 - 5 Lateral banknote guide
 - 6 Control indicator
2. Open the *opening flap* fully.
 3. Release the yellow *locking lever* and lift up the *max. level detection plate*.
 4. Push down the *pressure plate* until it engages at the floor of the loader cassette.
 5. Lift up the *lateral banknote guide* and fold it down.
 6. Fill the loader cassette with new banknotes: Insert a bundle of max. 250 banknotes from the side.
 7. Fold up and re-align the *lateral banknote guide*.
 8. Fold down the *max. level detection plate*.
 9. Make sure the *control indicator* is illuminated green. If the control indicator is red, remove a few banknotes until it changes to green.

NOTICE

Avoid overfilling the loader cassette and do not close the max. level detection plate with force.

21.4 Carrying out maintenance work at the banknote recycler BNR MEI

21.4.1 Safety

Inappropriate cleaning and basic services



WARNING

Risk of injury from inappropriate cleaning and basic services!

Inappropriate cleaning and basic services can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out basic services, cleaning and filling work **inside** the device as indicated (see list below) and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Electric voltage



DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate cleaning

WARNING

Risk of injury from inappropriate cleaning!

Inappropriate cleaning can cause severe or lethal injuries.

- Only trained **shift managers** are allowed to carry out cleaning **inside** the device as indicated and described in this chapter.
- If any other servicing is needed, please contact your Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners. (For contact: see the beginning of this operating manual).
- Make sure that cleaning fluids are neither swallowed nor come into contact with eyes.

Inappropriate cleaning with air pistols

CAUTION

Risk of injury due to inappropriate cleaning with air pistols!

Inappropriate cleaning with air pistols may result in minor injuries or damage to eyes due to flying particles.

- Always wear safety goggles.
- Prevent air penetrating the body through skin injuries.
- Do not aim air pistols at people.
- Only use air pistols with a maximum pressure of 50.8 psi (3.5 bar).
- Only use air pistols with a reduced noise level (multi-hole nozzles).

Inappropriate cleaning

NOTICE

Inappropriate cleaning can result in damage of the device.

- Do **not** use thinners to clean the device.
Recommended cleanser: DESIGNA cleaning fluid.

NOTICE

Damage of the device.

The **green** operating elements are intended for fully trained specialized staff or DESIGNA Service staff **only**.

The **yellow** operating elements at the module BNR MEI can be used on a daily basis by instructed shift managers who are familiar with the operating and safety instructions.

Shift manager

Specially instructed **shift managers** are allowed to carry out maintenance, cleaning and filling works as described in the following sections. These are:

- | | |
|-------------------------|---|
| General | <ul style="list-style-type: none">■ Checking the cleanliness of the banknote recycler elements■ Cleaning banknote recycler elements with a damp, lint-free cloth or compressed air, if necessary■ Checking all connecting cables |
| Locking mechanism | <ul style="list-style-type: none">■ Unlocking and locking the locking mechanism |
| Main module and console | <ul style="list-style-type: none">■ Extract the pull-out unit with the banknote recycler.■ Remove the banknote cassette from the banknote recycler■ Open the test unit cover, positioner cover and console cover■ Cleaning the main module and console |
| Banknote cassette | <ul style="list-style-type: none">■ Remove the banknote cassette from the banknote recycler■ Cleaning the banknote cassette with compressed air |
| Loader cassette | <ul style="list-style-type: none">■ Remove loader cassette from the banknote recycler■ Cleaning the loader cassette with compressed air■ Filling the loader cassette with banknotes |

21.4.2 Cleaning off outer soiling


1. Switch off the device.
2. Outer soiling due to dust, snippets of paper etc. has to be carefully cleaned off with a damp, fluff-free cloth or with compressed air.
3. Switch on the device.

21.4.3 Cleaning the main module

1. Switch off the device.
2. Extract the pull-out unit with the banknote recycler.

Cleaning the banknote acceptor and the positioner


1. Remove the banknote cassette.

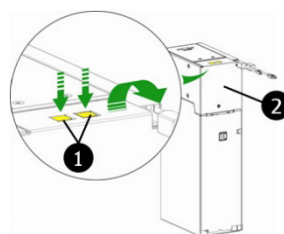

- 1 Yellow buttons
- 2 Test unit cover

Fig. 91: Opening the test unit cover

2. Open the *test unit cover* by pressing the two yellow *buttons* and simultaneously folding down the *test unit cover*.

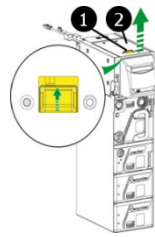

- 1 Latch
- 2 Positioner Cover

Fig. 92: Opening the positioner cover

3. Open the *positioner cover* by lifting up the *yellow latch* and simultaneously raising the *positioner cover*.

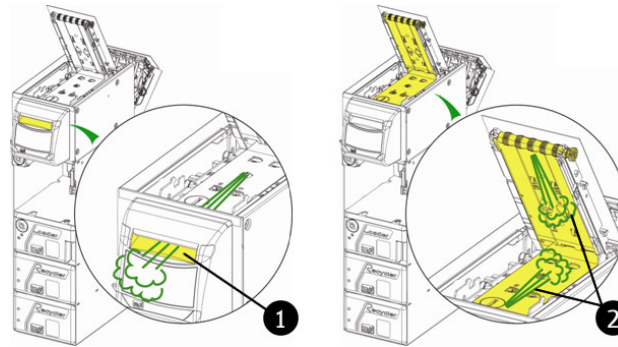


Fig. 93: Cleaning the banknote acceptor and the positioner

- 1 Banknote acceptor
 - 2 Positioner
4. Clean the *banknote acceptor* with compressed air in the indicated direction.
 5. Clean the *banknote acceptor* and the *positioner* with compressed air in the indicated direction.

Cleaning the test unit

Cleaning the test unit

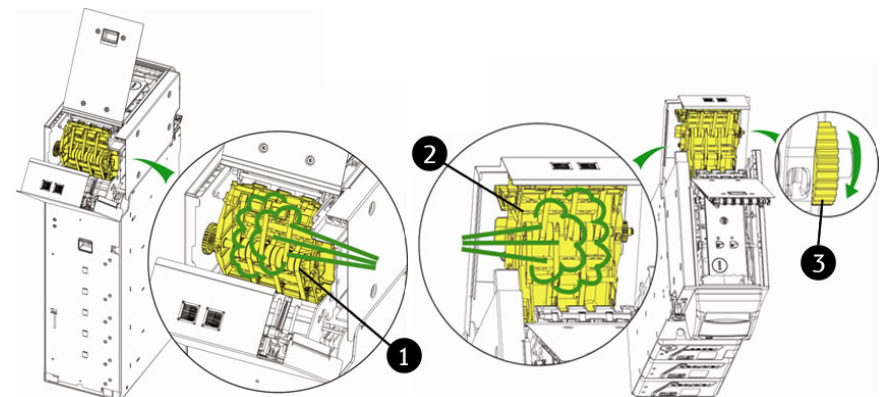


Fig. 94: Cleaning the test unit

- 1 Interior of the test unit
- 2 Rear of the test unit
- 3 Coding wheel


Notice

Damage of device

- Make sure the compressed air does not produce any particles or condensation.
- Clean the test sensors carefully, ensuring they are not scratched or damaged.

1. Clean the *interior of the test unit* with compressed air in the indicated direction.
2. Clean the *rear of the test unit* with compressed air in the indicated direction and simultaneously rotate the *coding wheel*.
3. Close the *positioner cover* and then the *test unit cover*.

Cleaning the test unit and the main module from the bottom

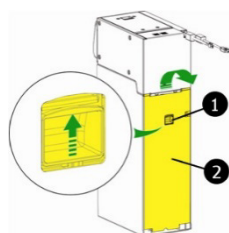

- 1 Latch
- 2 Console cover

Fig. 95: Opening the console cover

1. Open the *console cover* by lifting up the yellow *latch* and simultaneously folding down the *console cover*.
2. Open the *test unit cover*.

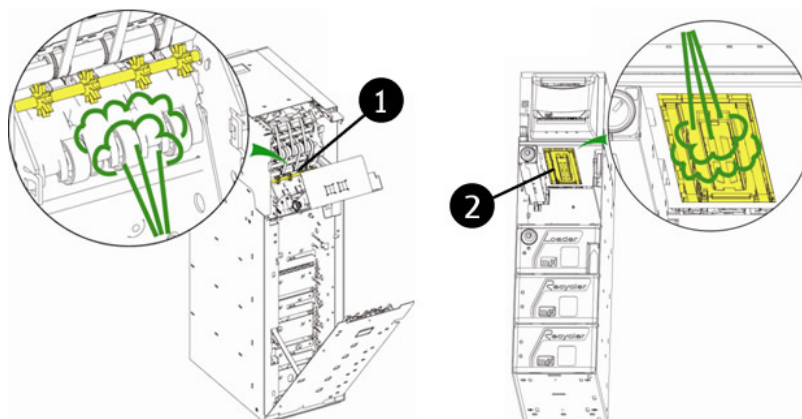


Fig. 96: Cleaning the test unit and the main module from the bottom

- 1 Deflectors
- 2 Area underneath the main module
3. Clean the rotating *deflectors* inside the test unit with compressed air in the indicated direction in order to clean the test sensor at the lower transport mechanism.
4. Clean the *area underneath the main module* with compressed air in the indicated direction.
5. Close the *test unit cover*.

Cleaning the console

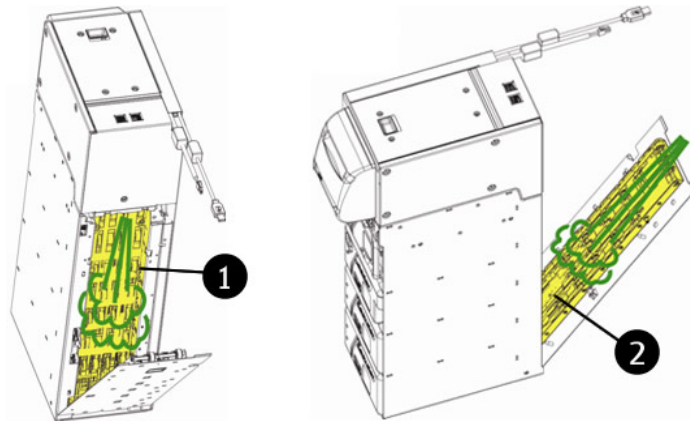


Fig. 97: Cleaning the console

- 1 Interior of the console
- 2 Rear of the console

1. Clean the *interior of the console* with compressed air in the indicated direction.
2. Clean the *rear of the console* with compressed air in the indicated direction.
3. Close the *console cover*.
4. Switch on the device.

21.4.4 Cleaning the banknote cassette

1. Clean the banknote cassette with compressed air.

21.4.5 Cleaning the loader cassette

1. Clean the loader cassette with compressed air.

21.4.6 Checking all connecting cables are inserted correctly

1. Switch off the device.
2. Check that all connecting cables are inserted correctly.
3. Switch on the device.

21.5 Troubleshooting

21.5.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

When the device is switched on, the main power voltage (120V) is applied to the following components: Power distribution box, terminal block -X0, power supply unit and to the optional heater and thermostat and, if necessary, to further optional components (see *chapter Device Description*).

- Only specially instructed **shift managers** are allowed to carry out certain maintenance and filling work **inside** the device.
- Switch off the device (see *chapter 5.3.5 Power distribution box on page 36*) unless the work step requires a voltage supply.
- Be aware that the terminal block -X0 and the power distribution box remain energized (120V) even when the automatic circuit breakers are switched off.

Inappropriate troubleshooting

NOTICE

Inappropriate troubleshooting can result in damage of the device.

- Always observe the following simple troubleshooting measures.
- Simple troubleshooting measures are listed below.
Complex measures should only be carried out by trained specialized staff or by your DESIGNA service.

NOTICE

Damage of the device.

The **green** operating elements are intended for fully trained specialized staff or DESIGNA Service staff **only**.

The **yellow** operating elements at the module BNR MEI can be used on a daily basis by instructed shift managers who are familiar with the operating and safety instructions.

Shift manager

Specially instructed **shift managers** are allowed to carry out troubleshooting as described in the following sections.
These are:

- | | |
|-----------------------------|--|
| Removing a trapped banknote | <ul style="list-style-type: none"> ■ in the console ■ in the test unit ■ at the transition between the test unit and the console ■ in the positioner at the banknote insertion slot ■ in the loader cassette ■ at the banknote cassette-pressure plate |
| Recycling cassette | <ul style="list-style-type: none"> ■ Remove the recycling cassette ■ Preparing the recycling cassettes for transportation |

21.5.2 Eliminating a jam

A banknote may become stuck in the module BNR MEI. A jam can be simply eliminated as follows

In the console

1. Open the *console cover*.
2. Remove the banknote carefully and close the *console cover*.

In the test unit

1. Open the *test unit cover*.
2. Remove the banknote carefully and close the *test unit cover*.

At the transition between the test unit and the console

1. Open the *console cover*.
2. Open the *test unit cover*.
3. Remove the banknote carefully.
4. Close the *test unit cover* and then the *console cover*.

In the positioner at the banknote insertion slot

1. Open the *console cover*.
2. Open the *test unit cover*.
3. Open the *positioner cover*.
4. Remove the banknote carefully.
5. Close the *positioner cover*, then the *test unit cover* and finally the *console cover*.

In the loader cassette

1. Open the *console cover* and check whether the banknote has become trapped when exiting the loader cassette.
2. Remove the banknote carefully, if it is visible.
3. Close the *console cover*.
4. If the banknote is not visible, remove and open the loader cassette.
5. Remove the banknote carefully.
6. Close the loader cassette and re-insert it into the banknote recycler.

At the banknote cassette-pressure plate

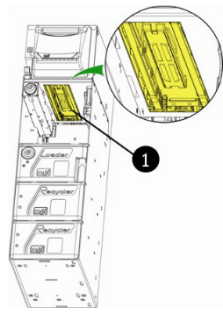


Fig. 98: Banknote cassette-pressure plate

1. Remove the banknote cassette.
2. Check whether the banknote has become trapped at the *pressure plate* ❶ inside the banknote recycler.
3. Remove the banknote carefully, if it is visible.
4. The banknote cassette must be re-locked by opening it, removing all the banknotes and then re-locking it.
5. Re-insert the banknote cassette into the banknote recycler.

In the recycling cassette

⚠ WARNING


Risk of injury due to coil springs in the in recycling cassette

- **Only** fully trained specialized staff or DESIGNA Service staff should carry out work at the recycling cassette.
- Do not try to disassemble or destroy the recycling cassette. Risk of injury: The compressed coil springs can cause serious injuries.

Removing the recycling cassette

Switched-on device.

1. Unlock the locking mechanism via the lock and the locking lever.
2. Remove the loader cassette.

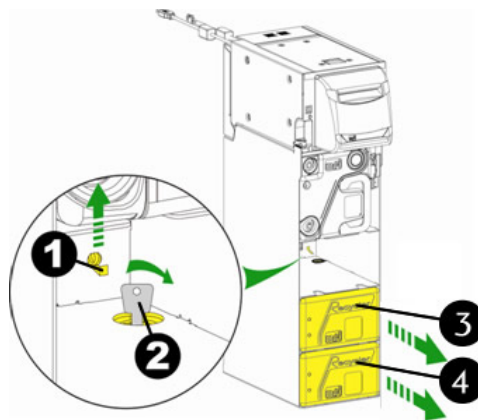

- 1 Locking pin
- 2 Key
- 3 Recycling cassette A
- 4 Recycling cassette B

Fig. 99: Removing the recycling cassette

3. Fold up the *locking pin* at the rear of the banknote recycler and use your left hand to insert the *key* in order to unlock the *recycling cassette A*.
4. Press the *key* and turn it 90° to the **right** (clockwise). Remove the *key* before extracting the *recycling cassette A*.
5. If necessary, also remove *recycling cassette B*. There is no *locking pin* for *recycling cassette B*.

Removing trapped banknotes

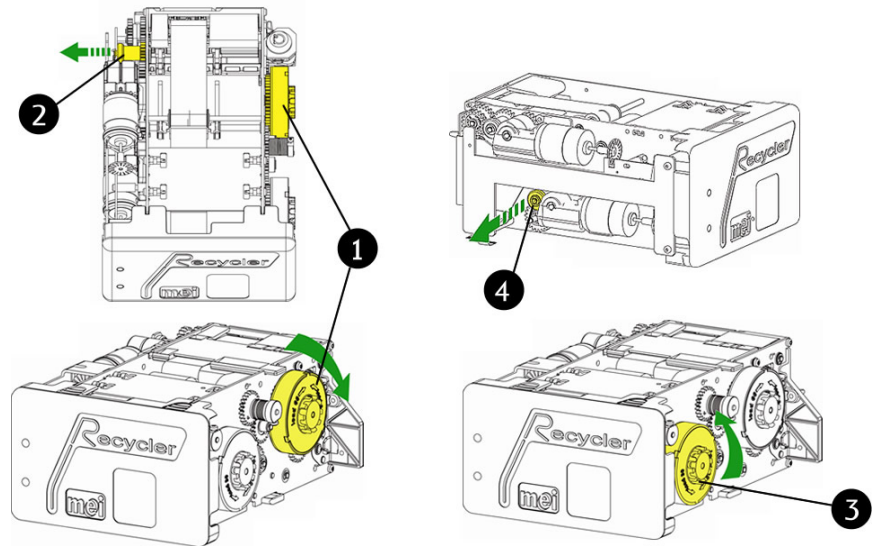


Fig. 100: Recycling cassette: Removing trapped banknotes

- 1 Load disc 30 (30 banknote holder)
- 2 Gear wheel 30 (30 banknote holder)
- 3 Load disc 60 (60 banknote holder)
- 4 Gear wheel 60 (60 banknote holder)

30 banknote holder:

1. Align the recycling cassette with the front facing towards you.
2. Hold the white *Load disc 30* on the right-hand side.
3. Pull the *gear wheel 30* on the left-hand side to disengage the gear wheels.
4. Rotate the white *Load disc 30* on the right-hand side **clockwise**.

60 banknote holder:

5. Hold the white *Load disc 60* on the right-hand side.
6. Pull the *gear wheel 60* on the left-hand side to disengage the gear wheels.
7. Rotate the white *Load disc 60* on the right-hand side **anti-clockwise**.

- The banknotes move towards the output at the rear of the recycling cassette.



Keep hold of the white Load disc during this process, otherwise the system will wind up again.

8. Continue to rotate the white *Load disc* until all the banknotes have been removed from the recycling cassette.
9. Once the banknotes have been removed from the recycling cassette, release the *gear wheel* and then the white *Load disc*.

Inserting the recycling cassette

1. Re-insert the *recycling cassette B* into the banknote recycler.
2. Use your left hand to insert the *key* to lock the recycling cassette. Press the key and turn it 90° **to the left** (anti-clockwise).
3. Re-insert *recycling cassette A* into the banknote recycler and lock it
4. Fold down the *locking pin* at the rear of the banknote recycler.

5. Re-insert the loader cassette into the banknote recycler.
6. Lock the locking mechanism.

21.5.3 Preparing the recycling cassettes for transportation

When replacing the *recycling cassettes* or the banknote recycler BNR MEI, the *recycling cassettes* must be moved to the parking position for transportation.

1. Empty the *recycling cassettes* (function cards 06-13, 06-14, 06-15 and 06-16 (see *Empty recycling cassettes of the banknote recycler BNR MEI on page 81*).
2. Insert function card 36 *Park MEI BNR4* into the reading device.
 - Function card 36 is used to check whether the *recycling cassettes* are empty or not. The *recycling cassettes* are subsequently moved to the parking position.

22 RFID (Hands-free Identification) (optional)

A convenient entry check is enabled by using a hands-free identification system at the control devices. For the **additional payment** and **renewal** of **RFID** cards antennas can also be mounted to Automatic Pay Stations.

The transmitter-receiver antennas are installed either in the device's monitored area or directly on the device. When **RFID** cards are brought closer to the antennas (if necessary, after occupying loop V), a radio link is created and the antenna receives the relevant card data (min. card number; with **EasyMove** cards, e.g., also the parking facility number and the **type of item**). The antenna signal is processed via a controller in or on the device or directly at the antenna and then transmitted to the **TCC/SBC**. The data is requested at the **System server** and checked for certain parameters.

If the **RFID** card is a valid ABACUS **type of item** (e.g. **monthly card**) and valid for the parking facility, the barrier gate opens. A roller door or similar object can be controlled instead of a barrier gate.

i

With hands-free processes, information for processing is in the **System server**. Thus, actions with RFID cards are **only limited offline compatible**:

For every process at the devices, information has to be requested via an intact data line³⁶.

The following hands-free systems, which allow various reading distances for hands-free operation, can be used in the ABACUS system:


- EasyMove
- Short Range RFID system:
Legic Proximity System, Mifare Proximity System, ISO 15693 Proximity System
- Long Range RFID systems:
RFID systems with UHF technology

³⁶ Cards can also be processed **offline** with the hands-free system **EasyMove**:
Up to 1250 card movements can be stored at the **TCC/SBC** and transferred to the **System server** when the device is **online** again.

22.1 EasyMove

22.1.1 EasyMove antenna (EMA)

EMA 090-2

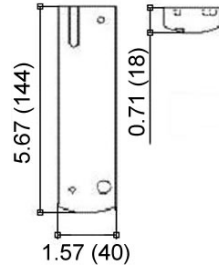

The EMA 090-2 is suitable for short range distances, e.g. for EasyMove operation at Automatic Pay Stations or for checking entry at doors or into security areas.

- Range with active EasyMove card: approx. 11.8 in (approx. 30cm)
- Range with passive EasyMove card: approx. 3.15 in (approx. 8cm)
- Operating frequency: 125 kHz

Fig. 101: EMA 090-2: Approx. dimensions in inch und (mm)

22.1.2 EasyMove cards

EasyMove cards are programmed with a fixed identification number. This is either pre-programmed by DESIGNA or can be allocated to the card via an optionally available programming device.

Passive or active EasyMove cards are available:

Active cards 928 are equipped with lithium batteries and thus achieve the largest ranges in the EasyMove system. *Passive cards 938* in the form of a credit card are supplied with the necessary energy by the antenna and thus achieve approx. 75% of the efficiency of the active cards. These cards can be additionally equipped with a magnetic stripe or contact chip. Both cards can be used together, thus allowing choice of the most suitable card according to the required purpose.

The *Transponder 970* has been developed for very reliable identification of vehicles at large distances. This transponder is attached to the underside of a vehicle and is extremely robust and resistant. Due to a powerful lithium battery, data is still transferred safely even during strong interferences.

Technical data

	Active cards	Passive carte	
Housing	synthetic (ABS)	PVC	ABS
Thickness	0.11 in (2.8 mm)	0.04 in (1 mm)	0.06 in (1.6 mm)
Weight	0.48 oz (15 g)	0.23 oz (7 g)	0.39 oz (12 g)
Operating temperature	-4°F to +122°F (-20° to +50°)		
Type of battery	3V lithium	none	
Service life of battery	up to 7 years	-	
Range	up to 39.4 in (100 cm)	up to 11.8 in (30 cm)	
Magnetic stripe	no	possible	no
Color	gray	white	gray

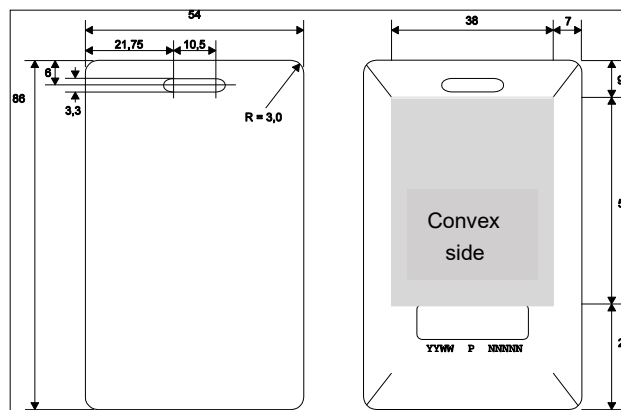
Dimensions


Fig. 102: EasyMove card (active): Approx. dimensions in mm

22.2 Short range RFID systems: Legic/ Mifare/ ISO 15693 Proximity Systems

As further ABACUS **RFID** systems, the following RFID systems can be used:

- Legic Proximity System (operating frequency: 13.56 MHz)
- Mifare Proximity System (operating frequency: 13.56 MHz)
- ISO 15693 Proximity System (operating frequency: 13.56 MHz)
- HID Proximity System (operating frequency: 125 kHz)
- HID Hybrid card reader (operating frequency: 125 kHz and 13,56 MHz)

The following are required (e.g. from your time recognition system):

- **RFID** cards
- system specific antennas
- system specific card reading devices (in order to allocate the card numbers as **types of tickets**)

22.2.1 RFID cards



Fig. 103: Example Mifare card

The **RFID** cards of the Legic Proximity System, Mifare Proximity System and ISO 15693 Proximity System are based on flexible identification standards for hands-free applications.

The cards are equipped with a card number (usually a serial number) which can be read by the system specific antennas and reading devices.

These are passive cards which do not require batteries, the required transmission energy is provided by the antenna.

The cards usually come in a “credit card format” (ID-1 format): 3.37x2.13 in (85.60x 53.98 mm).



Ask your DESIGNA service whether existing ABACUS system cards (e.g. from your time recognition system) can be used).

22.2.2 System-specific antennas



Fig. 104: Example: Antenna

Antennas in the ABACUS system are installed behind the reading panel cover or directly in the reading device.

Antennas of the Legic Proximity System, Mifare Proximity System and ISO 15693 Proximity System and HID Proximity System are short reading-range antennas:

- | | |
|---|-----------------|
| ■ Legic antenna range (passive card): | approx. 1.57 in |
| (approx. 4cm) | |
| ■ Mifare antenna range (passive card): | approx. 1.97 in |
| (approx. 5cm) | |
| ■ ISO 15693 antenna range (passive card): | approx. 1.57 in |
| (approx. 4cm) | |
| ■ HID ProxPoint Plus® antenna range (passive card): | approx. 1.97 in |
| (approx. 5cm) | |
| ■ HID Hybrid card reader range (passive card) | approx. 1.97 in |
| (approx. 5cm) | |

22.2.3 System-specific card reading devices

The system specific card reading devices are connected to the operating PC **WS 120**.

The devices read the **RFID** card number and relay it to the PC application **WinOperate** when **producing** the card: The card number is registered as a **monthly card** together with the necessary card information in the **System server** (*see the separate operator manual WinOperate*).

22.3 Instructions for RFID cards

- ⇒ Protect RFID cards against extreme cold and heat as well as temperature fluctuations:
Pay attention to the temperature ranges specified by the card manufacturer.
- ⇒ Make sure the cards are not bent or folded:
Pay attention to the specifications of the card manufacturer.
- ⇒ Protect the cards against direct sunlight.
(Sunlight will fade their color over time, cause the cards to warp or bend and impair the RFID technology).
- ⇒ Protect cards with additional magnetic stripes against magnetic fields, e.g. against magnetic print heads and certain electronic devices (such as radios or loudspeakers).
- ⇒ Do not allow the cards to come into contact (plastic becomes brittle) with aggressive solvents (e.g. gasoline, methylated spirits, etc.).
- ⇒ Do not keep the cards in soft PVC holders or wallets (risk due to PVC softeners or leather tanning agents).

23 Decommissioning, Disassembly and Disposal

23.1 Safety

Electric voltage

DANGER

Danger of death due to electric shock!

Contact with live components may result in death.

- Decommissioning and disassembly have to be carried out by electrical technicians or Designa electrical technicians or electrical technicians of Designa trained and authorized dealers and partners.
- Make sure that the power supply is **externally** disconnected and that it cannot be switched on.
- Test for absence of voltage.

Heavy weight

WARNING

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person.

- Never attempt to lift the device on your own.
- Always wear safety shoes.

Occupational safety and environmental protection

WARNING

Risk of harm to humans and the environment as a result of improper disposal of the device PAY COINLESS or components.

Improper disposal of the device or components can be harmful to human health and the environment.

- Disposal may only be carried out by qualified specialists.
- Pay attention to valid country-specific environmental regulations.

Occupational safety and environmental protection

WARNING

Risk of harm to humans and the environment as a result of improper disposal of rechargeable batteries and batteries.

Improper disposal of rechargeable batteries and batteries can be harmful to human health and the environment.

- Remove batteries and rechargeable batteries from all the components.
- Dispose of the batteries and rechargeable batteries according to valid country-specific environmental regulations.

23.2 Decommissioning and disassembly

1. Disconnect the device from all sources of supply (*see chapter 0 Power supply connection (terminal –X0) on page 196*).
2. Disassemble the device in reverse order to assembly (*see chapter 7 Installation on page 44*).
3. Disassemble the device into its individual parts.

23.3 Disposal

The device consists of recyclable materials.

- ⇒ After correct disassembly, sort the materials back into specific material types and recycle them.

24 Glossary

A

Additional payment

An **additional payment** can be charged for **monthly parker** or **value cards** or other **items** with special online application.

A **monthly card** is charged an additional payment if the monthly parker is still in the parking facility when the card validity runs out. In this case, the rate is calculated from the end of validity until the time of payment. If not additionally paid for, the monthly card is withdrawn and marked as deleted at the exit. A monthly card also has to be additionally paid for if parking occurs outside **the group time**. On which rate this additional payment is based in both cases depends on the configuration of the **monthly parker group**. A transient rate is used if no special charge has been defined as additional payment.

A **value card** is charged an additional payment if the parking fee exceeds the residual value of the value card. The customer has to pay the difference at an automatic or manual payment system or (if possible) at an exit.

Other **items** with special online application are charged an additional payment if the **group time** is exceeded: When the selected parking duration is exceeded, additional payment is due according to the rate ID for additional payment assigned in the Item details.

The payment device must be **online** to carry out an additional payment in a barcode system.

Advance payments, accepted

A payment which can only be partially paid (example: the customer has insufficient change) can result in this amount being credited to the ticket during cancellation. This part payment is listed as an **accepted advance payment** in the operating report.

The customer can pay the residual fee at a later date at the same or another automatic payment system. The previous accepted advance payment is then booked as an **offset advance payment**.

Crediting during cancellation at an automatic payment system instead of returning the inserted money depends on the device configuration.

Advance payment, offset

If a ticket which has been partially paid (**accepted advance payment**) is fully paid at a later date, the previous accepted advance payment is booked as an **offset advance payment**.

The previous incomplete payment from the accepted advance payment has now been completed. Therefore, offset advance payments are listed in the operating report the same as other payments, accepted advance payments are considered separately.

Alarm message

All the occurrences in the ABACUS system, e.g. *barrier broken*, *door to the pay station has been opened* etc., are displayed as **alarm messages**. Every possible alarm message is assigned an alarm number.

If something occurs at a device an alarm message is sent from the device to the **System server**, which not only logs the name and number of the alarm message but also the **TCC/SBC no.**, date and time. The alarm messages are registered in a database in the **System server** and can be displayed at the **WinOperate**.

Anonymous

In the ABACUS system, **monthly cards**, **value cards** and **congress tickets** can be issued as **anonymous** cards. This may be necessary due to data protection provisions, e.g. if the trips of employees should not be recorded.

All the event and receipt information of anonymous cards is recorded without card numbers. This ensures that the cards remain relevant for parking occupancy, turnover etc. However, the history of these cards – i.e. their trips and payments – is thus invisible in the corresponding **WinOperate** functions (e.g. *event details* and *ticket tracking*).

B

Blacklist

Cards which are not desired in the facility can be detected at the devices with the ABACUS system's **blacklist**. Cards can be put on the blacklist automatically by the system (**card not entered**) or manually. Blacklist cards are, according to the device configuration, either refused, withdrawn and/or deleted.

Blacklist check

The **blacklist check** can be switched on or off for each device. In principle, the blacklist-check should be switched on: the device takes the blacklist entries into account and rejects or withdraws listed cards. If the blacklist-check is switched off the device also accepts blacklisted cards.

C

Card not entered

The ABACUS system judges a ticket to be a **card not entered** if only a ticket is taken without an actual entry occurring. The taken ticket is registered immediately as a **card not entered** at the **System server** and this message is then transferred from the System server to all the devices; thus if an attempt is made to use the ticket it is rejected as "invalid".

Charging

Charging is a **value card** function. The decision whether value cards should be charged or not is set during the setting of the **item** value card. The "chargeability" of value cards allows the customer to book a new cash amount onto the card when the original value has been used up. A **partial charging** is also possible: subject to a license

NOTE: The item which has been activated with the setting *Use at TCC/SBC* is used when charging cards at automatic pay stations.

The payment device must be **online** to charge barcode value cards.

Compressed air

In order to clean sensitive operating elements in ABACUS system devices (Multicon or similar devices), it is recommended to use a **compressed air** spray can. By using the spray can, it is possible to remove dust particles, paper chads etc. from the device.

NOTICE: When cleaning with compressed air, always make sure that the nozzle of the compressed air equipment is **not** aimed inside the device and that paper chads do not enter the ticket guides.

Suitable cleaning material: see DESIGNA Consumables Catalogue

Congress ticket

Congress tickets entitle repeated entrances and exits free of charge during a set time period. They can be purchased by an organizer before an event (conferences, trade fairs) at a set price and sent to the participants in advance.

Some item details can only be checked **online** in barcode systems (e.g. validity). Therefore, barcode congress tickets are rejected **offline**.

Credited

Credited groups are groups whose incurred fees, after exceeding the **group time (additional payment)**, are stored at the **System server** and thus can be invoiced at a later date (see operator manual "WebReport"). A credited group does not have to pay an **additional payment** immediately.

A pre-condition for invoicing additional payments of credited items is that the group has the property *Credited*. Recommended: Furthermore, make sure to enter the correct customer data, e.g. address and bank details, for all customers assigned with items with a credited group to ensure later settlement.

Customer related counting

By using **customer related counting** customers can be issued with several **monthly cards** but admission during one time period can be restricted to a specific number of cards (example: A customer wishes to have 4 car monthly cards but only rents 2 parking spaces).

D

DBS (also System server): see **System server**

Detector N/ Detector V

For a standard application with two loops, the loop N is located underneath the barrier gate arm as a closing loop and the loop V at the control device as a presence loop.

The signal from loop N is evaluated by the **detector N** and the signal from loop V by the **detector V** and relayed to the barrier control unit for processing.

Device configuration

The device properties are set in the **device configuration** when setting up new devices or when changing existing settings. These are device-specific parameters which can vary according to the installed operating elements and define how the device should "behave" in the ABACUS system. Device configuration is always carried out by your DESIGNA service.

Drive&pay (also KK-EC as STP)

The function **drive&pay** in the DESIGNA parking system allows customers to enter and **exit** the parking facility with credit and other customer cards or with SmartCards. The entrance and exit times of the cards are recorded in the **System server** (card number) and subsequently invoiced or (with SmartCards) deducted when exiting. Furthermore, the payment of **transient tickets** is possible at an exit control terminal with the option Drive&pay.

NOTE: The function drive&pay does **not function offline**, i.e. for it to function there has to be communication with the System server.

Drive-through and usage message (graylist): see **Graylist** and **Usage message**

E

EasyMove

EasyMove is the name of the standard **RFID** system which is used for a hands-free entry check in the ABACUS system: combined with an EasyMove antenna the EasyMove cards allow a hands-free entry and exit at a distance of up to 1 meter (depending on the antenna used). EasyMove cards, as with **value cards** or **monthly cards**, are a very convenient way of entering or exiting a parking facility.

Ethernet

Ethernet is a widespread and standardized communication infrastructure for local networks (**LAN**). All devices to be networked have their own IP (Internet Protocol) address, which is used for communication independent of the location. The consistent use of the Ethernet standard for all operating elements enables a diversity of access possibilities and networking types (e.g. fiber optics or wireless **LAN**).

Exit authorization

Certain data is used to write an **exit authorization** onto tickets after valid payment (magnetic stripe systems: magnetically coded, barcode systems: printed at the ticket printer), or the authorization is registered in the **System server** (e.g. RFID or credit cards) and checked at an exit control terminal.

F

Flexi cards

In some systems **value cards** are issued as **flexi cards**. Flexi cards, just like value cards, allow customers to utilize ("park") an existing value without having to pay at an automatic pay station.

The flexi card allows to enter and exit as often as desired during a set time frame. The amount³⁷ is deducted from the flexi card during the first exit, every further parking process during the set time frame is free of charge.

The fee for using the flexi card depends on the set **payment type** (GID) in the rate configuration.

Function cards

Function cards initiate certain functions at ABACUS system devices. These are a set of cards which are obtained from DESIGNA with (pre-coded) functions for your system (see separate instructions "Function cards") or which can be created at a later date at the **WinOperate**.

³⁷ The fee for using the flexi card depends on the set payment type (GID) in the rate configuration.

G

GID: see. **Payment type**

Graylist

In the ABACUS system, the **graylist** registers conspicuous cards and reacts to their usage or drive through.

The cards can be allocated the message types **drive-through message** or **usage message**, thus triggering the corresponding **alarm messages** or other set reactions.

Groups, Group details: see **Monthly parker groups** and **group time**

Group time

With the help of **groups** it is possible to divide **monthly parkers** or other **items** with special online application into different groups for which different conditions are valid. This also includes the setting of the **group time**: the length of stay (if necessary, recorded in a contract) for which the customer pays a lump sum.

Thus, a customer who only wishes to use the parking facility at night can be offered a more reasonable price than a customer who wishes to use the parking facility 24 hours a day. It is possible to determine whether customers - outside their group time - are either not allowed to enter or are allowed to enter, but then have to pay a fee for the parking times outside the group time (additional payment).

Barcode monthly cards are rejected **offline**, unless configuration of the barcode system allows monthly cards to enter and exit the parking facility offline. However, the group time will not be checked offline: This means the monthly parker group is not restricted offline by group times.

H**Hands-free identification**

The ABACUS system supports various systems for the hands-free identification (also see **RFID**) of **monthly parkers** and **value card** users. The products range from proximity terminals with reading distances of several centimeters to hands-free applications with an operating range of 10 meters. All the systems are completely wear-free since they function without moving parts and electrical contacts.

Hopper

The *change unit* allows change to be given at the automatic payment system. The change unit is equipped with change holders, which are called **hoppers**. The hoppers are "numbered" for **device configuration** (clockwise).

Hotel (as hotel ticket registered cards)

A **hotel ticket** is issued by recoding a transient ticket at the manual pay station or at the application PAY manual touch station. After entering the guests' scheduled departure dates they can use the parking facility as often as desired until the set time.

Hotel tickets are not available for barcode systems.

I**ID medium**

Various ID media can be used at the entrance and exit: paper ticket, RFID card, print@home ticket with QR Code (Quick Response Code), smartphone with QR Code, credit card; license plate recognition, customer card or number code.

I/O check

The **I/O check** (Inside/Outside-Check) checks the **I/O identification** of the ticket: On the basis of the **TCC/SBC no.** it is possible to see at which device last use occurred.

If the ticket was last used at an entrance or pay station it is "inside" and next use, if the I/O check is switched on, has to occur at an exit. If the ticket was last used at an exit next use has to occur at an entrance or pay station.

The I/O-check can thus stop, e.g., several vehicles being taken out of the parking facility with one **monthly card**, because after using the card at an exit next use has to occur at an entrance or pay station.

If configuration of the barcode system allows monthly cards to enter and exit the parking facility **offline**, there is no offline I/O check.

I/O identification (wrong)

The last used device (**TCC/SBC no.**) is allocated to the ticket as the **I/O identification**.

If the **I/O check** is switched on the I/O identification is checked and tickets with **wrong I/O identification** are, depending on the **device configuration**, rejected and deleted or withdrawn. An I/O identification is wrong when the logical, alternating ticket pattern of "inside" and "outside" has not been observed (e.g. if two exits, one after the other, are attempted with the same ticket without an entrance having been used in the meantime).

Item

Items are set in order to issue cards of a **type of item** with various properties. The properties depend on the respective type of item.

In order to issue cards in the system, items which can be used at the parking facility have to at first be defined. Items are allocated to a customer, thus **preparing** a card in the system.

K**Keypad**

Optionally, a number code can be used as the **ID medium** for **pre-bookings**. This number code is entered at the entrance via a **keypad**.

KK-EC as STP: see **drive&pay**

L**LAN**

A **LAN** (Local Area Network) is a locally limited network under control of the owner. In the ABACUS system, the **LAN** is the parking facility network achieved via **Ethernet**. This can include just the parking facility or also company units or networked partners (e.g. multi-facility centres).

Login group

In order to provide **users** with various user rights for the **WinOperate**, the **system logins** are allocated to various **login groups**. The login group specifies which functions are available for the logged in user. The various login groups are *DESIGNA*, *Administrator*, *Service personnel*, *Accounting personnel*, *Operating personnel* and *Staff*.

The login group "DESIGNA" has been set solely for your DESIGNA Service for service and remote maintenance purposes.

Lost ticket

A **lost ticket** can be issued to customers who claim to have lost their ticket. To avoid abuse of this function a price is usually charged which corresponds to the per diem rate.

Lost tickets can be issued with the function *Produce lost ticket* at the **WinOperate** or as a special function via a *Lost Ticket* push button at the automatic pay station. For this function an appropriate **Multicon** is necessary.

LPR

LPR (License Plate Recognition) is an image-processing technology used to identify vehicles by their license plates. This technology is used in various security and traffic applications, such as access-control systems.

While the vehicle approaches the barrier, the LPR unit automatically reads and registers the license plate. In the system this license plate data is used as ticket and receipt reference (in some countries required by tax authorities), or can be used for access authorization. In this case the data is compared to predefined lists: The system denies entry if e.g. the Card/ Vehicle allocation does not match or the barrier gate can open automatically for predefined VIP cards.

M**MAC address**

The **MAC address** (Media Access Control address) is the hardware address of each individual **TCC/SBC** that is used for permanent identification of the device in the system. The MAC address is permanently assigned to the device and displayed on a sticker affixed to the TCC/SBC (also referred to as the "Ethernet ID" or "physical address").

Media change

A **media change** involves changing to a different **ID medium** at the entrance control terminal. The parking customer is identified, e.g. via a QR Code (Quick Response Code), and is issued a paper ticket directly at the terminal.

Monthly cards

Monthly cards are issued with certain properties (price, validity, **group time**, with or without **reservation**) in order to offer the ABACUS system's **monthly parkers** different conditions.

This is defined by creating various types of items **monthly card** and various **monthly parker groups**. These are then written onto the monthly card when **producing** (or allocated to a card at the **System server**).

Some item details can only be checked **online** in barcode systems (e.g. validity). Therefore, barcode monthly cards are rejected **offline**, unless configuration of the barcode system allows monthly cards to enter and exit the parking facility offline. However, this results in certain item details not being checked offline (e.g. validity, **group time** or **I/O identification**).

Monthly parker

Monthly parkers are customers who wish to use the parking facility over a longer period and usually pay the incurred fee as a lump sum in advance. They are neither fixed to a certain number of parking processes nor to a set parking duration.

Monthly parker groups / Groups / Group details

Groups are usually set for **monthly cards** (**monthly parker groups**). Additionally, setting groups might also be necessary for other **types of item**, i.e. for their *special online application* (from version x15).

All the monthly parkers within the ABACUS system can be divided into different groups (**monthly parker groups**) for which different conditions are set. For example, a monthly parker group can be restricted to parking at night. A maximum of 14 monthly parker groups with different properties can be active for each parking facility.

The different properties are summarized as **group details** and the group number is allocated to the **monthly card** (or to the other **types of item** with *special online application*).

Monthly parker with reservation/ without reservation: see **reservation**

Multicon

The devices' (write/read) unit is known as **Multicon**. According to the desired function range and used technology (magnetic stripe or barcode), it is necessary to have different versions of the Multicon:

For example, in order to offer the function "**lost ticket**" at the automatic payment system a Multicon with ticket insertion from the rear is necessary, or for credit card payments a Multicon with a "parking position" is necessary.

O

Offline

If a device is **offline** there is no communication between the **System server** and **TCC/SBC**, i.e. ABACUS system's data transmission is interrupted and no data exchange can occur.

Offline, capable of functioning offline

The DESIGNA parking system is **capable of functioning offline** for standard functions: The devices carry on functioning in "stand-alone" operation in spite of the interrupted data line. All the accrued data at the device is accumulated in the TCC/SBC and transferred to the **System server** when online-standby is back on.

There is only a limited offline capability for barcode technology: Barcode tickets contain only partial information for processing.

Some of the other functions (RFID, credit card processing) are not capable of functioning offline: An intact data transmission between **TCC/SBC** and System server is needed³⁸.

³⁸ Credit card payments (up to 7) can be accepted if the device is offline (actions are saved in the TCC/SBC). Recommended: Only accept credit card actions if the device is online (standard).

One-use ticket

One-use tickets are issued at the MPS 120 and permit one exit: For example, a transient ticket used to enter the parking facility can be exchanged for a one-use ticket and the parking facility can be exited free of charge (also recommended: use of the function zero fee ticket at MPS 120) or at a fixed price.

Some item details can only be checked **online** in barcode systems (e.g. validity). Therefore, barcode one-use tickets are rejected **offline**.

Online

If a device is **online** there is communication between the **System server** and **TCC/SBC**, i.e. the ABACUS system's data transmission via **Ethernet** is intact and an exchange of data can take place.

Overpayment

Overpayment occurs if the parking fee is smaller than the inserted sum of money and no change can be returned at the automatic payment system (e.g. parking fee= EUR 2.30/ inserted amount= EUR 4.00 with 2x EUR 2.- coins; no change available. Overpayment= EUR 1.70).

P**Park app**

The term **park app** is the abbreviation for parking facility application. Application refers to an application program installed on a smartphone or a tablet computer. A **park app** can be used to carry out **pre-bookings**.

Park check

Park checks allocate parking authorization with various temporal conditions. The parking authorization information is coded onto a park check, which can then be used as a chaser card with a **transient ticket** at the automatic or manual payment system (if necessary, also at the entrance control device when without a *recoding fee*). The transient ticket is recoded accordingly and, depending on the temporal conditions of the park check, allows the customer to enter and exit the parking facility.

Park checks are not available for barcode systems.

Parking permission

A parking permission serves to authorize vehicles within a parking system. Parking permissions can take the form of various access media, such as a paper ticket, plastic card, QR code, license plate or RFID card. Depending on the system, they may be valid for a single use, for a limited period or permanently.

Parking swindler: s. Card not entered**Partial charging**

Partial charging is a function for **value cards**. The decision whether value cards should be partially charged or not is taken during the setting of **item** value card. The partial charging of value cards enables customers to book a new amount of money onto the card when the old value has run out (has been parked). This new amount can be fixed by the customer and can be less than the amount for a (full) **charging**. For this, the value is calculated with the price at a ratio of one to one. The possible issuing of validations due to a favorable price/value ratio is not taken into consideration.

NOTE: The function partial charging is subject to a license.

The payment device must be **online** to carry out partial charging in a barcode system.

Payment type (GID)

Payment types are for example the standard rate which is incurred, certain **types of item** or any functions for which further alternative rates have to be accessed (e.g. additional payment of **monthly cards**).

All the **payment types** which are possible in the ABACUS are allocated a number (GID: Group Identification) and are set in the rate configuration.

PiP

A **PiP** is "a parking facility within a parking facility" in the DESIGNA system: An additional marked off area (e.g. using SPT 120 and a barrier gate) where the entrance is controlled.

Pre-booking

If the pre-booking option is available in the DESIGNA system, parking facility customers can carry out **pre-bookings**: A planned stay in a parking facility can be booked and paid for in advance via a web application, e.g. at the parking facility operator's website, or via a smartphone **park app**. The **pre-booking** functions are subject to a license and require customer-specific implementation.

Prepaid ticket

A **prepaid ticket** is issued for a set price and is valid until a pre-set exit time on the day of ticket issue. The transient rate can also be the basic rate for a prepayment with a prepaid ticket.

Prepare cards

In order to issue cards in the system, **items** which you wish to offer in your parking facility have to at first be defined. Items are subsequently allocated to a customer, thus **preparing** a card in the system. To finally issue a prepared card to a customer, it has to be **produced**.

The cards are **prepared** in the function *Prepare cards* of the **WinOperate**, i.e. you allocate a previously defined **Item** to a customer.

Produce cards

In order to issue cards in the system, **items** are at first defined and subsequently **prepared** in the system. To finally issue a prepared card to a customer, it has to be **produced**, if necessary at a later date.

The cards are **produced** in the function *Produce cards* of the **WinOperate**, i.e. the data record from **prepare cards** is written onto a paper ticket or allocated to a card at the **System server** (e.g. plastic barcode cards and RFID). From this moment onwards the card is available as a "real" card and can be issued to the customer.

Promotional Codes

In the DESIGNA parking system, promotional codes allow customers to use an **ID medium** (e.g. a barcode or a number code) more than once to enter the parking facility during a specified time period. Promotional codes can therefore be used for temporary special offers (e.g. specially priced parking due to a barcode published in a newspaper).

Promotional codes are defined with specific properties (e.g. valid period, parking facility and max. issue amount) and are stored in the system as **monthly cards**. The preparation of various **monthly parker groups** allows the assignment of numerous rates for a parking facility.

R

Renew

Renewing is a function for **monthly cards**. If a renewing is allowed *Before expiry*, *After expiry* or *Still allowed* for the item, the parking customers can renew their cards at the automatic pay station themselves during these times; before and after the validity of their cards expires.

The payment device must be **online** to carry out renewing in a barcode system.

Replacement ticket/ Manual replacement ticket

A **replacement ticket** is issued as an identical copy of a ticket which is no longer readable (magnetic stripe or barcode no longer readable by the **Multicon**). The replacement ticket is based on the data of the original **transient ticket**.

For this, the data of the original transient ticket is entered at the WinOperate or at the MPS in order to retrieve it from the **system server**: At the MPS this is done according to the ticket's **serial no.** At the WinOperate this is done according to the ticket's serial no., its LPR identification (only optional **LPR**) or according to its receipt no. This way a replacement is issued for the previously issued ticket. Usually, the replacement ticket has to be paid at a pay station before exiting (Exception: a replacement ticket is issued for a just paid transient ticket).

A **manual replacement ticket** can be issued at the WinOperate: For this, the **user** defines the desired data for producing a **replacement ticket**.

The data is created as for an entrance of a transient ticket (date, TCC/SBC and time). This way, a new, unpaid ticket is issued, whose entered entrance data will be valid for its subsequent payment. The manual replacement ticket has to be paid at a pay station before exiting or it can be issued in a way that payment occurs immediately during **production** (at the pay station).

Reservation, With (diverse types of item)

The ABACUS system provides **items with** and **without reservation**:

A certain number of parking spaces are reserved for items **with reservation** in order to guarantee a free parking space (e.g. specially marked spaces). Items **with reservation** are counted separately and can still enter the parking facility even if all the transient spaces are full and transients and items **without reservation** are denied.

The **types of item monthly card, value card and congress ticket** can be assigned with reservation. This is done in *Manage items* of the **WinOperate**.

Reservation, Without (diverse types of item)

The ABACUS system provides **items with** and **without reservation**:

Items without reservation are counted as **transients** by the parking counters, i.e. in a parking facility occupied with transients all subsequent cards without a reservation are refused entrance. The message "Parking facility occupied" appears on the display at the entrance.

Reset

In principle, there is a differentiation made between the following types of **resets** which produce different effects at the devices and in the system communication. A reset is selected from 6 various types of **Reset**.

- **Reset 0**
Reset 0 causes a type of "cancellation": A current payment at an automatic payment system can be cancelled from **WinOperate**.
- **Reset 1:**
Reset 1 puts some TCC/SBC processes in a basic condition.
NOTE: This can cause operating irregularities as device component processes are not put in a basic condition. For this reason Reset 1 is not used in normal operation.
- **Reset 2:**
Reset 2 causes the respective device to be switched on and off like during a "manual" restart. Recommendable for clearing smaller operating faults.
- **Reset 3:**
Reset 3 causes configuration data to be transferred from the **System server** to the TCC/SBC. Part of this configuration data is, e.g., price or group data.
- **Reset 4:**
Reset 4 transfers the executing program for the individual control of a device to the TCC/SBC.
NOTE: A Reset 4 deletes all the existing alarm messages in the TCC/SBC which have not been transferred to the System server.
Before carrying out a Reset 4 use Reset 2 to make sure that all the alarm messages have been transferred (approx. 2 min in advance).
- **Reset 8:**
Reset 8 is only used for service purposes during the new configuration of a TCC/SBC.

Resin-Free Oil

Only use **resin-free oil** to lubricate moving parts.

(Recommended: Ballistol oil spray, DESIGNA Ident. no. 8 815 057 000)

RFID

Radio Frequency Identification (**RFID**) enables the hands-free data registration and customer identification. RFID enables rapid processing (also of various systems, e.g. time recognition and entrance) and is maintenance-free.

An RFID system always consists of data media (**RFID** cards with chip and antenna) and a reading device (antenna and decoder/controller).

Magnetic or electromagnetic fields are used for data transmission.

S

SBC

A **SBC (Single Board Computer)** is used in the ABACUS system. The SBC manages and controls the device functions with the individual program of a device.

The SBC is centrally controlled by the **System server** and identified and addressed via IP addresses. Possible signal conversion for parallel device components (i.e. barriers) takes place via the optional module *I/O interface*.

Serial no.

Each ticket and each card is allocated a precise **serial no.** in the ABACUS system. The serial no. can be used as successive numbers or in 3 blocks.

For **transient tickets** the serial no. is made up of the system no., TCC/SBC no. and the ticket no. It is allocated and printed onto the ticket at the entrance. The serial no. is requested in several functions to locate data sets (e.g. issuing of **replacement tickets** at the MPS or ticket tracking and issuing of replacement tickets at the **WinOperate**). In magnetic stripe systems the serial no. is printed in line 1 of the printed ticket information (standard printing line for the entrance information) or can, according to the (Multicon) **configuration**, be printed in line 8 (extended ticket imprint of the entrance) (also see document "MC 120 TICKETS" (specification of the tickets and their printed areas)). In barcode systems the ticket no. is not numbered consecutively and the serial no. needs to be set as printed in its own line in the Multicon configuration.

For **monthly cards**, **value cards** and **congress tickets** the serial no. is made up of the system no., TCC/SBC no. and the card no. which has been assigned when **preparing** the card. The serial no. of these **types of item** is only printed onto the tickets and cards if this is set accordingly at the WinOperate (*Manage items*) (**never** print onto plastic cards).

Shift manager (also called route man)

The operator is allowed to conduct maintenance, cleaning and filling work with an instructed and basic training skilled **shift manager**. These works are indicated and described in the main chapter *Maintenance* as well as in the maintenance sections of the individual modules.

Shift managers conducting maintenance, cleaning and filling work **inside** the device need to be specially instructed and trained on power supply disconnecting features and on the working steps to be carried out in the device interior.

Special income

Special incomes in the DESIGNA parking system do not relate to parking fees but to other types of incomes, e.g. services such as car washing, parking facility security etc.

System login

Before **WinOperate** can be opened, thus allowing access to the ABACUS system, the **user** has to provide identification. This occurs via the so-called **system login**, a combination of user name and password: A login window in which ID can be entered appears prior to the start. Menu items and functions can be switched off depending on the **login group**.

System server

The **System server** is the PC or the server platform for controlling, monitoring and administrating the parking system DESIGNA.

The operating interface **WinOperate** is installed at the DESIGNA operating work station **WS 120** and communicates via **Ethernet** with the System server. The application WinOperate is located on the actual System server (DBS COMPACT and COMPACT PLUS) for smaller parking facility systems.

System times

In the ABACUS system it is possible to define times as **system times**. These times influence the rate calculation for each facility: e.g. *grace time* (time period by which a rate step can be exceeded before the next rate step is calculated), *lag time* (maximum length of stay in the facility after payment) or *free passing time* (a customer's maximum length of stay in the facility before payment is due at an exit device).

T

TCC

A **TCC** of type SCC or LCC is used in the ABACUS system. The TCC with Linux operating system manages and controls the device functions with the individual program of a device.

All TCC are centrally controlled by the **System server** and identified and addressed via IP addresses. The internal device communication takes place via serial connections. Possible signal conversion for parallel device components (i.e. barriers) takes place via the optional module *I/O interface*.

TCC/SBC address/TCC/SBC no.

TCC/SBC addresses are used in the ABACUS system in order to enable a purposeful transfer of commands and programs and an identifiable data exchange between the device and the **System server**. These are configured according to the device features and are programmed at the **TCC/SBC** (the device and TCC/SBC **configuration** is usually carried out before delivery or by your DESIGNA Service).

The TCC/SBC address set at the TCC/SBC and configured in the System server corresponds to the **TCC/SBC no.** requested in many functions.

Theater rate

The **theater rate** allows you to charge a separate price at automatic pay stations³⁹ for **transient tickets** which enter the parking facility during a certain period, if the payment also occurs in this time period. Customers pay according to a defined price calculation (payment type (GID)) up until the specified exit time.

This ensures that payment can be carried out in advance, e.g. to prevent queues at pay stations after events.

The transient tickets can exit the parking facility until a specified time in the future. If a customer exits the parking facility after this specified time, the transient rate is charged as additional payment.

Ticket medium

In the DESIGNA system, the **ticket medium** stands for the "carrier material" that transports unique data records. The unique data records (card ID) consist of a) the respective authorization (e.g. event ticket, weekly ticket, staff card) and b) the user of this authorization (e.g. customer, event, company, employee).

The ticket medium is linked to a unique ticket ID in the system.

Depending on the medium used by the car park customer for identification at the entrance, automatic pay station or exit, a corresponding system comparison is made to the authorization assigned to the ticket medium. This can be, for example, the **serial number** of a ticket/card produced, the hash code of a credit card, the QR code content, the UIDs of RFID cards or the license plate (for VIP or Ticketless).

Time check: see value and time check**Time slot**

Time slots help to statistically analyze parking processes in the ABACUS system. They are used to divide and record the parked times into ranges. The parking durations can then be displayed with the *time slot statistic* of the **WebReport** application (e.g.: How many transients use 2 or 4 hours as a parking duration?). Up to 50 time slots can be defined.

Token

Token are coins to which a certain value is allocated. The coin validator recognizes certain features of a token the same as it does with coins. Tokens are valued and processed as coins at the automatic pay station (not intended as change).

Tokens can be configured as *value tokens* or as *free tokens (device configuration)*: A *value token* is allocated with a certain cash value. The value of a *free token* is set at the automatic pay station to the same amount as the incurred parking fee, thus allowing free parking.

Traffic jam detection

For **traffic jam detection** at the exits, the system monitors how well the lag time can be observed. This is achieved by continuously determining the average time required by parking facility customers from the pay station to the exit. If this average time and the lag time converge at an exit, the **alarm message** "Traffic jam at the exit" is generated (when the difference between the average time of the last 10 parking facility customers and the set lag time is less than 60 seconds).

It is possible to react to this alarm message by increasing the lag time by 20% at the affected exit via **WinOperate** or it can also be increased automatically by the system: There is a reduced risk of paid tickets losing their **exit authorization**, resulting in further payments due to the jam.

³⁹ Depending on the device configuration, the theatre rate can, e.g., be activated at just one pay station of a parking facility or by selecting it via the lost ticket button.

If the average time and the already increased lag time also converge, the alarm message is regenerated and the lag time can be increased by another 20% at the affected exit via WinOperate or automatically by the system.

The increased lag time remains active at this exit until it is reset to the original lag time at WinOperate or automatically by the system.

Transient

Transients are customers who request a **transient ticket** at the entrance and enter the parking facility with this ticket. After paying the fee (at an automatic pay station or MPS as well as at an exit, see **drive&pay**) the customer can exit the parking facility. The fee depends on the parking duration and parking time.

Transient ticket

The **transient ticket** is issued to the user upon request when entering the parking facility (express entrance: automatically). The parking fee is calculated on the basis of the ticket's entrance data. The fee has to be paid prior to (or while) exiting.

Type of customer

Types of customer can be used in the ABACUS system to divide the master data in *Manage customers* (**WinOperate**) into categories. This ensures that functions can only be available with assigned types of customer for certain **users**.

Type of item

The ABACUS system provides numerous **types of item** (e.g. **monthly cards**, **value cards** and **function cards**) in order to cope with the needs of the parking facility customers.

U

Usage message and drive-through message (graylist)

In the ABACUS system, the **graylist** registers conspicuous cards and reacts to their usage or drive through.

The cards can be allocated the message types **drive-through message** or **usage message**, thus triggering the corresponding **alarm messages** or other set reactions (*Manage cards/ Comments tab, Blacklist & Graylist* in **WinOperate**).

Cards or license plates (only optional **LPR**) entered in the system with the **usage message** trigger the alarm message no. 213 or set reactions when **used** at any device (card insertion at the device or an **RFID** card request).

Cards or license plates (only optional **LPR**) entered in the system with the **drive-through message** trigger the alarm message no. 186 or set reactions when **driving through** an entrance or exit.

These alarm messages (no. 213 and no. 186) are also individually set to ensure that usage or drive through of the card (or e.g. the entrance of a license plate) is displayed as desired (*Set alarm messages* in **WinOperate**).

User

To ensure that only authorized personnel operate the system operating personnel have to register and deregister as a **user** prior to and after working at the **WinOperate**.

Users are registered as customers in *Manage customers* at the WinOperate and are allocated a **system login**. Menu items and functions can be switched off depending on the **login group**.

V

Valet Parking

Valet Parking refers to the parking of vehicles by an employee. The vehicle and the key are left with parking authorized staff (jockeys) at a central drop-off point. A jockey then parks the car on behalf of the owner and, when requested, returns it to the pick-up area. This parking service is offered, e.g., by hotels and airports.

Value and time checks

Value checks are tickets which are used as means of payment in the DESIGNA parking system. A certain money value is assigned to the ticket which can be used as payment at the pay stations and some exits (only **drive& pay**).

In contrast to value checks, a time value instead of a money value is coded onto **time check**. They can also be used as means of payment by reducing the incurred parking duration at the pay station or at an exit.

Value/Time checks can be allocated to, e.g., participating shops by the facility operator in order for these shops to offer their customers reduced parking costs in the interest of customer retention. There are two different ways of charging the participating shops (or similar) for the value/time checks:

- The assigned money/ time value is charged 100% when issuing or
- only the actual amount of money/time used by the customer is charged (e.g. for **overpayment** with value/time checks).

The **device configuration** specifies whether just **one** value/time check can be used as a payment medium at the device or any number of checks.

Some item details can only be checked **online** in the barcode system (e.g. validity). Therefore, barcode value checks are rejected **offline**.

Value cards

Value cards are coded with a certain value (amount of money or time) and subsequently sold to the customers at a set price. The incurred parking fee or time is deducted from the value card when exiting. This has the advantage that the customer does not have to pay at the automatic pay station. The residual value of the card is shown on the display when entering and exiting. In addition to this, the value card can be used to offer the customer a concession by choosing a price which is less than the coded value.

Different properties can be issued for value cards: for example, the validity of the card can be set, a favorable value/price ratio issued or a later **charging** of the value card provided for if the value has run out.

Some item details can only be checked **online** in barcode systems (e.g. validity). Therefore, barcode value cards are rejected **offline**.

W

WebReport

WebReport enables professional statistical reporting of parking data in the ABACUS system. Statistical values are analyzed rapidly, precisely and clearly.

Reporting of:

Time slot statistics, throughput statistics, occupancy statistics, payment statistics, alarm statistics, operating report, cash book, value card balance, rate switch card report, value checks/ time checks settlement, park check report, card lists, customer lists

WinOperate

The **WinOperate** is an easy-to-use graphical Windows® interface which allows the user to check, monitor and control processes in DESIGNA as well as manage system data and present business figures.

The operating interface WinOperate is installed at a DESIGNA operating work station **WS 120**, which communicates via Ethernet with the **System server**. The application WinOperate is located on the System server DBS COMPACT and COMPACT PLUS for smaller parking facility systems.

WS 120 (also work station, operating PC)

The **WS 120** is the operating work station of the DESIGNA parking system which communicates with the **System server** via **Ethernet**. In connection with WinOperate the WS 120 provides extensive monitoring, controlling, administrating and reporting functions. Several WS 120s can be networked and access the data and control of one parking facility.

The application WinOperate is located on the actual System server (DBS COMPACT and COMPACT PLUS) for smaller parking facility systems, a separate PC WS 120 operating work station is then not required.

25 Index

2

2D Barcode scanner 28

A

Accessories 10
 Accident prevention regulations 58
 Initial device testing 58
 Measuring points fault loop impedance 60
 Measuring points protective grounding conductor test
 59
 Adjusting the ticket cutting position 118
 Alarm siren 41
 Automatic circuit breaker 37

B

Banknote cassette 141
 Banknote cassette 155
 Banknote reader 139
 Banknote recycler 39, 138, 154
 Banknote recycler insertion slot 27
 Barrier-free design 11
 Blacklist check 76
 BNR CASHCODE 138
 Banknote cassette 141
 Banknote reader 139
 Cash dispensing cassette 141
 Chassis 140
 Checking and cleaning the chassis 145
 Checking and cleaning the path switch 148
 Cleaning the banknote cassette 151
 Cleaning the banknote reader 144
 Cleaning the cash dispensing cassette 150
 Cleaning the chassis 146
 Cleaning the recycling cassettes and the (multi-)escrow
 cassette 148
 Eliminating a jam 152
 Escrow cassette 140
 Fill and empty 142
 Maintenance work 143
 Multi-escrow cassette 141
 Recycling cassettes 140
 Removing the chassis 146
 BNR MEI 154
 Banknote cassette 155
 Cleaning the banknote acceptor and the positioner 165
 Cleaning the banknote cassette 168
 Cleaning the console 168
 Cleaning the loader cassette 168
 Cleaning the main module 165
 Cleaning the test unit 166
 Cleaning the test unit and the main module from the
 bottom 167

Eliminating a jam 170
 Fill and empty 157
 Filling with banknotes 161
 Loader cassette 155
 Locking mechanism 155
 Main module 155
 Maintenance work 163
 Preparing recycling cassettes for transportation... 173
 Recycling cassettes 156
 Removing and opening the loader cassette 159
 Unlocking and locking the locking mechanism 157

C

Camera 27
 Cash dispensing cassette 141
 Change ticket printer ribbon cartridge 117
 Chassis 140
 Check fan with thermostat 97
 Check heater with thermostat 96
 Checking connecting cables are inserted correctly 119,
 129, 151, 168
 Checking the multicon insertion slot 119, 129
 Cleaning items 86
 Cleaning the barcode scanner 97
 Cleaning the housing exterior 95
 Collecting box value checks 40
 Commissioning 61
 Components inside the device 32
 Components on the door 26
 Connection 50
 Connection intercom device 56
 Consumables 10
 Credit card reader 27
 Customer service 10

D

Decommissioning 179
 Disassembly 179
 Disposal 179
 Door fixture 31
 Door switch 30

E

EasyMove 175
 Electrical technicians 15
 Escrow cassette 140
 Ethernet Connection 54

F

Fan 38
 Filling and emptying 78
 Empty change unit 81
 Fill change unit 78

Remove banknote cassette	82
Full-touch display	28
Function card 05 Fill hoppers	78
Function card 06 Empty hoppers	81
Function card 12 APS alarm ON/ OFF	82
Function cards	77
Function check	62
Check condition of device	62
Check fan	64
Check heater	64
Checking the payment and sorting functions	63
Induce general function and check	62
Prepare lost ticket	64
Test intercom device	64

G

General design	25
----------------------	----

H

Hands-free Identification	174
Hearing induction loop	31
Heater	39

I

I/O interface	40, 104
Assignment of contacts	106
I/O-check	76
ID medium	73
Illuminated frame	28
Installation	44
Device	49
Foundation requirements	46
Location requirements	45
Mounting possibilities	47
Unpacking the device	48
With mounting kit	47
Intended use	11
Intercom device	30
Intercom devices of other manufacture	30
VoIP	30

L

LAN box	39
LCC	98
Maintenance work	102
Replacing the battery	103
Loader cassette	155
Locking mechanism BNR MEI	155
Locking system	27
Lost ticket	40, 75

M

Main module	155
Mains filter	37
Maintenance Schedule	86
Markings	17
Midi-P-USI	104
Monthly cards	69, 72
Multicon	

Filling and emptying services	112
Maintenance services	113
Ticket printer	109
Multicon MC 120	108
Automatic routines	120
Bottom ticket draw-in	111
Clamp attachment	111
Cutter	109
Feeding unit	108
Insert new ticket belt	112
Insertion slot	111
PCB MC 120 mainboard	110
Rear parking position	108
Reset button	111
Test ticket button	111
Troubleshooting	121
Write(/read) unit	110
Multicon MC Barcode	123
Barcode card reader	124
Bottom ticket draw-in	125
Error analysis	130
FBG MC Barcode Mainboard	124
Feeding unit	124
Filling and emptying services	125
Insert new ticket belt	126
Insertion slot	125
Maintenance services	127
Reset button	125
Self test	130
Test ticket button	125
Ticket printer	124
Multi-escrow cassette	141

N

Network components	41
NFC	27
Non-intended use	12

O

Occupational safety	16
Operating instructions	7
digital	7
Operation	65
Additional payment of a prebooking	73
Additional payment of monthly cards	72
Additional payment of value cards	72
Charging value cards	70
Evaluation of discounts	68
Issue of lost tickets	75
Issue parking permissions at the device	76
Payment of transient tickets	66
Recognize error status	77
Renewal of monthly cards	69
Requesting card parameters	76
Residual value disbursement of value cards	71
Trigger functions with function cards	77
Operation safety	19

P

PARK SHOP.....	74
Recode	74
Vending machine	74
PAY BY PLATE	73
Personal protective equipment	42, 45, 51, 85
PINPad	27
Placards	17
Power distribution box	36
Power supply panel connector.....	37
Sockets.....	37
Power supply connection.....	52
Power supply unit	35
Prebooking	73
Product safety labels	17
Protective equipment.....	16

R

Rate switch card	68
Reading device insertion slot.....	28
Receipt	74
automatic printout.....	74
digital	75
printout upon request.....	74
Subsequent printout	74
Receipt printer	28, 131
Clean receipt printer using cleaning strips	137
Cleaning the receipt printer with compressed air ..	137
Filling and emptying services.....	133
Insert new paper roll	134
Issue test printout	135
Maintenance services	135
Optional receipt printer	133
Paper roll	132
Paper rolll	133
Recycling cassettes	140
Recycling cassettes.....	156
Resetting the cutting position to factory setting	118
RFID	28, 174
EasyMove.....	175
Short range systems.....	177

S

Safety11, 42, 44, 50, 62, 78, 84, 102, 112, 113, 125, 127, 133, 135, 142, 143, 152, 157, 163, 169, 179	
Safety messages9, 19, 42, 44, 50, 62, 78, 84, 102, 112, 113, 125, 127, 133, 135, 142, 143, 152, 157, 163, 169, 179	
Safety on site.....	13
Safty standard of device	21
Service	10
Shift manager	15, 152, 165, 169
Spare parts	10
Specialists and operating personnel.....	15
Specialized staff	15
Storage.....	43
Surge arrester.....	37
Switch off automatic circuit breaker	37
Switch on automatic circuit breaker	37

T

TCC	33, 98
Technical data	23
Dimensions and weight	23
Electrical connection.....	24
Operating conditions.....	24
Terminal block -X0.....	38
Terminal block -X1	
Automatic circuit breaker	37
Terminal block -X2.....	33
Connection intercom device	33
Ethernet connection.....	34
Ethernet surge arrester.....	34
Terminal block -X3.....	34
Ticket storage receptacle lost ticket.....	40
Transient tickets	66
Transport	43
Transport inspection	43
Type plate.....	22

U

USB-4-COM	100
-----------------	-----

V

Value cards	70, 71, 72
-------------------	------------

26 Version Overview

Version 1.00 US, 2017-09 (SU)	Creation of the document
Version 1.10 US, 2018-07 (SU)	Update of document
Version 1.10 US, 2022-01 (SU)	Specialists and operating personnel: edited Safety messages and operation safety: edited Components on the door and their functions: edited QR Code camera => 2D Barcode scanner Display => Full-touch display Components inside the device and their functions: DSL modem => Network components Power distribution box: edited Terminal block -X0: Voltage connection: edited Power supply connection (terminal –X0): edited Operation: Pay-by-Plate (optional) and Smart Ticket Shop (optional) added Operation: Paying with credit or debit cards edited Filling and Emptying (also in all modules): new (previously Cleaning and Basic Services) Maintenance (also in all modules): new (previously Cleaning and Basic Services)
Version 1.20 US, 2026-07 (KS)	■ General: Information on the digital user manual ■ Operation: Payment with credit cards and girocards: Receipt printing optionally configurable ■ Operation: Digital receipt printing added ■ Operation: Receipt printing/Automatic receipt printing: Receipt printing optionally configurable; note on WinOperate ■ Operation/ Ticket Shop renamed to PARK SHOP ■ Operation/ PARK SHOP: Recoding added ■ Operation/ Issue individual parking permissions

Subject to technical changes.

The parking system ABACUS is continuously advanced and improved. Please contact your Designa Service about changes and additions to these operating instructions.